



 
Preface	- 1
Packing List	- 2
Appearance and components	- 3
Printer charging	- 4
Roll paper installation	- 5
Folding paper installation	- 6
Basic functions	- 7
Connect to the Bluetooth	- 9
Troubleshooting	10
Maintenance	11

Preface	1
Packing List	2
Appearance and components	3
Printer charging	4
Roll paper installation	5
Folding paper installation	6
Basic functions	. 7
Connect to the Bluetooth	9
Troubleshooting	10


This manual contains information about the product and installation. Before using the printer, please read this manual carefully and observe the use.

### International practice

For your convenience, the following symbols (icons) and conventions are used in this manual:



 This symbol indicates attention, improper use may cause personal injury or property damage.



# Warning

This is a Class A product. In the living environment, this product may cause radio interference. In this case, it may be necessary for users to take practical measures against interference.


### Preface

### About this manual

appearance of the product is intact and check all the accessories. If there is any defect, please contact the dealer!



## Packing List

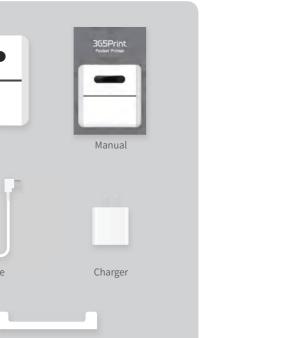

After unpacking the box, please check whether the



# Appearance and Components

Thermal Printheads

Open Button —

Power, Menu Button



# **Printer Charging**


Insert the charger plug into the power socket, and the charger DC plug into the printer charging port. AC:100V~240V(50-60Hz)

# Warning If you use a charger that is not provided or approved by our company, The printer may be damaged.

You can print while charging.


button, open the paper tray.

2. Remove the seal on the printing paper and put the paper roll into the printer in the direction shown in the figure (note the orientation of the

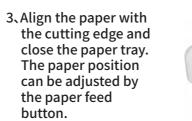

# **Roll Paper Installation**


1. Press the open

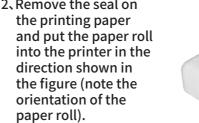




# **Folding Paper Installation**

 1, Make sure that there is no paper in the paper tray and close the paper compart ment cover.



as much as possible).

 

After long pressing the power button to turn it on, short press the menu button to enter the menu mode. In the menu mode, short press the menu button to switch the menu, and short press the setting button to change the current menu item.

### In the "Print yourself" menu item, short press the setting button, the printer will print test pages by category.

2. Print density

1, Print a test page

Basic Function

In the "Density" menu item, you can see the current printing density, short press the setting key, you can switch the printing density [1-8], 1 is the lightest, 8 is the darkest.

### 3、Print speed

Under the "Speed" menu item, you can see the current printing speed, short press the setting key, you can switch the print quality [L, M, H], L is low speed, M is medium speed, and H is high speed.

# 4. Paper type

type that can be recognized for the current printing. Short press the setting key to switch the paper type. CONTINU-

### 6、Reset

In the "Factory Reset" menu item, press and hold the

### In the "Paper Type" menu item, you can see the paper

OUS is continuous paper, and GAP is gap paper.

### **Basic Function**

### 5、Paper learning

In the "Paper Adapt" menu item, short press the setting button, the printer will start feeding paper and automatically learn the paper type. The printer may pause paper feeding during the learning process, and then the printer will feed the paper back and forth again to confirm the paper type until the menu automatically exits to indicate the completion of the learning.

In the "BT MAC" menu item, user can see the Bluetooth

In the "Version" menu item, you can see the version

MAC address.

7、Bluetooth address

8. Firmware version

number of the printer firmware.

setting key until the screen displays "Down", the printer's parameters have been restored to the factory mode, and some parameters will take effect after restarting.

In the "Exit Setting" menu item, short press the setting key to exit the menu and display the main interface.

1, Printer power on. 2. Find the Bluetooth settings in the phone's system to start printing.

1、Turn on Bluetooth in settings. 2. Open the corresponding APP and connect to the printer to start printing.

### Note

four digits of the printer's Bluetooth address, which is used to distinguish the printer.

### Bluetooth connection and Instructions

# Instructions for Android phone

settings, search for the Bluetooth device named 356Print-P3-xxxx, click to connect and enter the pairing password as 0000 or 1234 to complete the pairing. 3. Open the corresponding APP and connect to the printer

### Instructions for iPhone

The suffix "xxxx" of the Bluetooth name represents the last

The printed receipts are blurred in months or even weeks

The quality of the printing paper is poor or the temperature of the environment

The quality of the printing paper is high-quality thermal paper and store it at room temperature. Printer shuts down automatically Low battery Please charge now

Using poor quality printing paper will cause the printer to

# Troubleshooting

Blurred print

Note

print blurry in a short time.

# Cause of Issue Solution The screen displays "Out of Paper" Printer is out of paper cover. Or try the paper learning paper learning function. The screen displays "Lid Is Open" The paper tray cover is not closed properly Close the paper tray cover The paper is loaded upside in the correct direction, or replace the thermal paper. The paper is loaded upside down or the paper is not thermal paper. Reinstall the paper in the correct direction, or replace the thermal paper. Use alcohol cotton The print head is not cleaned to make the print head bright

# Printer usage and storage

it off and store it.

to keep it bright and clean.

1. Please avoid storing the newly purchased printing paper in a place exposed to direct sunlight or high temperature. Please do not tear the wrapping paper when storing.

2. The printed receipts should be stored at room tempera

ture (around 20°C) and protected from light, which can

Maintenance and Maintenance

1. Cleaning the outside of the printer and the paper

compartment: Please wipe the surface of the printer

cloth that has been wrung out. Note that the damp

2. Print head cleaning: Please use absorbent cotton

and the inside of the paper compartment with a damp

dipped in absolute alcohol to gently wipe the print head

3. If you do not use the printer for a long time, please turn

Daily maintenance of the printer

cloth must be wrung out completely.

effectively extend the storage time of receipts. 3、If user receipts need to be stored for a long time, please



365Print

Pocket Printer

choose long-lasting thermal printing paper.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction