



- Content Announcements
 Introduction

- 1. Announcements
 2. Introduction
 2.1 Packing Details
 2.2 Features Overview
 2.3 Technical Specifications
 3. Quick Guidance
 3.1 About Touch Panel
 3.2 Switch On/Off.
 3.3 Power Save Modes and lock screen
 3.4 Battery management and charging.
 3.5 Definition for the icons of the Functions
 3.6 USB HOST Function
 3.7 TF Card Storage
 4. Network Access Network Access by Wi-Fi
 5. Main Functions Introduction
 5.1 Audio Function
 5.2 Video Function
 5.3 Internet Browser
 5.4 APK Installer
 5.5 Camera and Photograph
 6. System Settings
 7. IlWawa Introduction
 7.1 Security Control
 7.2 Content and Management
 7.3 Behavior Restriction
 7.4 Featured Functions
 8. FAQ

1 Announcements

- 1.Please keep the device away from moist and dust. 2.Do not put the device in high-temperature environment,
- 3.Do not drop or strike the device.
 4.Do not shake the device violently, especially the LCD Screen part. Or, it will cause abnormal display on the screen.
 5.Please choose proper volume when using the earphone which will be proof for your ear.

- 6.Please charge the device when
 (1) The power icon shows lowest power.
 (2) The device is turned off automatically, and when you turn
 on it, it is turned off automatically again.
 (3) No response when operating the buttons.
 Attention: Please use the charger offered by manufacturer to
 charge, other charges may causes damage to the device.
 Input: 100-240V ~ 50/60 Hz
 Output: 5V 1500 mA
 7.Do not disconnect the device from PC when downloading,
 uploading or formatting, or it will cause programming errors of
 the device.
 8.Do not dismounting the device privately without professional
- 8.Do not dismounting the device privately without professional
- 9.Do not use alcohol, thinner or benzene-chemical to clean the surface of the device. surface of the device. 10.Do not use the device in forbidden place, like airplane.
- 10.Do not use the device in forbidden place, like airplane.
 11.Please back-up your files in device's memory always. The manufacturer is not responsible for the clear of files after damage or repair of the device.
 12.The manufacture reserves all right of device's technology and design, and will have no obligation to inform the user if there are new versions or designs been developed.
 13.The device is NOT water-proof; please keep it away from water.
- water.
 The turn on time of this device is about 20 seconds; please don't operate the device when it is turned on in 20 seconds.

2 Introduction

2.1Packing Details.
Each unit of Tablet PC has the following items: Tablet PC device*1, charger*1, USB cable*1,OTG cable*1 and user manual*1. All items are packed in gift box.

- Manual 1. All terms are pasked in girl box.

 2. Zefautres Overview

 ♦ CPU: A133, 1.5 GHz. With ANDROID 11 Go operation system.

 ♦ 7' TFT touch panel LCD display, 1024*600 resolution.

 1 66B Nand Flash Memory, support 32GB external TF card.

 ♦ Support Medias playing: Video, audio, pictures, etc.

 Bullt-in Wi-Fi.

 ♦ Various applications are available in the ANDROID11.

 ♦ Support built-in microphone record function (optional).

 ♦ Supports multiple languages.

 2.3Technical Specifications

recimie	ii Specifications		
Screen	7 inch capacitive Multi touch screen, Resolution: 1024*600 IPS		
CPU	Chipset: A133Quad core, 1.5 GHz		
RAM	2GB		
Storage	16GB Nand Flash		
System	Android []		
Network	Wife: IEEE 802.11b/g/u.		
Video	MEPG 1/2/4,H263/H264,RMVB,WMV/VC-LMVC,AVS,MIPEG. (UP TO 1080P)		
Music	MP3,WMA,WAV,OGG,FLAC,ALAC,APE,AAC,AC-3,DTS (seed licesse)		
Pictures	BMP, JPG, GIF, PNG		
PC Connection	Micro USB2.0		
Battery	Built-in Lithium Battany 2800mAh		

3.1 About Touch Panel

The touch screen is capacitive touch screen; you can use five fingers to touch the screen at the same time.

3.2 Switch On/Off.

Switch On and Unlock: When the device is in the OFF mode, press and hold "Power" key for 3 seconds to enter the Android startup progress bar, it need about 20 seconds enter to the system desktop, when the LCD is under locked mode, please press and pull the incomplete in the LCD will unlocked automatically, see the figures below,

[Note] In order to keep the battery working in the best

- 3.3 Power Saving Modes and lock screen.

 ◆ Press the "POWER" key shortly after starting up, system enter to power save and lock mode.

 ◆ Press the "POWER" key or tap the touch screen, system will return to bright in 1 second.

 ◆ The primary operation of the device will not stop under the power save mode, just the LCD is shut and with black screen. For example: playing music, movie, etc.

 ◆ Switch OFF: When the device is in the OFF mode, press and hold the "POWER" key for 3 seconds, the screen will display the power off interface, choose the power off item to confirm, the system will shut automatically.
- the power off interface, choose the power off item to confirm, the system will shut automatically.

 [Note] When the device with low battery it will alarm continuous and shut automatically without charging. If the device can not start up please check if the battery is low, and try it again after the battery is charged.

 3.4 Battery management and charging.

 3.4.1 Charge the battery for 8-12 hours to make sure the battery is fully charged when firstly use.
- is fully charged when firstly use.

 3.4.2 Insert the micro port of the battery adaptor into charging slot on the device, and connect the other side with the power socket. Then the desktop icon of the battery keep rolling which shows it is charging, please wait until the battery is fully charged, don't disconnect the power when charging. Once the battery is fully charged, the lcon on the desktop will stop

- [Note] In order to keep the battery working in the best condition, please pay attention as below:

 ◆ Please don't charge the power in high temperature.

 ◆ No need to release the power for this Li-battery, you can charge the power even there is still some power in the battery, no need to wait it runs out.

 ♦ In order to keep the battery in good condition, please make sure to charge the power once per two weeks if you don't use this device for a long time.

 3.5 Definition for some icons of the Functions

Icon	Function instruction	Icon	Function instruction
	Back to main menu	W 1.1	Note when the system finds new devices.
Ħ	Show current power status	0	Set the alert time
15:20	The current system time	◆)) −	Reduce the volume
	Back	◆ ()+	Louder the volume
1	Menu	::::	Menu for Function Block
Q Google	Google search	•	Adjust screen brightness
1	System clock	7	WIFI on/off
M	New mail	$\bullet \ \Psi$	USB Connection
<i>a</i> 1	+ 0 1	5:35 1	Status Bar

3.6 TF Card Storage
There is a TF card slot in this device, it support reading the files in TF card. Insert the TF card into the card slot in right way, when take it out, just push the TF toward to the inside, then the slot will release the TF card, the TF card will pop out automatically, 3.7.1 Please insert the TF into the card slot in the right side of

- 3.7.2 Don't pull out the card when operating (reading.
- copying), or it may cause date error.

 3.7.3 Don't use the TF card under high temperature condition.

 3.7.4 Keep the TF card far from the liquid and erosive materials.

4 Network Access

Network Access by Wi-Fi
4.1.1 Turn on Wi-Fi, and Press Wi-Fi settings. The device will
scans automatically for available Wi-Fi networks.
4.1.2 Choose the Wi-Fi network that you want to connect to.
4.1.3 Press Connect. Some network may need you input the

password.
4.1.4 On the Wi-Fi settings screen, press the Menu key, touch Advanced, you will get more settings for Wi-Fi.



5. Main Functions Introduction

5.1 Audio Function Enter the music player: In music player mode, double-click the

- Enter the music player. In music player mode, double-click the favorite in the list to play music.

 When no music files in the audio player playlist, the system will automatically load the music files from the card to the audio player playlist after turning on the audio player (the device supported audio file format: mp3, wav, midi, wma). The playlist as shown in the above figure

 If two more songs in the Music playlist area, slide up/down the touch screen to page up/down

 Double-click the favorite in the list to play music.

 Peac the playback progress have a to adjust audio.
- ◆ Drag the playback progress bar to adjust audio

- 5.2 Video Function

 ◆ Click the Video player icon to enter the video player interface, open the video files,

 ◆ The device supported audio file format: MKV. AVI. RM. RMVB. MP4. MOV. VOB. DAT. FLV. 3GP. etc.

5

Click setting icon to the tenter system settings, then you can change wireless & networks, sound, display, location & security, Applications, accounts & sync, Privacy, Storage, language & keyboard, voice input & output, and date & time.
6.1 Wireless & Networks Setting, See item 4.
6.2 Sound Setting. You can adjust Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds, and Hantic feedback

and Haptic feedback.

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

6.3 Display Setting. You can adjust Brightness, Auto-rotate

screen, Animation, Screen timeout.

6.4 Location & Security Setting. In this Setting, you can set up screen lock and device administrators, as well as TF card

password.

6.5 Applications Setting. You can manage applications here, and check storage & battery usage.

Notice: If you want to install applications which are not downloaded from Google Android Market, you should turn on Unknown sources in advance.

Unknown sources in advance.
6.6 Accounts & sync Setting. In this setting, you can manage accounts in the device.

accounts in the device.
6.7 Privacy Setting. In this setting, you can back up data, and reset factory default.

reset factory default.
6.8 Storage Setting. In this setting, you can check storage use and Mount & Erase TF cards.
Notice: Before you fetch out TF Card (if you have inserted TF card), please Unmount TF card first, in case that some applications will arise problems.
6.9 Language & Keyboard Setting. In this setting, you can change the language of system, and choose keyboard inputs.
Notice: If you have installed an input and you want to use it, please remember to turn on it in this setting (All inputs could be turned on here). Long Press the blank where you want to type, there will be pooput to choose inputs.

there will be popup to choose inputs. 6.10 Date & time Setting. In this setting, you can adjust date and

Then (Wa App Store 6 Browser Calculator

2.Websites Filtering
When children use the Internet browser, it will automatically block the websites without parental permission.

Rest	ricted	Ollimited	O Prohibited	Ade
(a)	Disney Junior	e com/deney-junior		❷:
(a)	Smurfs http://www.amarf.o	en.		❷:
(a)	The Garfield Sho			∅:
4	Toy Story	dianey.com		❷:
(a)	Twenty Four Sev	en Science shallofscience pro/kidsite		❷:

7.2 Content and Management
Provide children with rich applications resources, and use tools
to manage applications, video, music and other content.
1.Applications Recommendation
Recommend with educational games and other applications
which are suitable for kids. Recommended content is regularly
updated and can be downloaded for free. 8

2.Multimedia Management Children can open "Video" application in the children desktop and see all good movies selected by parents; similarly, children can open the "Gallery" and "Music" application and see pictures and listen to songs which are previously prepared.

feon Photos(0)	₽:
Triata inside management conc.	
Public Photos(87)	
[reternal storage]/COM/	1.00
leon Music(2)	
pramed storage()/Waves-Users-News-Musics	₩:
Public Music(1)	n:
	U:
leon Pictures(E)	P1 :
Internal storage() Works Cheru-Searc/Scharge/	₩:
Public Pictures(0)	n:
[revol const/Potent/	U:

All purchases require parents' confirmation by entering the password. Prevent kids' unexpected consumption from

∅:	Parents can break time.l
0:	when time is to protect th
☑:	
0:	← Time Limit
⊠ :	Whole week
D :	Whole week

7.3 Behavior Restrictions Restrict kids' behavior by iWawa, kids can not disturb the parents'desktop any more, unexpected consumption and games addiction could be effectively avoided. mission of parents, children will not be able to exit

the child desktop. Not only ensure that kids stay in a safe environment, but also ensure that kids do not have access to parents' desktop applications. Actions

clicking wrong buttons.

1.Time Limit n net a timetable for kids to use tablet and have a e.lt will automatically be transferred to break time is up, and tablet is temporarily unusable. It is flexible the kids' growing environment.

2 Behavior Report The system automatically produces detailed reports of applicathe system automatically produces detailed reports of applica-tions usage which record kids'behavior on using various applications and the frequency. In this way, parents can easily understand kids' habits and preferences.

10

7.4 Featured Functions Provide more practical and convenient features for children

3



A tablet can set up more than one account. Each child can have their own separate desktop.



3.Prolong Time Quickly
Parents can enter a password to prolong 30 minutes for kids, and deal with some unexpected conditions easily.



Placing music video files to the specific path of storage, the system automatically recognize the files which makes you see them in the menu interface, click to enjoy music video. MKV video formats files are available to support switching freely between the original and Karaoke. Karaoke it is! Follow the video and subtitles to sing along.

8. FAQ

1.How can I change languages if I mistakenly choose an

1.How can I change languages if I mistakenly choose an unknown language?

• Find setting icon ☑ in Menu Page to enter Settings.

• Then, choose icon ☑ to enter language & keyboard setting, the first option is language setting.

2.I already installed some applications, but I can not find them now, why?

• In some conditions, by default, some applications are installed in external TF card, so if you fetched out the TF card from the device, you will not see these applications.

3.The machine can not be turned on.

3.The machine can not be turned on Check the battery and charge it if there is no power. Connect the machine to Adapter.
 Contact the seller if the machine still can not be turned on

Contact the seller if the machine still can not be turned on after charged.

1.There is no voice in the earphone.
 Check if the device is in Mute mode.
 Check the volume setting in case it is 0.
 Check the connection of earphone.

2.Why I can not install applications?

Please check Settings – Applications, make sure Unknown sources is chosen.

♦ When no video files in the video player playlist, the system will automatically load the video files from the card to the video



- ♦ Click on the applications tab to display all applications,then click "take photos" or "camera shooting " into the shooting
- ◆ Click on button to start or end shooting. ◆ The photographs or video can be previewed in the preview ◆ If you want play the video you shooted ,turn on the video
- player and choose which video you want to play.

 If you want to see the photograph you taken,turn into the photo model,and choose which pictures you want to see.

6. System Settings

5.11 About device. Check device information. 7 iWawa Introduction

7.1 Security Control
Separating contents which are not suitable for children and protecting kids' physical and psychological growth, parents can filter the contents which need to be blocked.

1.Applications Filter
Select appropriate applications for kids, and block inappropriate contents like bloody and violent content. Only selected applications will be showed up in children's desktop.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

13