

For use with the listed garage door openers manufactured (TABLE BELOW). The garage door opener activates when the programmed button on the remote control is pressed. The remote control can activate a garage door opener.


**Make sure the garage door opener has a working light bulb because it is a programming indicator.**

**WARNING:** This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)


**Package includes:**



A27 battery

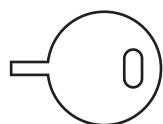


Programming safety pin

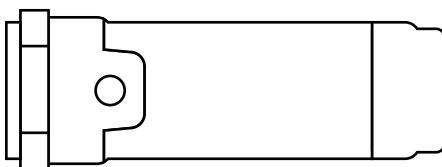

Remote control


## PREPARE

Locate the **LEARN BUTTON** on the garage door opener. NOTE: Your garage door opener may look different.

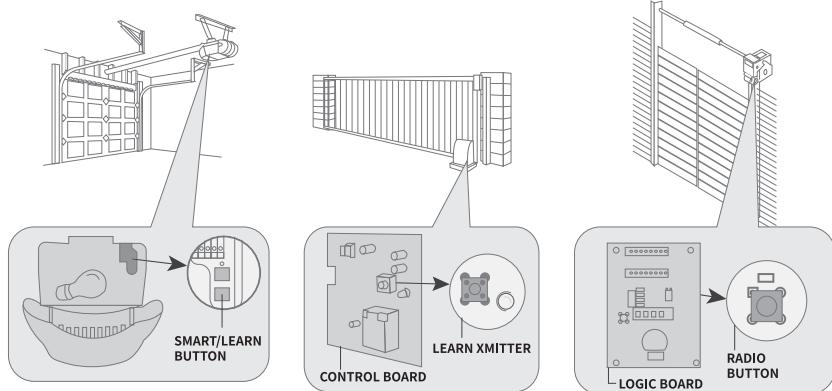


Locate the **PROGRAM BUTTON** on the remote control.

Locate your model of garage door opener in the table below to determine the number of button presses needed to program the remote control.

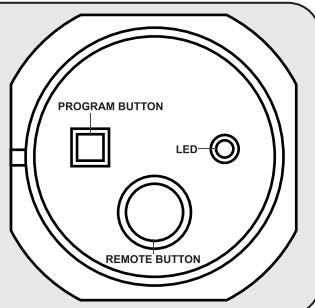


## PROGRAMMING THE REMOTE

**1** Using the provided safety pin, press and hold the **PROGRAM BUTTON** on the remote control until the **LED** on the front of the remote control turns on. This mode will last one minute.

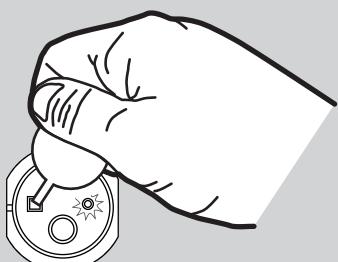

**2** Press and release the **REMOTE BUTTON** the number of times that corresponds with the garage door opener type:

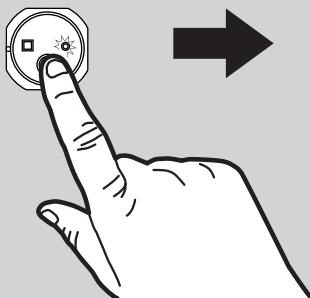


Number of button presses needed	Brand	Type/Color of smart/Learn
1 time	Linear	MegaCode 1997-current 318 MHz
2 times	Chamberlain	Orange+red button 1997-2005 390MHz
3 times	Chamberlain	Purple button 1999-2009 315 MHz
4 times	Billion code	Green button 1993-1996 390 MHz
5 times	Genie Overhead Door	Intellicode 2005-current 315 MHz
6 times	Genie Overhead Door	Intellicode 2005-current 390 MHz
7 times	Chamberlain	Yellow button 2011-current 310 MHz

**3** To exit programming mode, press **PROGRAM BUTTON**.




**4** Press and release the **LEARN BUTTON** the garage door opener.

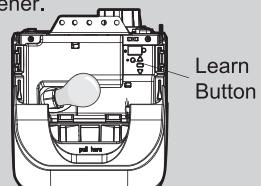


The Learn LED will light. Within 30 seconds...

**5** Press the **REMOTE BUTTON** programmed in step 2 until the garage door opener lights flash or two clicks are heard.

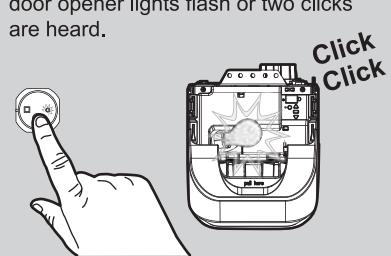

**6** To test, press the **REMOTE BUTTON** on the remote control...

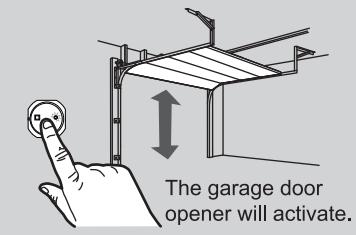


## INSTALLING REMOTE CONTROL ON HANDLEBAR

[1] Insert remote control into an unwrapped road bike handlebar end. Use a gentle twist motion that allows the remote control to be inserted fully and securely. Do not tap the remote control with a plastic mallet or similar tool when inserting it.


[2] Remove the release back sheet from the handle holders, and then install them to the handlebar. There are two handle holders that differ in shape. Attach (A) on the top.

[3] Attach (B) to the bottom and hold both tabs firmly to secure the adhesive onto the handlebar. If the double-sided tapes have diminished in adhesive strength after replacing the handle holders etc., cut some store-bought double-sided tape and replace them with a 15mm x 10mm stripe. Wrap handlebar with handlebar tape, starting from the holder to the top of the handlebar to ensure final security of the remote control.


[1]

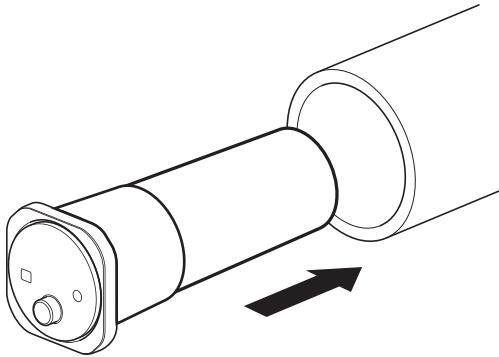

[2]

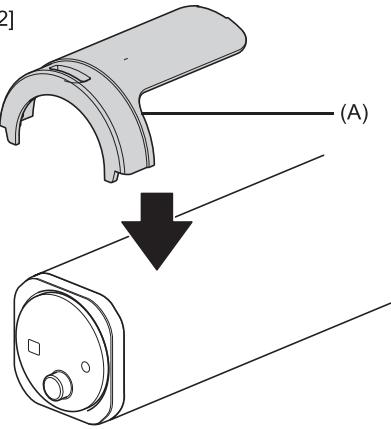


[3]

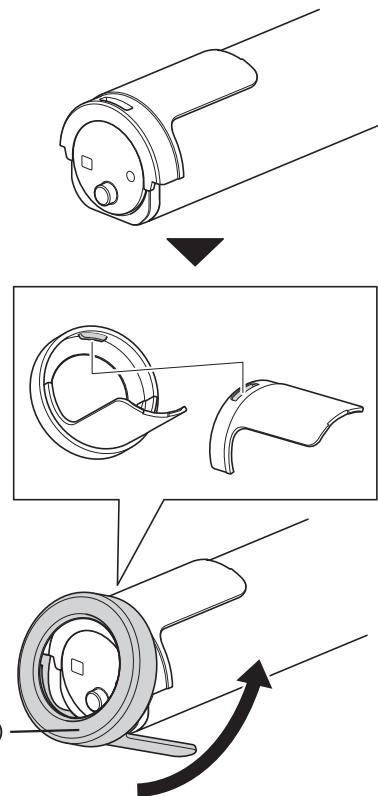


## HOW TO USE THE REMOTE CONTROL

Press and hold the **REMOTE BUTTON** down until the door or gate starts to move. Installations and conditions vary, contact an installing dealer for more information.

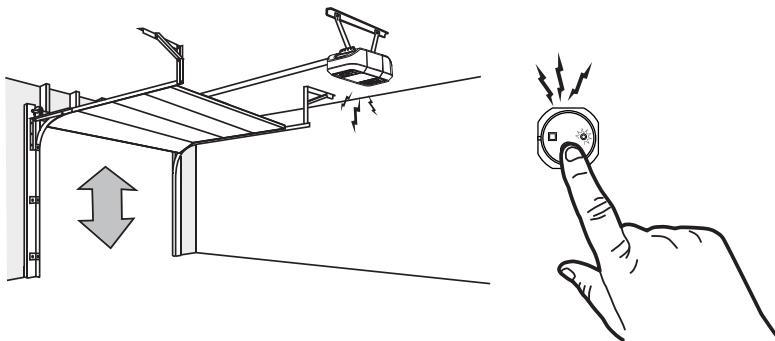

## BATTERY

The **LED(s)** on your remote control will stop flashing when the battery is low and needs to be replaced. To replace battery, open the case as shown. Unscrew end cap counter-clockwise to expose the battery tray. Insert battery positive side up(+). Replace the battery with only A27 battery. Dispose of old battery properly.

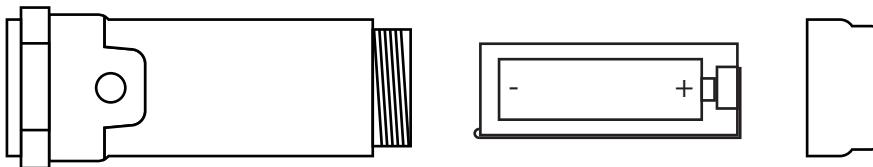

## WARRANTY

### ONE YEAR LIMITED WARRANTY

Twelve Speed Products warrants to the first consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

### WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries
- If battery is swallowed, immediately notify doctor.
- Replace ONLY with A27 battery
- DO NOT recharge, disassemble, heat above 212°F (100°C) or incinerate