

FB-R303 User Manual


Retro Radio Speaker

User Manual

Type-C Charging Cable

Location of Controls

- 1) ON/OFF
- 2) Type-C Charging Port
- 3) Charging Indicator
- 4) USB Port
- 5) AUX Jack
- 6) MODE
- 7) Previous Track / Rewind
- 8) Play/Pause
- 9) Next Track / Fast Forward
- 10) FM Antenna
- 11) BT / AUX Indicator
- 12) Volume
- 13) FM / USB Indicator

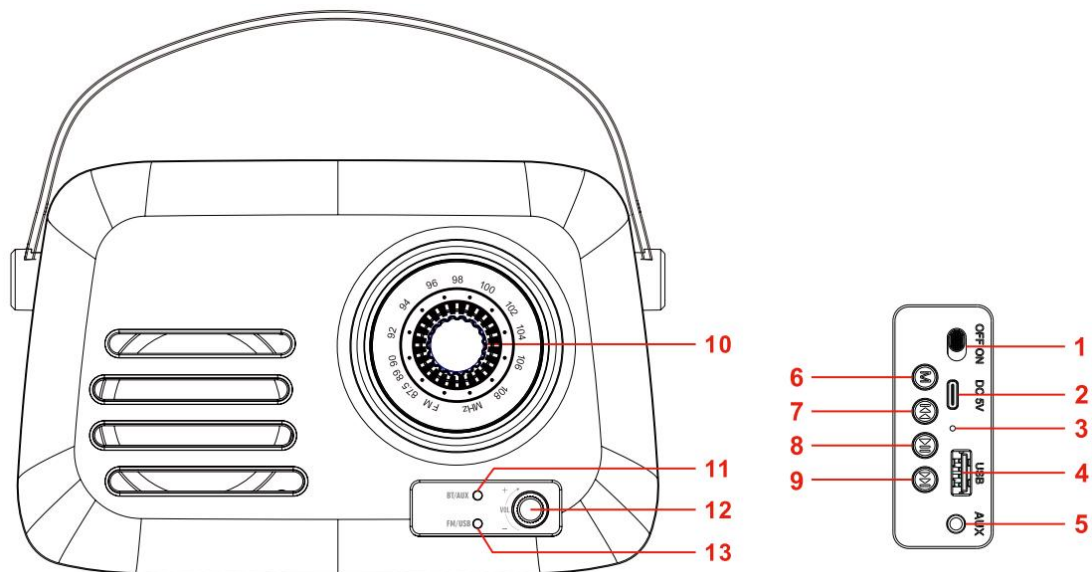

Before first use:

Insert the small connector of the Type-C Charging Cable into the Charging port(2) on the back of the speaker. Insert the large connector into the USB port on a computer, USB charging device, or 5V USB adapter and plug into a wall outlet.

The LED indicator (3) will turn RED while charging and go off when fully charged. On low power, a tone will be heard, indicating that the speaker needs to be charged.

Basic Functions

Bluetooth Operation

- 1) Power control: Push the power button (1) to turn on or turn off the speaker. A sound will be heard indicate the speaker is on.
- 2) Turn on the BT function on your external BT device then search on it for the Bluetooth device with the name **"FB-R303"** and choose it to pair and connect.

Using USB playing

Insert USB drive to USB port (4) to play music stored on the drive and the speaker will play music automatically.

Using with a Wired Device

To use the speaker as a wired device, plug one connector of the 3.5mm audio cable into the 3.5mm auxiliary audio input jack (5) on the speaker. Plug the other connector into the headphone jack of your media-playing device. While connected, playback is controlled via the wired device.

MODE

Press button (6) to toggle between modes: BT, AUX, USB and FM.

The BT/AUX indicator (11) will flash blue light quickly in BT mode and will keep the blue light after connected. It will flash red light slowly when playing music in AUX mode.

The FM/USB indicator (13) will flash blue light slowly when playing music in USB mode and will constant red light in FM mode.

Previous Track / Rewind

Short press button (7) to move back through the playlist.

Long press button (7) to rewind the song.

Play / Pause

Press button (8) to play or pause the music.

Next Track / Fast Forward

Short press button (9) to move forward through the playlist.

Long press button (9) to fast forward the song.

Using FM

Turn the knob (10) to tune the FM stations.

For Volume adjustment

Turn the volume knob (12) to adjust the volume.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.