CONTENTS

- 01. Product Introduction
- 02. Product parameters
- 03. Usage
- 04. Precautions
- 05. Fault treatment

01. Product Introduction

The inner liner of the product uses 304 stainless steel, a new explosion-proof steam exhaust structure, multiple protection devices, safe and reliable.

Add the right amount of water to the inner liner of the fumigator to generate steam after heating, and then deliver it to the fumigation equipment through the conduit.

The product is designed with LED digital display, touch control buttons, infrared remote control, timing fumigation, steam size adjustment function, convenient and flexible.



The three digit LED display screen alternately displays the gear of time / temperature

Adjustable range of temperature gears: P01-P15. Heating working time adjustable range: 1-60 minutes.

02. Product parameters

Model: TY-XZ11

Rated Voltage: 110V~ 220-240V ~

Power Rating: 1000W Rated Frequency:50/60Hz Product Size: 240*205*248mm

03. Usage

1. Fumigators



Remove the fumigator and place it in a flat dry place



Open the lid counter-clockwise Take out the items inside



Add 2-2.2L of water



Lock the lid clockwise
Pipe insertion into steam outlet



Water level is prohibited to exceed 2-2.2L

2. Connected with fumigation equipment

Connect to the fumigation equipment according to the diagram, and when connecting to the fumigation equipment, the steam pipe is careful not to fold to the blockage

When using, pay attention to keep enough safety distance from the high temperature part to avoid scalding.





- 1. steam inlet pipe (long); 2. joint nut; 3. bend joint direction 4. steam outlet pipe (short); 5. steam outlet
- 4. steam outlet pipe (short); 5. steam outlet

Vapor outlet and the body to maintain a safe distance of more than 30CM, please pay attention to avoid high temperature burns!



FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.