
Scan here to contact us [24Hrs Online]



https://geonfino.afterservice.vip

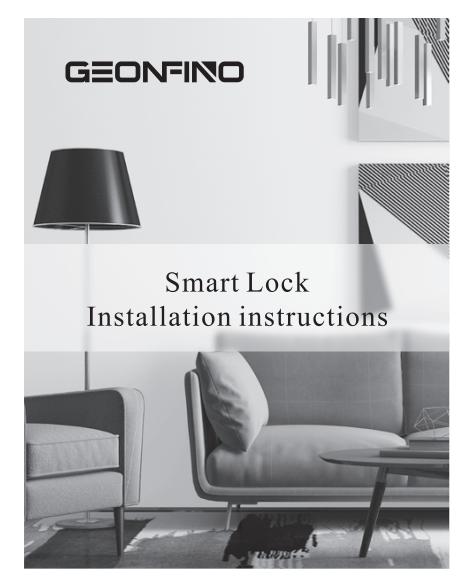











PASSWORD

FINGERPRINT

APP

RFID CARD

BLUETOOTH


Please keep and read this instruction manual before installation, we also prepared an instruction video to help on Amazon Page. If you need further assistance, please contact Customer Service by email: geonfino@afterservice.vip



Table of Contents


- <1> Installation Guide
- <12> How to Use
- <13> Programming Instructions
- <15> App Guide
- <26> Gateway Management
- <27 > Low Power/Emergency Power
- <28 > Factory Default Settings
- <28> Restore Factory Settings
- <29> Troubleshooting
- <30> FCC Warning
- <31> About GEONFINO


Installation Guide

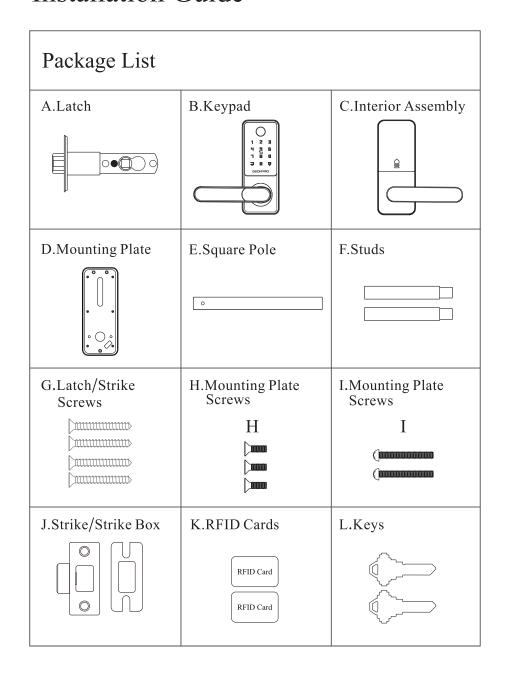

1 Prepare the door and check dimensions

A Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70 mm).

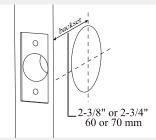


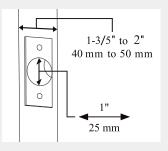



Measure to confirm that the hole on the edge of the door is 1" (25mm). And measure to confirm that the door is 1-3/5" to 2" (40 mm to 50 mm) thick.


2 Install the latch and strike

 
A Hold the latch in front of the door hole, with the face of the latch flush against the door edge.

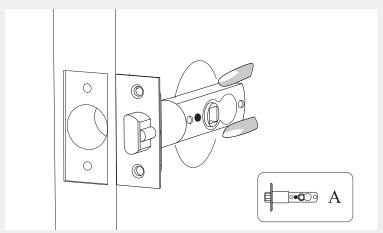

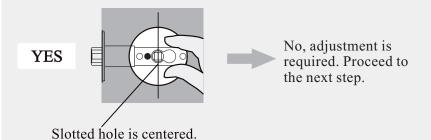


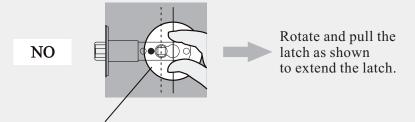





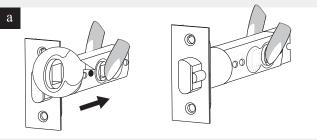



Slide the slot to the right as shown

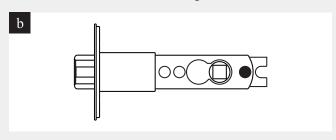

 


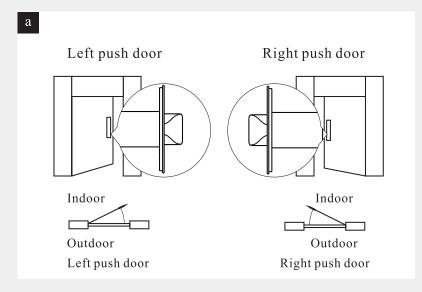

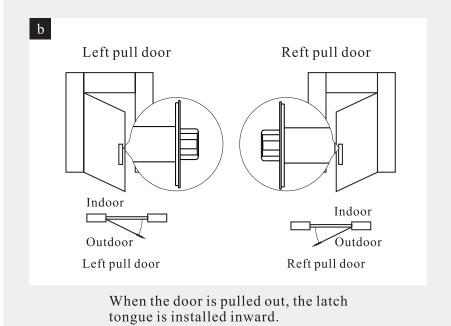

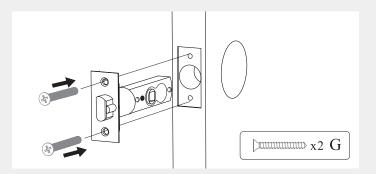

D

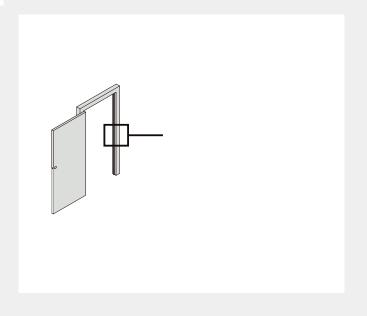



3 Confirm the direction of the door


⚠ Look at the door from OUTSIDE

Left Hand Door


Right Hand Door

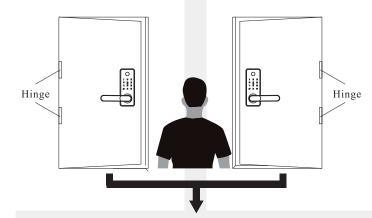

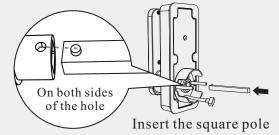


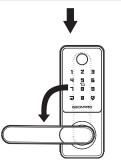


Rotate the front handle 90° to the left.

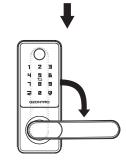


Rotate the front handle 90° to the right.

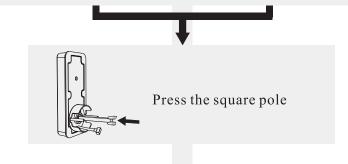


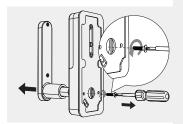


Unscrew the rear handle screw as shown in the picture and remove the rear handle.

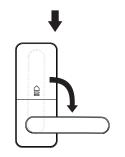


Rotate the rear handle 90° to the right.

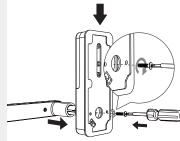

Install the rear handle as shown.

 


Rotate the rear handle 90° to the left.

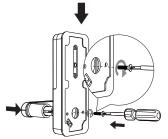


Install the rear handle as shown.





If you change the handle in the wrong direction, please follow the instructions below.

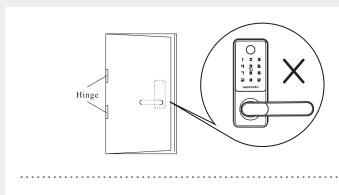


Grab the square pole and pull it outward

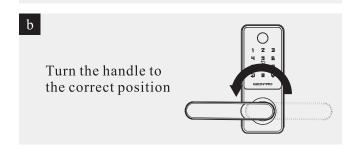


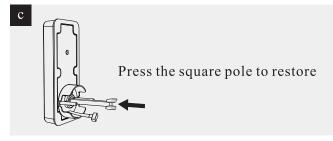

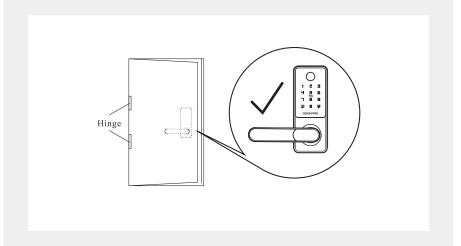


4 Install the keypad

 

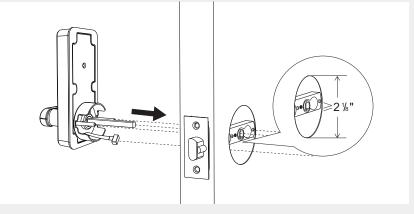



Install the keypad directly

5 Install the interior assembly

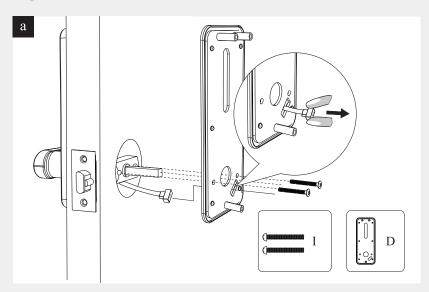


The data cable passes through the mounting plate as shown in the figure above, the square pole passes through the round hole of the mounting plate, and then fix the mounting plate with screws.

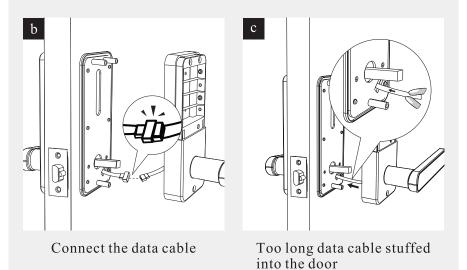

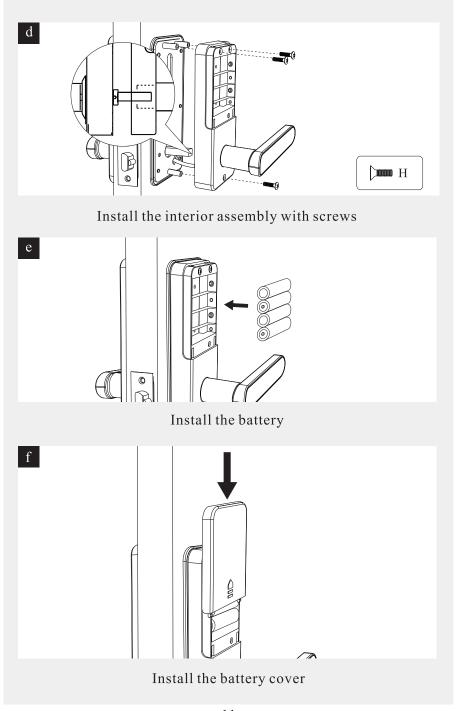

How to Use

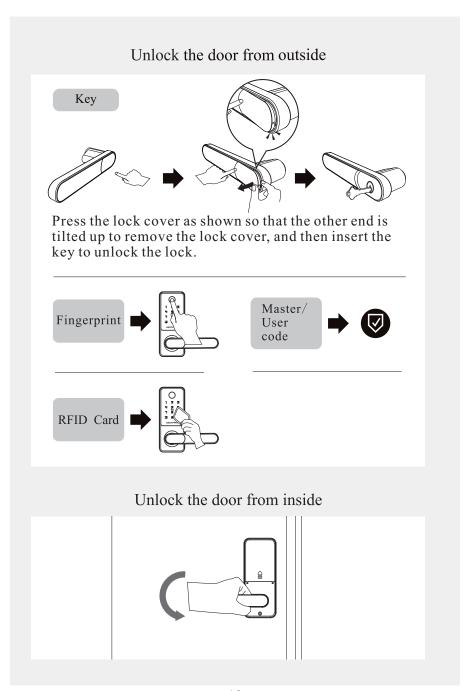



Via app

Click "• "to unlock the door from outside or inside.

Note: Please keep your phone near the door lock within 32.8ft (10m).

Programming Instructions

Information & Safety warnings

- Protect your User Codes and Master Code.
- Protect your key. It is suggested to put it outside the door, such as your car.
- Restrict access to your lock's interior assembly and routinely check your settings to ensure they have not been altered without your knowledge.
- This lockset is designed to provide the highest standard of product quality and performance. Care should be taken to ensure a long-lasting finish. When cleaning is required, use a soft, damp cloth. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing.

MPORTANT: Do not load batteries until the lock is completely installed.

Definitions

Master code

Required for programming and feature settings. Master code can be used to unlock the door in vacation mode. The master code needs to be changed before programming.

The property owner/manager should keep this information confidential.

- 1. Master Code (6 to 8) digits: The default Master Code is 123456. It is required that you change it to a code of your own before programming.
- 2. User Code (6 to 8) digits: A total of 200 User Codes can be programmed.

Wrong entry limit

After entering a failed code 5 times, the unit will shut down for 5 minutes.

Unlock with fake code

The user can prevent the exposure of the PIN code to strangers by entering random digits before or after the correct PIN code.



App Guide

A Download app "TTLock"









Android Mobile Phone--Search "TTLock" in Google Play. Apple Mobile Phone--Please search "TTLock" in App Store.

B Register a new account (phone number or email)



