

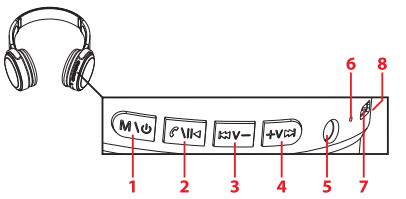


(Fold Inward) — — — — ➔

(Back Cover)

(Front Cover)

<p>TF Card Input Insert a micro SD/TF card into the TF card input port on the headphones.</p> <p>Change input modes until you enter TF card mode. The headphones will automatically begin playing music off the device.</p> <p>In TF card mode, control playback with the controls on the headphones.</p> <ul style="list-style-type: none"> Press the ⏮ button to pause and resume playback. Press the ⏪ and ⏩ buttons to skip tracks. <p>Phone Calls When connected to a phone via Bluetooth, phone functions can be used on the headphones.</p> <ul style="list-style-type: none"> Press the 📞 button to answer an incoming call. Press again to end the call. Press + hold the 📞 button to reject an incoming call. 2x Press the 📞 button to redial the last outgoing number. 	<p>Compliance Information</p> <p>FCC Information This device complies with Part 15 of the FCC Rules.</p> <p>Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>WARNING: Li-ion Battery Inside This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).</p> <p>Rating Label Definitions</p> <ul style="list-style-type: none"> Direct current symbol. This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. This symbol signifies and denotes that this equipment has battery charging which complies with California CEC and energy efficiency. Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology. 	<p>Warranty Information</p> <p>90-Day Limited Warranty Southern Telecom, Inc.</p> <p>LIMITED WARRANTY TO ORIGINAL CONSUMER This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:</p> <p>To obtain warranty service:</p> <ul style="list-style-type: none"> Visit our customer support portal www.customersupport123.com and select "Support." Select the brand. Fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request. <p>Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.</p> <p>Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.</p> <p>NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, OR OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, EITHER BEFORE OR AFTER THE ORIGINAL PURCHASE PRICE. ALL DISTRIBUTORS SHALL BE RESPONSIBLE FOR THE EXCLUSIVE REMEDIES OF THE CONSUMER, AND EVENTUALLY, DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY PERSONAL, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS SET FORTH HEREIN. NO OTHER WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOING. CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.</p> <p>All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.</p> <p>Designed in US Printed in China v1.06-2022</p>	 <p>colorways Glitter Queen Wireless Headphones</p> <p>Instruction Manual</p>
---	---	---	---

<p>Before You Begin...</p> <p>READ CAREFULLY AND KEEP THIS MANUAL</p> <p>Customer Support For any questions or problems with your product, please visit our website at customersupport123.com.</p> <p>Caution To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.</p> <p>THIS DEVICE IS NOT A TOY. do NOT allow children or pets to use or play with this device.</p> <ul style="list-style-type: none"> Do not disassemble, modify, or repair the device. Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions. Do not submerge in water. Low power may cause poor Bluetooth connection or sound distortion. Do not overcharge battery. If using with a USB adapter, make sure the adapter is not damaged. Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc. The headphones contain a built-in battery that should not be disposed of with regular household waste. Follow all local laws and regulations in disposing of this device. <p>In the Box</p> <ul style="list-style-type: none"> ARBTHGLTRPK - Wireless Headphones (x1) Micro-USB Charging Cable (x1) 3.5 mm AUX Cable (x1) User Manual (x1) 	<p>Location of Controls</p>  <ol style="list-style-type: none"> M Button: Press: Change input mode Press + hold: Power ON/OFF ⏮ Button: Press: Play/pause, answer/end call 2x Press: Redial last outgoing number Press + hold (2s.): Reject incoming call ⏪ / ⏩ Buttons: Press: Skip tracks Press + hold: Adjust volume AUX Port LED Indicator Micro-USB Charging Port TF Card Slot (not pictured) 	<p>Getting Started</p> <p>Charging the Headphones Plug the small connector of the supplied micro-USB charging cable into the charging port on the headphones. Plug the large connector into a USB power source, such as the USB port on a computer, or a 5V USB wall adapter (not included).</p> <p>The LED indicator will light up RED while charging and turn OFF when fully charged.</p> <p>When the headphones are low on power, a tone will be heard indicating that they need to be recharged.</p> <p>Powering ON/OFF Press + hold the M button to power ON or OFF. A tone will be heard, and the headphones will enter Bluetooth pairing mode. They will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.</p> <p>Adjusting Volume Press + hold the ⏪ / ⏩ buttons to adjust volume. You can also adjust volume with the controls on a connected device.</p> <p>Changing Input Modes Press the M button to switch input modes. You must have an AUX cable connected or TF/micro SD card inserted to switch to AUX or TF input mode.</p>	<p>Bluetooth Pairing</p> <ol style="list-style-type: none"> Power the headphones ON. A tone will be heard, the LED indicator will flash BLUE, and the headphones will enter Bluetooth pairing mode. Set your mobile device to search for Bluetooth devices. When it appears, select ARBTHGLTRPK from the list of found devices. After a successful pairing, a tone will be heard, the LED indicator will turn solid BLUE, and you will be able to play music on the headphones. <p>In Bluetooth mode, playback and volume can be adjusted by the controls on the headphones, or by the controls on a connected device.</p> <ul style="list-style-type: none"> Press the ⏮ button to pause and resume playback. Press the ⏪ / ⏩ buttons to skip tracks. <p>Using the 3.5 mm AUX Input Insert one connector of the included 3.5 mm auxiliary cable into the 3.5 mm auxiliary input port on the headphones.</p> <p>Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device. Note: Some devices may require an adapter (not included).</p> <p>Switch input modes until you reach AUX mode.</p> <p>In AUX mode, all playback will be controlled by your connected device.</p> <p>Instructions continued on the next page.</p>
---	--	---	---