 


## Bluetooth microphone Manual

### I. Buttons Operation

1. "ON/OFF" button: Hold: ON/OFF Press: Mode switching
2. "MP3" button: Press: the previous song under MP3 mode. Under selfie mode, press it to enable selfie function (only for IOS system mobile phone)
3. "MP3" button: Press: the previous song under MP3 mode. Under selfie mode, press it to enable selfie function (only for Android system mobile phone)
4. "FM" button: Press: Play/Pause. Under FM state, hold it for automatic search
5. "MIC" button: Press: Mike ON/OFF Hold: Replay function under TF card play mode
6. "+" button: Increase volume
7. "-" button: Decrease volume



### II. Wireless Karaoke

1. Supply power: Hold "ON/OFF" button to start the product.
2. Wireless connection: enable the wireless of mobile phone, click to connect, successful connection if prompt tone is produced.
3. Adjust sound: adjust the sound volume of mike and the reverberation to suitable level.
4. Start Karaoke

### III. Recording with mobile phone

1. Connect the recording wire: insert the MICRO plug of the recording wire into the MICRO interface of Karaoke Treasure, and the 3.5mm interface into the earphone jack of the mobile phone.
2. Open the Karaoke software in the mobile phone, such as: USING, Kugou Music or other recording APPs, select your favorable song, record the song according to the above mentioned singing method.
3. Test and save the song: operate according to the instructions of Karaoke software.

### IV. Selfie function

1. Press the "MP3" button to switch from wireless mode to selfie mode.
  2. Enable wireless in the mobile phone, search "shutter", click connection;
  3. Open the photograph interface of the mobile phone, press the "MP3" or "MP3" button to take photos.
- Note: 4.2.2 or higher version for Android system, 6.0 or higher version for IOS system, it doesn't support other versions temporarily. It doesn't support the mobile phone which has the independent and solid photograph button.

### Technical Parameters

- Output Power: 5W
- Max Sound Pressure Level: >115DB 1KHZ TDH < 1%
- Frequency Range: 100HZ-10KHZ
- Reverberation Mode: sound effect reverberation
- Power Supply: Built-in 18650 Li-battery
- Battery Capacity: 1800mAh
- Charging Power: DC5V

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.