



User's Manual

Unboxing Check

Thank you for purchasing our products, please read the instruction manual carefully before use. Instruction manual contains necessary safety advice and use instructions, follow the instruction manual to operate in order to avoid damaging the product for misuse. Check whether the product is damaged or not when you receive the product.

Warning

1. The power supply electric source for the product ,that is Mobile phone fast charge adapter, need a mobile phone Fast charge adapter (QC 3. 0) with 9 V 2.5 A / 12 V 2 A above current voltage output, absolutely cannot use ordinary USB 5 v adapter or charging power supply equipment for power supply, or it will cause abnormal reaction such as the light display abnormally , the product can't wireless charging or charging is very slow, or Some electronic components of the product are damaged and function is abnormal.

2.Please use the data cable with the Type C interface that comes with this product, Do not allow to use any type C interface of the ordinary power cord in your home, otherwise it will cause the product is not powered, or the product is not powered normally, which will cause the product function is not normal, (Because the ordinary type C power cord may not be able to transmit data to the product, and the power carried by the ordinary power cord is very small, resulting in no power supply of the device, or abnormal operation of the device after power supply, resulting in equipment damage). If the product comes with Type C interface cable Lost, need to use a mobile phone fast charger of Type C interface with data transmission power cord, then can be normal use, Do not use the toy manufacturer's normal Type C power cord to power this device.

3.The maximum size of the phone is 7.9 inches, if over the size then the phone cannot be placed for wireless charging


1

Product operation mode:

Product buttons operation + TuyaSmart APP operation

Product accessories:

1. the Product: 1 pc USB cable: 1 pc User's instruction: 1 pc

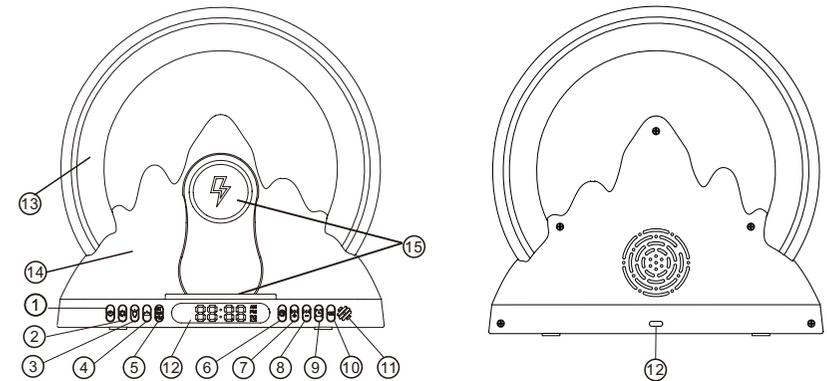

Product function buttons:

- ① This button is the switch of circular lamp that has different dynamic lighting effects, each time you press will be in a dynamic lighting effects, Every press have to wait a second, and then it's will show complete lighting effects.
- ② This button is circular lamp switch different dynamic lighting effects, each time you press the in a dynamic lighting effects, Every press a second-class after a few seconds to show complete lighting effects.
Button operation: each time you press will shows the different dynamic effects , long-press this button 3 seconds can close circular light.
- ③ This button is to control the different static circular lamp lighting effects, each press, the lighting effect will change. Lighting Effect: 7 fixed color mode + Light off
Button operation: each time you press will shows a static lighting effects, 7 static light mode buttons + light off, Circular display
- ④ This button is to control the mountain lamp lighting effects, each time you press, it'll change the different fixed color mode of the light, 7 fixed color + 1 dynamic color gradient + light off.
button operation: each time you press the light will change a static lighting effects, Circular display, long press the button 3 seconds can be individually closed mountain lights

2

- ⑤  This button is the switch of different music mode, **BT** is bluetooth music mode
 is sleep help and relaxation music mode (10 help sleep relaxation music).

FM is radio mode

button operation: each time you press it then will change a stereo mode, long press this button 3 seconds can searching for radio again.

1) enter the BT bluetooth music mode, there will be a voice prompt, after the voice prompt, open the bluetooth on the phone automatically/manually, to Search signals and find **BR18**, click to connection, and then through mobile phone music APP to play music..

2) enter  a sleep help and relaxation music mode, there will be 10 relaxation songs turns looping

3) into **FM** radio mode, first open the antenna extension, will automatically search radio station, digital screen according to the Numbers

Order quickly jump searching, for every search, will have the short time the show sound, then it's will search for next radio station. after the final search, will come

back to the first show, need press the " + " " - " buttons to change the program

Tip: open the antenna extension, The number of programs found depends on:

A. weather conditions: when the weather is good, more programs are searched and the voice is clear, while the weather is bad, fewer programs are searched and the voice is noisy.


B. The product is placed in different position, the signal received by the antenna is not the same, the number of program searched and the clarity of the voice are not the same, it is best to place the product near to the window, and open the window, the effect will be much better, and there is no effect in a sealed environment

- ⑥  This button is time setting that can be set up 24 hours or 12 hours time
The button operation steps are as follows:
Long press  3 seconds Digital display 24 Hr / 12 Hr, and then press " + " " - " button to choose 12 / 24 hours system, then press  to confirm and save, then number on the screen will flashing, Then press " + " " - " to choose hours setting, and then press  once set is determined, and then minutes of digital screen Digital flash, and then press " + " " - " to set minutes of digital, finally press  save time setting.
- ⑦  This button, when you playing music, press once, display the last song/long press increase the volume
- ⑧  This button, when you playing music, press once, display the next song /long press to reduce the volume.

3

- ⑨  The button is for the alarm clock setting can set the alarm clock time and alarm clock music selection
A: The Button operation steps are as follows:
Long press  3 seconds, the time on digital screen time will flashing, then choose by press " + " " - " for hours Choice, then press  up set is determined, then the digital screen minutes, and then press " + " " - " To set minutes of digital, finally press  save time setting, then the Numbers shown on the screen A - : dd, dd twinkle, press " + " " - " make ringtones choice (A - : 01 - A - : 10 / A: dd, in total 11 songs of the alarm bell), press this button to save the above alarm clock time and choose to set the alarm bell.
- B: When not in alarm setting mode, press the  button, enter then alarm on/off clock Settings, press  digital screen display "ON" indicates the alarm clock to open, and then click the  button digital screen display " OFF " the alarm clock off.
- C: When the alarm clock rings, press any button alarm clock temporarily stop the noise, about 10 minutes later the Alarm clock goes off again, total three times, If you want the alarm to stop ringing, long press the OK.
- ⑩  This button is a confirm button and also a pause/play button in Bluetooth mode
- ⑪  The hole is a receiver to sound control the light change.
- ⑫ This port is a power supply Type C port . For external input power requirements, please refer to paragraph 1 of the warning on page 1 the manual.
- ⑬ This hardware is lamp body of circular ring, showing the dynamic flowing light.
- ⑭ This hardware is Volcanic lamp body, showing mountain's crack and dynamic atmosphere light
- ⑮ This hardware is the phone holder and wireless charges the phone.

4

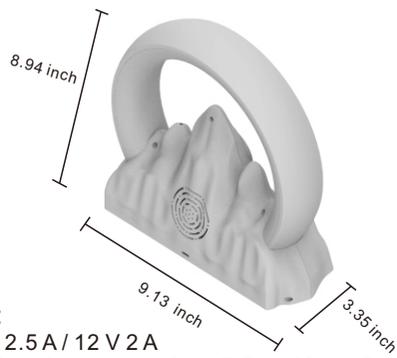

Product parameters:

1. The input voltage: 9 v 2.5 A / 12 V 2 A
2. The wireless output charging power : 5 w - 7.5w - 10w- 15w
3. Wireless charging distance: 2-6 mm
4. The wireless charging efficiency: 75%
5. The LED output: 10 w
6. The speaker power: 5 w
7. Product total power: 24 W
8. The circular pattern of light: APPs fixed 256 kinds of color mode, DIY infinite combination of light color mode.
9. The volcano light modes: 8 light color mode
10. Bluetooth distance: no obstacle, 10 meters
11. Material: ABS
12. The product color: black, white, the other customized color
13. Working frequency: 115-205 KHZ
14. The product size: 232 * 85 * 227 mm
15. Net weight: 565 g
16. The USB cable length is 1.5 meters

Bluetooth name:

1. The bluetooth name: **BR18**
2. " Smart Life "or" TuyaSmart " APPs search for the device name:**CHSTY18**

15 w fast wireless charging

Compatibility with mobile phone including:

Apple: Iphone 14/14 Pro / 14 Plus /14 Pro Max/13 Pro/13 Pro Max/12/12 Pro Max/11/Xs/Max/Xr/X/8/8 Plus

Samsung mobile phone: Galaxy S22 / S22 Ultra/S20 /S20 + / S20 Ultra / 10 / S10 + / S9 /S9+/S8/S8+/S7/S7 edge/S6 edge Plus/Note 10/9/8/7/5/

Any support Qi wireless charging android phones

5

Download and install the "Smart Life" or "TuyaSmart" App

Search "Smart Life" or "TuyaSmart" in App Store and Android app stores – download and install. You can download the QR code by scanning it.





Register/Login/Forget password

Register : Tap Register. Read the Privacy Policy page that Appears and tap Agree to enter the account registration page (The password requirement is: 6-20 characters, the password must contain both letters and numbers).

Login : If you have an App account, tap Log in with Existing Account under Register to enter the login page.


Forget password : If you forgot your password of the App, you can reset your pass

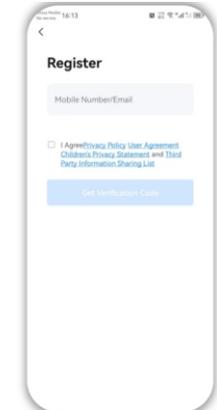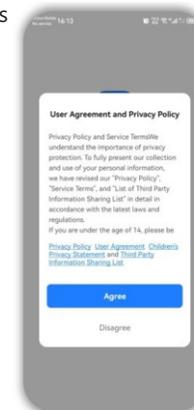

6


Add Device -- Normal mode

First, please confirm that your mobile phone Bluetooth is turned on. In the main interface of the application, click the "+" in the upper right corner to enter the pairing interface. Wait a moment to see the device found, and click "Add" to pair with the device. The specific operation is shown in the following figure

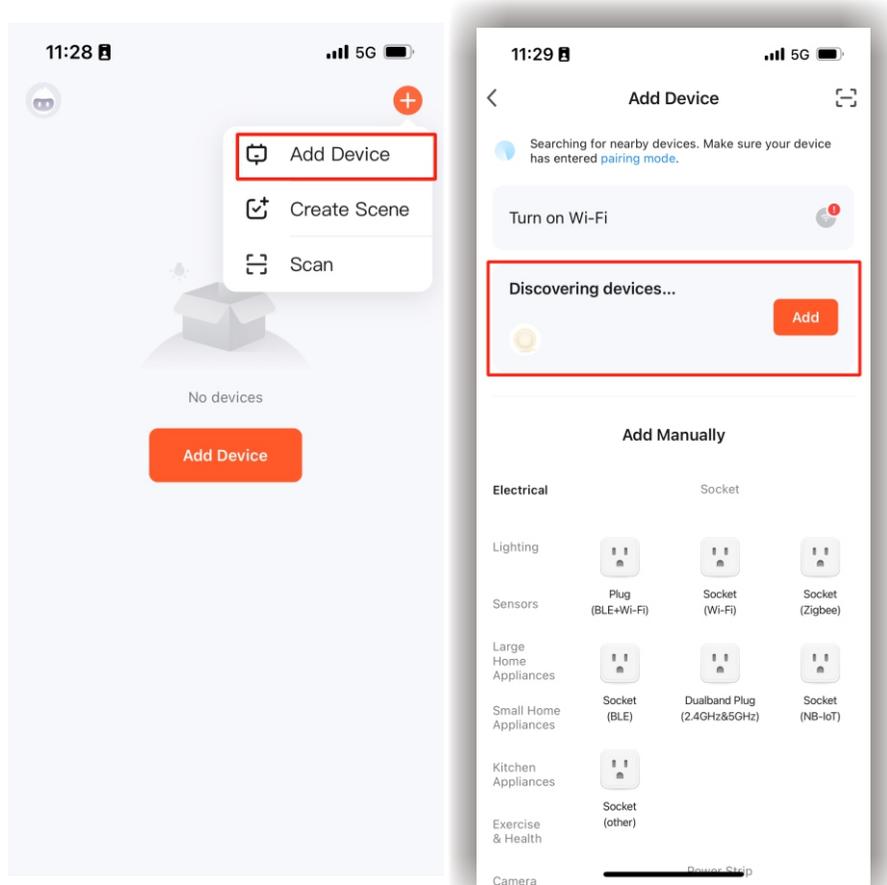

7

In the search **CHSTY18** letter And, in the process of software Reaction speed is not equipment Too fast, need to wait a few seconds Please need patience, and so on Icon to turn green to point Strike action

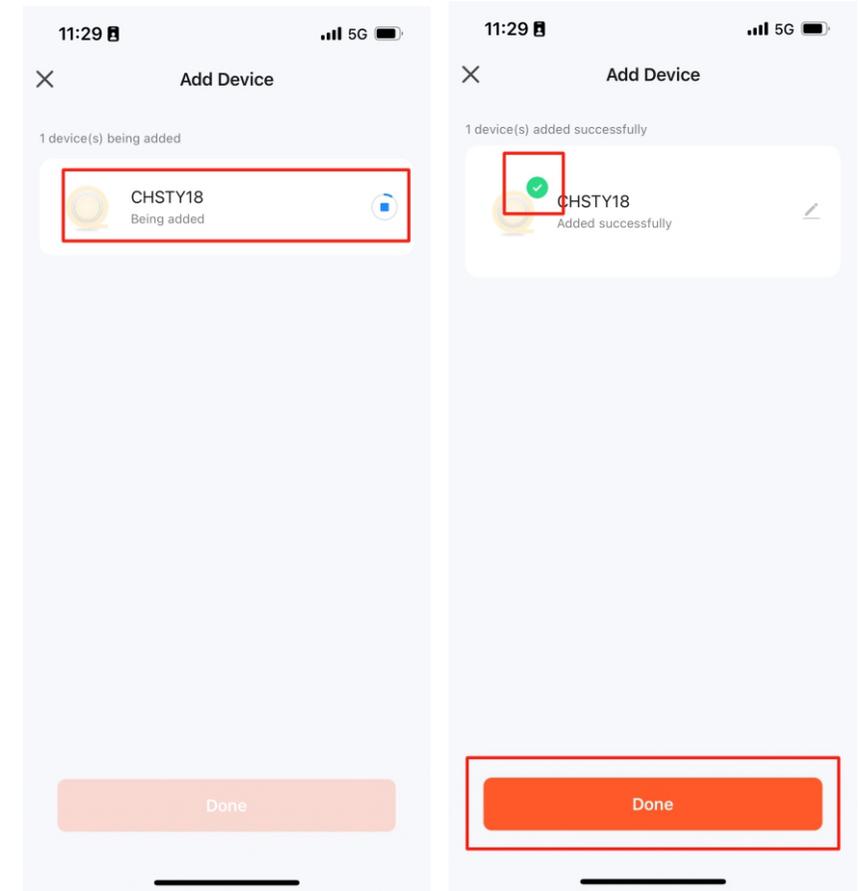


8

Control Device

After the device is successfully connected, the paired device will be displayed on the main interface. Click to enter the corresponding control interface.

Note:

1. When device is online, it supports quick operations.
When the device is offline, "Offline" is displayed. At this time, the device cannot be operated. At this time, you can check whether the device has been successfully powered on

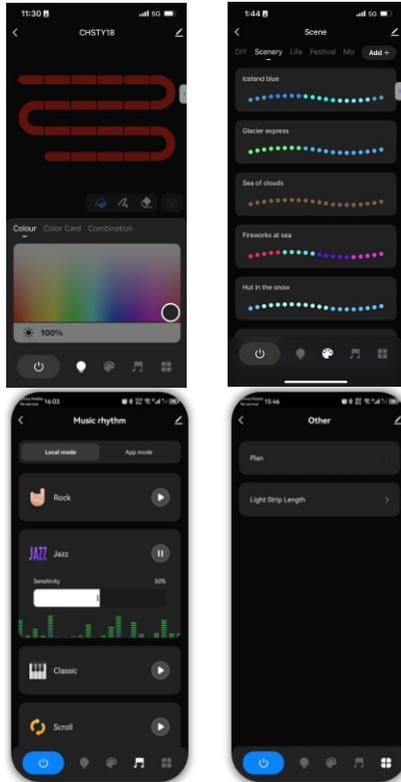


9

LED Strip Light Dynamic Mode

You can select a favorite dynamic effect from the scene interface, or "DIY" your desired dynamic effect.

1. Click "Add+" in the top right corner to enter custom scene.
2. You can DIY their own mode according to their preferences.
3. You can add/delete/modify the color displayed and change the speed of color switching.
4. If you are not satisfied, you can reset the settings.
5. After you click "Save", you can see the saved dynamic effects in the scene interface.
6. If you want to change the customized scene, click "DIY" to change or delete it.

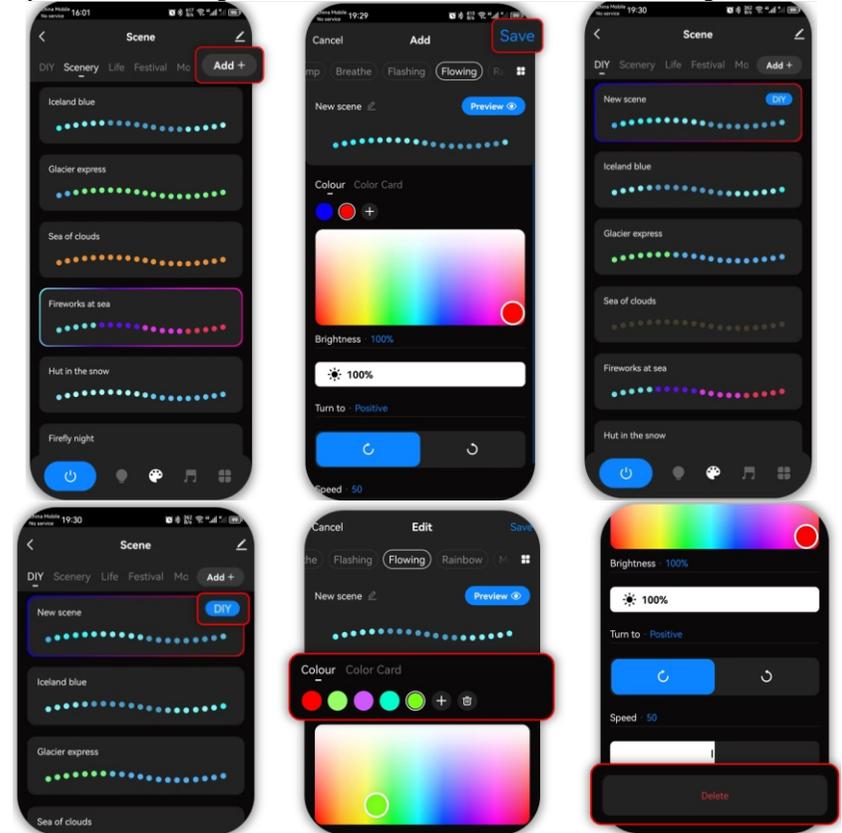

10

LED Strip Light Sync to Music Function

Enter the music mode and use any device to play music. The led bar light will synchronize with the music.

Note:

- 1.The volume of the mobile phone is relatively small. It is better to use Bluetooth audio or local mode.
- 2.You can select the phone mode or local microphone mode according to different use needs.You can click your favorite scene mode to let the led strip light show different




Light Strip Length Setting

If your light strip has been cut during use, you can adjust the actual length to better set up the light strip.

You can click the four grid icon in the lower right corner of the interface to enter the "Other" setting interface. Click "Light Strip Length", and then drag the progress bar of "Actual Length" to the actual length of light strip. When dragging to the appropriate position, click "Confirm" to complete the setting of the length of the light strip.

11

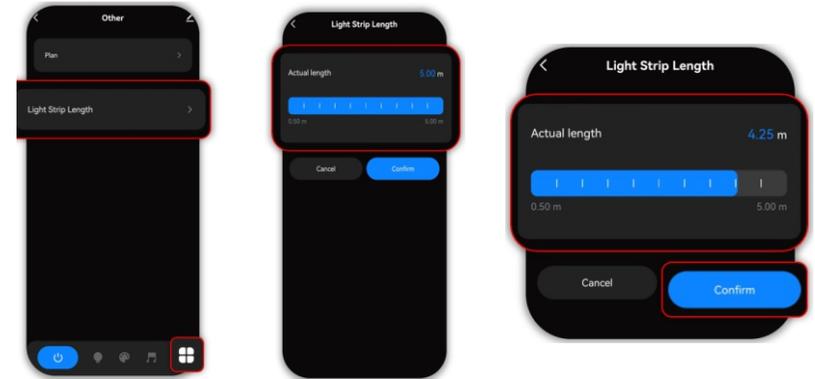

FAQ

1.The Indicator light changed from flashing to regular, but it still fails to connect? It may have flickered for more than three minutes, and you can still connect to the device through APP.

If the "normal mode" method cannot add your device, you can use "AP mode" to add it. If you are using iOS 14 and above, please make sure you have opened the local network permission and wireless data permission of the App.

2.My network is fast and stable, but when using the App to control the device, the device latency is always high?

Please make sure that the signal of the network environment where the device is located is strong and stable. Troubleshooting: Download the Internet Speed Test App, place your mobile phone in the same location as the device, and then test the Internet upload and download speed at that location (ensure that the speed is at least: upload ≥ 2 MB/s, download ≥ 2 MB/s or upload ≥ 16 Mbps, download ≥ 16 Mbps).

The region where you live now is not the same as the region you selected when you registered your App account. As a result, the cloud server you access when controlling your device is far away from your place of residence, resulting in high latency.

Our cloud server is not able to cover the area where you live, causing high latency between the cloud server you need to access and your device.

3.Why does the device not automatically reconnect with the mobile phone after it is powered on again?

Dear user, first, make sure that your controller is powered on.

Because of some technical problems, you can go back to the home page of the APP and slide the interface to refresh, and then you can see that the device has been reconnected.

How to get more help?

12

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio/TV technician for help.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co - located for operating in conjunction with any other antenna or transmitter.