

# BOOKSHELF WIRELESS SPEAKER



## Instruction Manual

Before using this product, please read these instructions to prevent any damage, and keep it safe for future reference.

## Package contents

 
- 1\* Wireless bookshelf speaker
- 1\* Remote control
- 1\* Manual
- Screws ( 6\*20 KM \*2pcs,3.5\*35 KA\* 12pcs)
- 1\* Top panel
- 1\* Bottom Panel
- 3\* Stand pole
- 1\* 3.5mm AUX Line
- 1\* Adaptor
- 1\* Screwdriver

### Note:

1. Do not use the unit near running water.
2. Do not install near any heat sources such as radiators, heaters, or other devices that generate heat.
3. Keep screws and assemble the speaker away from children.



# Installation method

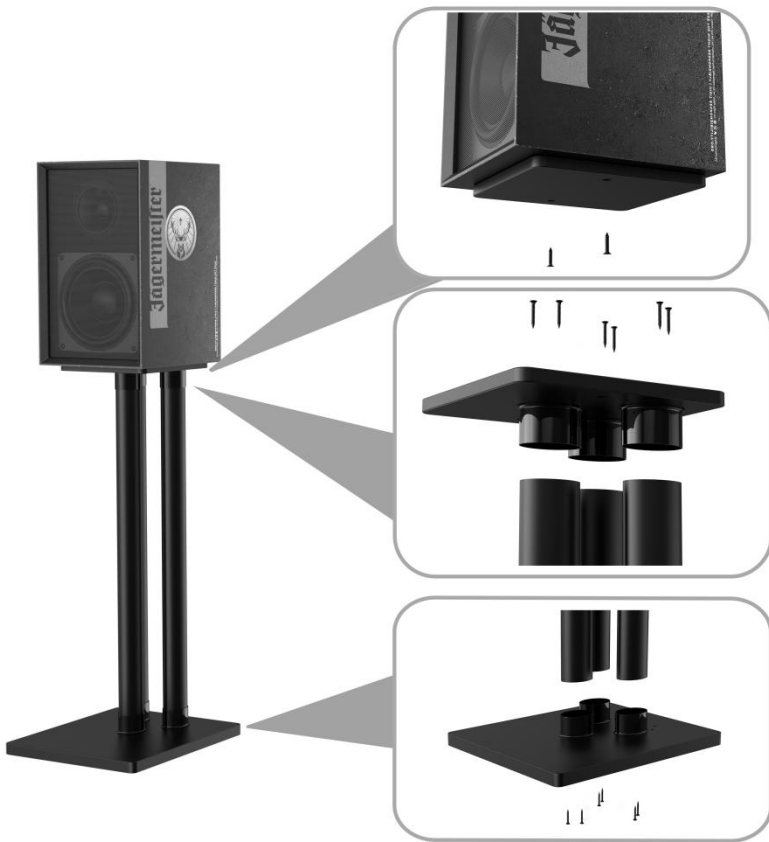 


Step 1: Please insert the stand poles into the plastic part of the bottom panel first (the bottom panel is the larger size) then use screws to fasten the board to the stand poles

Step 2: Please insert the stand poles into the plastic part of the top panel second (the small size) then use screws to fasten the board to the stand poles

Step 3: Place the speaker box on top panel of the stand and fix it with screws from the bottom

# Important Safety Instructions

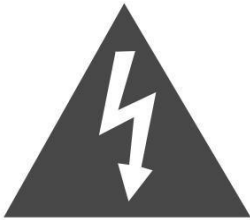

This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your bookshelf speakers.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your bookshelf speakers.

1. Read these instructions carefully.
2. Keep these instructions for future reference.
3. Take careful note of all warnings.
4. Follow all instructions carefully.
5. Do not use the unit near running water.
6. Clean only with a damp dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heaters, or other devices that generate heat.
9. If the provided plug does not fit into you're A/C outlet, consult an electrician.
10. Protect the power cord from being pulled or stretched.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug the unit from the A/C mains socket during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen onto the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
15. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause electric shock or fire.
16. No naked flame sources, such as lighted candles, should be placed on the unit.
17. The ventilation should not be blocked by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
18. The remote control supplied with this product contains cell batteries. If the cell battery is swallowed, it can cause severe internal burns within just a few hours.
19. Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.
20. Keep new and used batteries away from children.
21. If the battery compartment does not close securely, stop using the product and keep it away from children.

# Listening to your speakers

These speakers allow you to access two different sound sources including Wireless and Line in (AUX-in). Press the Power switch behind on your speakers. The speaker will be on.

## Control Panel



1. Standby button

2. TWS button

When we are in wireless function then long press the TWS touch key in the (A) speaker. Another (B) speaker in wireless mode, the (B) speaker can select (A) speaker wireless and connect (A) speaker.

3. Prev song / Decrease volume button

Short press the button can switch to the previous song.  
Long press the button can decrease music volume.

 
4. Pause button





When we are in Wireless function:  
Short press pause button can pause the music.  
Short press pause button again can start music.

5. Next song / Increase volume button

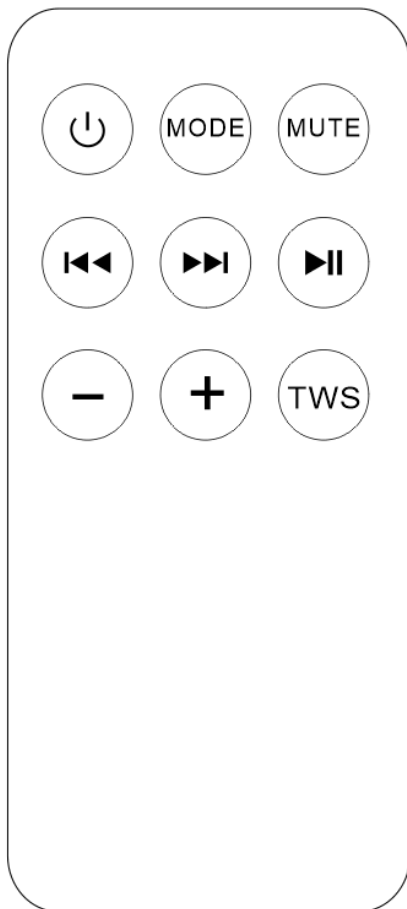Short press the button can switch to the next song.  
Long press the button can increase music volume.

# Remote Control Layout



	Press to enter Standby Mode. Press again to resume play.
<b>MODE</b>	To select the Function.
<b>MUTE</b>	Press to mute the sound. Press again to restore the sound.
	Change to the previous song.
	Change to the next song.
	When we are in wireless function, short Press to stop the sound. Press again to continue the sound.
<b>+</b>	Press to increase the volume.
<b>-</b>	Press to decrease the volume.
<b>TWS</b>	Connecting two speakers when press TWS on wireless mode

## Replacing the batteries in the remote control

1. Pull the battery tray on back and slide the batteries out of the remote control.
2. Remove the old batteries and insert new CR2025 Lithium Cell batteries into the battery tray. Match the polarity of the batteries to those in the battery tray.
3. Slide the battery tray back into the battery compartment until it clicks into place.

### CAUTION:

- Used batteries should be recycled.
- Keep out of children's reach.
- If the battery is out of power, please replace the battery ASAP.
- When not using the remote control for a long time, remove the batteries from the unit.

# Features

## Compatible Wireless Function

1. Short press the standby Mode on the speakers or INPUT button on remote control repeatedly to select wireless mode.
2. Turn on the wireless function of your device and enable the search or scan feature to find the wireless pairing name "**Jager**". (See your device's instructions to add or setup a wireless device). Select "**Jager**" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) with your device.
3. When connected successfully, it will indicate with a voice reminder. You can play music from your wireless device.
4. Press and hold the "VOL-" Button or "VOL+" Button on your speakers or volume button on remote control to decrease or increase volume.

## Line in (AUX-in) player

1. Plug one end of an audio cable (not supplied) into the Line AUX Jack and the other end of the cable to the headphone jack of your digital audio player.
2. Short press the Mode Button repeatedly to select the AUX mode or Line in mode. Start playing the device.
3. Press the "-" Button or "+" Button on your speakers or "CH-" or "CH+" on remote control to select previous or next track.
4. Press and hold the "-" Button or "+" Button on your speakers or volume button on remote control to decrease or increase volume.

# Technical specifications

Power Source:.....DC 15V 2.4A (Power adaptor)  
Impedance of speakers:.....6Ω 40W+8Ω 5W  
Pairing working distance:.....up to 10 meters in open space (walls and structures may effect range)



## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules operation is subject to the following two conditions

- (1) This device must not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

The distance between user and products should be no less than 20cm.



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points where electric and electronic equipment and batteries can either be submitted at recycling stations or other collection sites. Check with your city or county for additional information.