

Instruction Manual

Retro Audio TABLETOP MEDIA PLAYER



Bluetooth Connection, Programmable MP3 Player, CD Player, FM & AM Radio, USB Player, Aux-In Connection, Built in Speakers & Headphone Out.

1

INDEX

Preparation for First Use.....	Page 1
Controls Location.....	Page 2 & 3
Radio Operation.....	Page 4
CD Operation.....	Page 4
USB Operation.....	Page 6
USB Programming.....	Page 6
Bluetooth Operation.....	Page 7
Setting Clock & Alarm.....	Page 8
Extra Features.....	Page 8
Troubleshooting & Warnings.....	Page 9
Customer Service & Cautions / Warnings.....	Page 10

PREPARATION FOR FIRST USE

1. Carefully remove this unit from the shipping box and remove all packing material from the unit.
2. Unwind the AC adapter and plug it into the AC power source.
3. Unwind the FM antenna wire and extend it to its full length.
4. Place the unit on a stable, level surface, convenient to an AC outlet, out of Direct sunlight and away from sources of excess heat, dust, moisture, humidity and vibration.
5. Connect the AC adapter to the rear of the unit.
6. Connect the plug to a conveniently located AC outlet.
7. Connect the AC adapter to the rear of the unit.
8. Connect the plug to a conveniently located AC outlet.

POWER SOURCE

This product is designed to operate using the 100-240V 50/60Hz AC Mains power supply. Attempting to operate this system from any other power source may cause damage to the system. This damage is not covered by your warranty.

PROTECT YOUR FURNITURE

This unit is equipped with non-skid rubber feet* to prevent the product from moving when you operate the controls. These feet are made from non-migrating rubber material specifically formulated to avoid leaving any marks on your furniture. However, attempting to move the unit over polished furniture, wood preservatives, or cleaning sprays may cause damage to your furniture. If this occurs, please contact your furniture manufacturer for repair. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber feet before you place the product on this wooden furniture.

OPERATING INSTRUCTIONS - USB

Playback of music in MP3/WMA format via USB device

The system is able to decode and playback MP3 or WMA files stored in the memory media connected to the USB port.

1. Press and hold the Power / Mode button.
2. Following the illustration below, insert a USB device face up into the USB port, making sure it is fully inserted. The equipment will automatically detect the USB mode. (To manually select USB mode press the Power / Mode button until the display shows "USB".)
3. Press the Play/Pause button to start playing.▶
4. Use the skip up ▶ and skip down ▶ buttons to change the track.
5. To stop playing press the Stop button.■

! IMPORTANT:
* Connecting the USB device upside down or backwards could damage the audio connection. Check to ensure the connection is correct before connecting.

The system can detect and read files in MP3 / WMA format only via the USB port.
You can connect an MP3 player to the system via the USB socket; however, some MP3 players may not be able to play via the USB socket. This is due to variations in the MP3 encoding format. This is not a malfunction of the system. There are numerous MP3 players on the market and their products vary in application and formats. We therefore cannot guarantee that this unit will support all USB devices for the following requirements:

MP3 bit rate: 32 kbps-256 kbps
WMA bit rate: 32 kbps - 320 kbps
* Maximum supported USB size is 16gb.

OPERATING INSTRUCTIONS - PROGRAMMING USB TRACKS FOR PLAYBACK

Up to 64 tracks can be programmed for MP3 / WMA files stored in any order, before programming, however, be sure the system is in STOP mode.

1. Press the Mode button until USB is shown on the display. Then press the stop button.
2. Press the program PROG button. MEM will be shown on the display, and it will indicate the program number and digits for the track number to be programmed.
3. Press the skip up ▶ or skip down ▶ button to select a desired track.
4. Press the program PROG button to store the track into the memory.
5. Repeat steps 3 and 4 to enter additional tracks into the memory.
6. When all desired tracks have been programmed, press the Play / Pause [▶] button to play the tracks in the assigned order.
7. To cancel programming, press the Stop button twice.■

OPERATING INSTRUCTIONS - BLUETOOTH

Bluetooth Operation


1. Press and hold the Power / Mode button to turn the equipment on.
2. Press the Power / Mode button until BT shows on the display.
3. Turn on your Bluetooth device and scan. "Odyssey Audio" will be found on your Bluetooth device. Pair and connect the unit and your Bluetooth device. When pairing is successful the speaker will play a tone.
4. Play your Bluetooth device as you normally do, and the music will be played from the unit.

! IMPORTANT:
* Make sure your Bluetooth device and the unit is within 10 meters.
Check and see if there are other Bluetooth devices nearby interfering the signal and connection.


CONTROLS LOCATION 1

LOCATION OF CONTROLS AND INDICATORS

FRONT PANEL

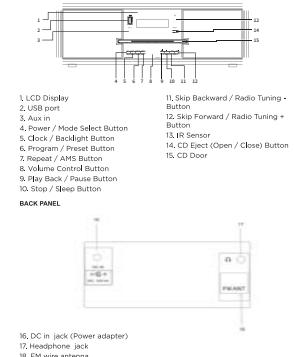

BACK PANEL

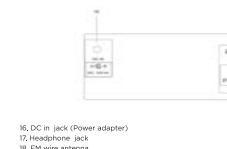

1

2


3

4

CONTROLS LOCATION 2

REMOTE CONTROL

FRONT

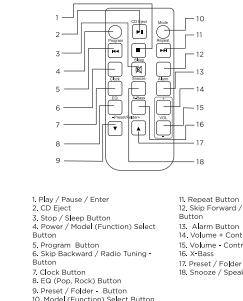

BACK

5

6

7

8

OPERATING INSTRUCTIONS - RADIO

Radio Operation

1. Press and hold the Power / Mode button to turn the equipment on.
2. Press the Mode button repeatedly until FM or AM is showing on the display.
3. Press the AMS button to scan for radio stations.
4. Use the Tuning + & - buttons to manually tune the radio.
5. Adjust the volume knob to your desired volume level.
6. AM reception: the receiver has a built-in AM bar antenna. If reception is weak, slightly rotate or reposition the unit to improve AM reception.
7. FM reception: the receiver has a built-in FM wire antenna hanging at the rear cabinet. For best reception, completely unwind and extend the wire.
8. When you have finished listening to the radio, press and hold the Power / Mode button again to turn the equipment off. Unplug it from the power supply if you are not going to use it for a while.

NOTE: FM and FM Stereo

* FM Stereo : receiving stereo programs. Once a stereo signal is received, the ST icon will light up on the display.

OPERATING INSTRUCTIONS - CD

CD Operation

1. Press and hold the Power / Mode button to turn the equipment on.
2. Press the Mode button repeatedly until CD shows on the display.
3. Press CD Eject button to open the disk tray door.
4. Place the CD face up making sure it is correctly aligned and press the CD Eject button again to close the disk tray door. Press Play / Pause to begin playing.▶
5. To play a different track, press the skip up ▶ or skip down ▶ button.
6. To adjust the volume level turn the volume knob.

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

<p

Instruction Manual

Retro Audio

TABLETOP MEDIA PLAYER



Bluetooth Connection, Programmable MP3 Player, CD Player, FM & AM Radio, USB Player, Aux-In Connection, Built in Speakers & Headphone Out.

INDEX

Preparation for First Use.....	Page 1
Controls Location.....	Page 2 & 3
Radio Operation.....	Page 4
CD Operation.....	Page 4
USB Operation.....	Page 6
USB Programming.....	Page 6
Bluetooth Operation.....	Page 7
Setting Clock & Alarm.....	Page 8
Extra Features.....	Page 8
Troubleshooting & Warranty.....	Page 9
Customer Service & Cautions / Warnings.....	Page 10

PREPARATION FOR FIRST USE

1. Carefully remove the unit from the display box and remove all packing material from the unit.
2. Unwind the power adapter cord and extend it to its full length.
3. Unwind the FM Antenna wire and extend it to its full length.
4. Place the unit on a stable, level surface, convenient to an AC outlet, out of Direct sunlight, and away from sources of excess heat, dust, moisture, humidity or strong magnetic fields.
5. Connect the AC adapter to the rear of the unit.
9. Connect the plug to a conveniently located AC outlet.

POWER SOURCE


This product is designed to operate using the 110V-240V 50/60Hz AC Mains adapter only. Attempting to operate this system from any other power source may cause damage to the system, this damage is not covered by your warranty.

PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.


CONTROLS LOCATION 1

LOCATION OF CONTROLS AND INDICATORS FRONT PANEL

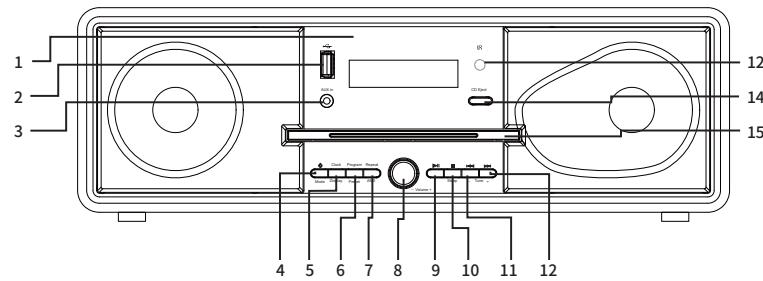

- 1. LCD Display
- 2. USB port
- 3. Aux in
- 4. Power / Mode Select Button
- 5. Clock / Backlight Button
- 6. Program / Preset Button
- 7. Repeat / AMS Button
- 8. Volume Control Button
- 9. Play Back / Pause Button
- 10. Stop / Sleep Button
- 11. Skip Backward / Radio Tuning - Button
- 12. Skip Forward / Radio Tuning + Button
- 13. IR Sensor
- 14. CD Eject (Open / Close) Button
- 15. CD Door


BACK PANEL

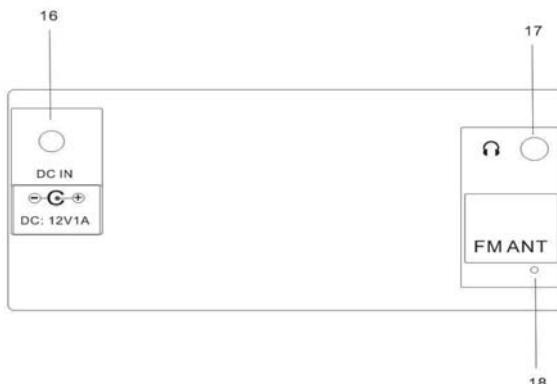

- 16. DC in jack (Power adapter)
- 17. Headphone jack
- 18. FM wire antenna

CONTROLS LOCATION 2

REMOTE CONTROL

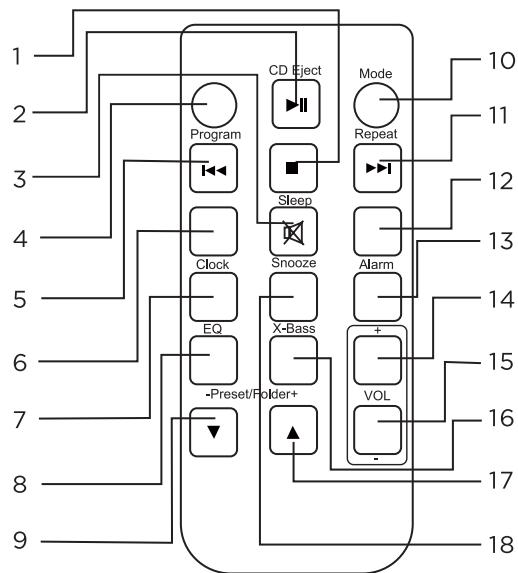

1. Play / Pause / Enter
2. CD Eject
3. Stop / Sleep Button
4. Power / Model (Function) Select Button
5. Program Button
6. Skip Backward / Radio Tuning - Button
7. Clock Button
8. EQ (Pop, Rock) Button
9. Preset / Folder - Button
10. Model (Function) Select Button

11. Repeat Button
12. Skip Forward / Radio Tuning + Button
13. Alarm Button
14. Volume + Control Button
15. Volume - Control Button
16. X-Bass
17. Preset / Folder + Button
18. Snooze / Speaker Mute

OPERATING INSTRUCTIONS - RADIO

Radio Operation

1. Press and hold the Power / Mode button to turn the equipment on.
2. Press the Mode button repeatedly until either FM or AM is showing on the display.
3. Press the AMS button to scan for radio stations.
4. Use the Tuning + & - buttons to manually tune the radio.
5. Adjust the volume knob to your desired volume level.
6. AM reception: the receiver has a built-in AM bar antenna. If reception is weak, slightly rotate or reposition the unit to improve AM reception.
7. FM reception: the receiver has a built-in FM wire antenna hanging at the rear cabinet. For best reception, completely unravel and extend this wire.
8. When you have finished listening to the radio, press and hold the Power / Mode button again to turn the equipment off. Unplug it from the power supply if you are not going to use it for a while.

NOTE: FM and FM-stereo

★ * FM-Stereo : receiving stereo programs. Once a stereo signal is received, the ST icon will light up on the display.

OPERATING INSTRUCTIONS - CD

CD Operation

1. Press and hold the Power / Mode button to turn the equipment on.
2. Press the Mode button repeatedly until CD shows on the display.
3. Press CD Eject button to open the disk tray door.
4. Place the CD face up making sure it is correctly aligned and press the CD Eject button again to close the disk tray door. Press Play / Pause to begin playing. ►||
5. To play a different track, press the skip up► or skip down◀ button.
6. To adjust the volume level, turn the volume knob.

OPERATING INSTRUCTIONS - USB

Playback of music in MP3/WMA format via USB device

The system is able to decode and playback MP3 or WMA files stored in the memory media connected to the USB port.

1. Press and hold the Power / Mode button.
2. Following the illustration below, insert a USB device face up into the USB port, making sure it is fully inserted. The equipment will automatically select the USB mode.
(To manually select USB mode press the Power / Mode button until the display shows "USB").
3. Press the Play/Pause button to start playing.▶||
4. Use the skip up ▶▶ and skip down ◀◀ buttons to change the track.
5. To stop playing press the Stop button. ■

★ IMPORTANT:

- * Connecting the USB device upside down or backwards could damage the audio system or USB. Check to ensure the direction is correct before connection.
- * The system can detect and read files in MP3 / WMA format only via the USB port.
- * You can connect an MP3 player to the system via the USB socket, however, some MP3 players may not be able to play via the USB socket. This is due to variances in the MP3 encoding format. This is not a malfunction of the system.
- * There are numerous USB device producers and their products vary in application and format. We therefore cannot guarantee that this unit will support all USB devices from every brand.
- * MP3 / WMA track format requirements:
 - MP3 bit rate: 32 kbps-256 kbps
 - WMA bit rate: 32 kbps ~ 320 kbps
- * Maximum supported USB size is 16gb.

Programming UBS tracks for playback

Up to 64 tracks can be programmed for MP3 / WMA file playback in any order. Before programming, however, be sure the system is in STOP mode.

1. Press the Mode button until USB is shown on the display. Then press the stop button.
2. Press the program PROG button, MEM will be flashing on the display, and it will indicate the program number and digits for the track number to be programmed.
3. Press the skip up ►► or skip down ◀◀ button to select a desired track.
4. Press the program PROG button to store the track into the memory.
5. Repeat steps 3 and 4 to enter additional tracks into the memory.
6. When all desired tracks have been programmed, press the Play / Pause ►|| button to play the tracks in the assigned order.
7. To cancel programming, press the Stop button twice. ■

OPERATING INSTRUCTIONS - BLUETOOTH

Bluetooth Operation

1. Press and hold the Power / Mode button to turn the equipment on.
2. Press the Power / Mode button until BT shows on the display.
3. Turn on your Bluetooth device and scan , “Odyssey Audio” will be found on your Bluetooth device. Pair and connect the unit and your Bluetooth device. When pairing is successful the speaker will play a tone.
4. Play your Bluetooth device as you normally do, and the music will be played from the unit.

★ NOTE:

- * Make sure your Bluetooth device and the unit is within 10 meters.
- * Check and see if there are other Bluetooth devices nearby interfering the signal and connection.

OPERATING INSTRUCTIONS - CLOCK & ALARM

Setting the Clock

1. Make sure the unit is in Standby mode.
2. Press and hold the CLOCK button until the display flashes.
3. Press the + or - buttons to set either 12 or 24hr clock format. When selected press the CLOCK button to continue.
4. Press the + or - buttons to set the time. When the correct time is set press the CLOCK button again to exit clock setting mode.

Setting the Alarm

1. Make sure the unit is in Standby mode.
2. Press and hold the ALARM button until the display flashes.
3. The equipment has two alarm times available. Press the + or - buttons to select either Alarm 1 or Alarm 2. When selected press the ALARM button to continue.
4. Press the + or - buttons to set the time. When the correct time is set press the ALARM button to continue.
5. Press the + or - buttons to select the alarm mode (FM, CD etc). When the desired mode is selected press the ALARM button to continue.
6. Press the + or - button to set the volume of the alarm. Press the ALARM button to exit alarm setting mode.

OPERATING INSTRUCTIONS - EXTRA FEATURES

Repeat Button

During CD or USB playback press this button to cycle between single track repeat or repeat all tracks on the CD or USB.

Sleep Button

1. When the equipment is on press and hold the SLEEP button to activate the sleep timer.
2. Once sleep is showing on the display press the SLEEP button again to cycle through the sleep timer options: 90, 80, 70, 60, 50, 40, 30, 20, 10mins or Off.
4. The equipment will turn off automatically after the selected sleep time has elapsed.

Backlight Button

Press the BACKLIGHT button to cycle through the display backlight brightness settings.

EQ Button

Press this button to cycle through preset EQ settings to change the sound to suit your music.
Choose from Pop, Rock,etc.

X-Bass Button

Turn X - Bass on and off.

TROUBLESHOOTING

If you are experiencing problems with your Tabletop Media player, check in the section below whether there are any quick and easy adjustment you can do that may help you solve the problem. If you cannot solve the problem by yourself, contact our after sales support line for advice. Do not attempt to open, repair or modify the equipment yourself.

Problems with sound

- * Clockwise rotate the power/volume knob to increase the volume.
- * Make sure the unit's power cord is connected to an appropriate electrical outlet.
- * Make sure the wall socket is switched on.
- * Make sure the function switch is set to your desired function: USB, CD etc.
- * When playing a CD, make sure the CD is inserted face up.
- * When playing an external source via the AUX IN connection, make sure the cable is firmly connected, all controls on the external source player are properly set.
- * When playing music from USB device, make sure the memory device is properly inserted in USB port and correct MODE is selected.

Problems with radio reception

- * Make sure you are in an area that can receive signals for your selected radio station.
- * If AM reception is weak, rotate or reposition the equipment to improve reception.
- * If FM reception is weak, try the following to improve reception:
 - * Completely unravel the wire aerial at the back of the cabinet.
 - * Slightly move the wire aerial for better reception.
- * If none of these measures improve stereo reception, try the same station on the FM (mono) band.
- * Try moving your radio to an alternative location to see if the reception improves.
- * Check that you do not have other electrical equipment too close to your radio, which may cause interference.

WARRANTY

60 DAY LIMITED WARRANTY

Odyssey Marketing/ Odyssey Toys warrants to the original purchaser when used in the United States only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of United States is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.** 2020 Odyssey Marketing Corp.



For Customer Service please email:
Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-1969 • Odyssey Retro Audio - Tabletop Media Player
www.OdysseyToys.com

CAUTIONS & WARNINGS

- * Please read these instructions and keep them for future reference.
- * Pay attention to all warnings.
- * Follow all instructions.
- * Do not use this apparatus near water.
- * Clean only with a dry cloth.
- * Do not block any ventilation openings.
- * Install in accordance with the manufacturer's instructions.
- * Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- * Protect the power cord from being walked on or kinked, in particular where the plug is fitted and at the point where it exits from the apparatus.
- * Only use attachments / accessories specified by the manufacturer.
- * Unplug this apparatus during lightning storms or when unused for long periods of time.
- * Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- * This appliance should not be exposed to dripping or splashing water and no object filled with liquids, such as vases, should be placed on the apparatus.
- * Do not overload the wall power outlet. Use only power source as indicated - i.e. 110V -240V AC mains.
- * Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- * Do not attempt to clean this unit with chemical solvents as this might damage the finish. Use a clean dry cloth. Operate controls and switches as described in the manual.
- * Store your CDs, USBs and other media items in a cool area to avoid damage from heat.



MADE IN CHINA

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20 cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.