

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Karaoke Treasure Instructions

I. Buttons Operation

- 1. "⏻" Hold: ON/OFF Press: Mode switching.
- 2. "⏮" Press: the previous song under MP3 mode.
Under selfie mode, press it to enable selfie function (only for iOS system mobile phone)
- 3. "⏭" Press: the previous song under MP3 mode.
Under selfie mode, press it to enable selfie function (only for Android system mobile phone)
- 4. "⏸" Press: Play/Pause. Under FM state, hold it for automatic search.
- 5. "REC" Press: Play recording/ one key mute. Hold: Record/ delete recording.
- 6. "VOL + " Increase volume 7. "VOL - " Decrease volume
- 8. "MIC/VOL": MIC/VOL adjustment. 9. "REMIX ": Reverberation depth adjustment.

II. Local recording (Only for wireless recording)

- 1. Pairing and connecting between phone and wireless.
 - 2. Play music in your phone.
 - 3. Hold the "REC" button (until a beep) to start recording (recording the music and voices in the phone). Hold the "REC" button (the sound will pause one time) during the recording to complete the recording.
- Note: Please insert the storage device like U disk or TF card before startup.

III. Play recording: Press the "⏻" button to switch to MP3 play mode, then press "REC" button to replay the last recording

IV. Delete recording: Hold "REC" button to delete the current recording when playing recordings.

V. One key mute: Press "REC" button for one key mute function when playing wireless music.

VI. Wireless Karaoke

- 1. Power NO: Hold "⏻" button to start the product.
- 2. Connection wireless: enable the wireless of mobile phone, click to connect, successful connection if prompt tone is produced.
- 3. Adjust voice: adjust the sound volume of mike and the reverberation to suitable level.
- 4. Start Karaoke.

VII. Recording with mobile phone

- 1. Connect the recording wire: insert the MICRO plug of the recording wire into the MICRO interface of Karaoke Treasure, and the 3.5mm interface into the earphone jack of the mobile phone.
- 2. Open the Karaoke software in the mobile phone, such as: USING, Kugou Music or other recording APPs, select your favorable song, record the song according to the above mentioned singing method.
- 3. Test and save the song: operate according to the instructions of Karaoke software.

VIII. Selfie function

- 1. Press the "⏻" button to switch from wireless mode to selfie mode;
- 2. Enable wireless in the mobile phone, search "shutter", click connection;
- 3. Open the photograph interface of the mobile phone, press the "⏮" or "⏭" button to take photos.

Note: 4.2.2 or higher version for Android system, 6.0 or higher version for iOS system, it doesn't support other versions temporarily. It doesn't support the mobile phone which has the independent and solid photograph button.

Technical Parameters

- Output Power: 5W
- Frequency Range: 100HZ~10KHZ
- Max Sound Pressure Level: >115DB 1KHZ TDH < 1%
- Reverberation Mode: sound effect reverberation
- Power Supply: Built-in 18650 Li-battery
- Battery Capacity: 1800mAh
- Charging Power: DC-5V

