


Welcome to our products  
Thank you for your purchase



### III. Descriptions of Keys

Attention: Keyboard is optional, and configure the product according to the specific type of the tablet PC you have bought.

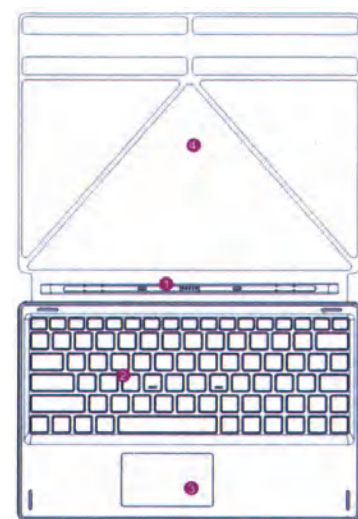

- ① Movable base keyboard interface: This interface is magnetic, which is convenient for alignment and firmly linking the Table PC and the keyboard.
- ② Keyboard group: The keyboard group provides full size QWERTY key and best typewriting comfortability.
- ③ Base: Folding base of Tablet PC.



Use of tablet and keyboard  
Hall-effect switch  
Tablet PC with keyboard to Cover, Windows OS Automatically entered into the Sleep.

### IV. Introduction to Desktop

Windows 10 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of "magnet". As long as you click them, you can easily visit them. You need to log on your Microsoft account before the application program completely runs.



Reduce  
On the touch screen, narrow two fingers to reduce the image.



Enlarge  
On the touch screen, widen two fingers to enlarge the image.

### V. Basic Operations


#### 1. Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC. If you want to fix more application programs on the start interface, see the operation in the figure below. (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.

#### 2. All settings

There is a square balloon icon in the lower right corner of the tablet desktop. Click it and all the settings menu will pop up. You can set up your computer.

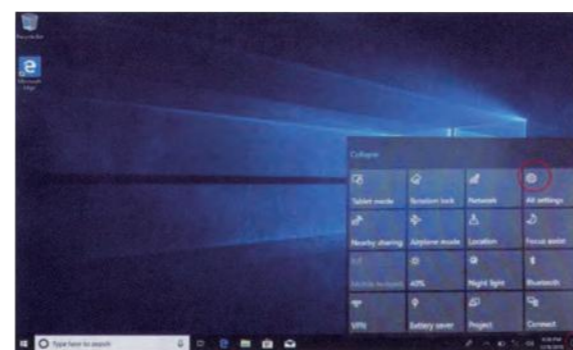

#### Virtual keyboard



#### Taskbar settings



3. Dormancy, restart and power off: Click the start menu bar in the lower left corner, pop up a window, and select the on / off icon

Hard keyboard two in one tablet notebook  
You can choose



recommended to replace the system or clean up the software.

2. Wireless cannot log in or access to the Internet:
  - A. If there is a fault in the wireless or wired Internet, generally restart the computer and reconnect.
  - B. If you still can't connect to the network, please turn off the router and the computer and wait for more than 15 minutes at the same time. After a break, turn on the router and the computer again and reconnect.
  - C. If the fault has not been eliminated, you can restore the router and reset it, and connect to the computer wireless network again.
  - D. please confirm your password again, and check whether the wireless icon has an exclamation point or is abnormal.
  - E. you can right-click this computer on the desktop, click manage, open the device manager, check whether the wireless device driver in the device manager is abnormal, open the network adapter, click the device, and uninstall the network device. When uninstalling, please do not check "uninstall delete driver". If you check the box, the driver will be permanently deleted. This method is to add again Load the driver. After uninstalling, you can restart the computer. The computer will automatically install the driver. In general, 80% of the computer WiFi failures can be fixed
  - F. if none of the above methods can be solved, you can check the delete driver in step e and reinstall the original WiFi driver of the computer.
  - G. if all the above methods are invalid, please reinstall the system. Generally speaking, the failure probability of WiFi is very low. Generally, these methods can solve the problem.

#### 3. Wake up problem:

After the computer is in standby mode, please do not press the power on button immediately. Normally, you need to wait for 3-5 seconds. When you wake up, you also need to wait for 3-5 seconds. If you press the on key frequently, the machine will shut down or crash.

#### 4. blue screen:

Enter the blue screen before entering the system, please restart the computer and check whether the incompatible software has just been installed. If there is any incompatible software or driver, please uninstall.

The system has been changed or updated so that the computer cannot enter the system. If the boot file is not damaged, restart it twice more. The problem can be fixed automatically. If the blue screen is long-term, it is recommended to reinstall the system. The blue screen may be caused by loose memory or incompatibility.

#### 5. System crash:

The system fails to enter the system due to system crash. You can prepare a 16gb disk. Download the system image on our network disk, make your own U disk recovery disk and install the system through the tutorial. Please communicate with customer service directly.

#### 6. Hardware damage:

The computer is warranted for one year. If the hardware (except for consumables, battery and power supply) is not faulty by human, you can enjoy free repair service. You can bring the warranty card (in this manual), fill in your name, address, telephone number, purchase time and fault description for warranty service.

### after-sale repairing

Dear users! Hello!

Please take good care of your computer, do not water, do not fall, artificial fall and water is not in the scope of warranty, computer BIOS has been set up, please do not brush the motherboard BIOS at will, we will not be responsible for any modification, if your computer fails, we are happy to serve you.

If you want to return to the factory for maintenance or repair, you can send this card for warranty! And fill in the following information.

Please give support and cooperation!

Your name: \_\_\_\_\_

Your phone number: \_\_\_\_\_

Your backup phone number: \_\_\_\_\_

Your permanent address: \_\_\_\_\_

Computer purchase date: \_\_\_\_\_

Brief description of computer failure: \_\_\_\_\_

Your requirements for us: \_\_\_\_\_

Whether the computer is damaged: \_\_\_\_\_

Other non repaired products: \_\_\_\_\_



Windows 10

Quick Start Guide

Tablet

Introduction  
Thank you for your choosing the new Tablet PC.  
This guide serves to enable users to get to know and familiar with our product as soon as possible.  
Here we have made a brief introduction to the key layout and definitions in figures and words.

### Contents

I. Precautions before Use

II Key Layout and Definitions

III Key Descriptions and Applications

IV Introduction to Desktop

V Basic Operations

1. Introduction to app Interface

2 All settings

3 Dormancy, restart and power off

4 Security Management

VI Simple troubleshooting:

1. crash

2. Wireless cannot log in or access to the Internet

3. Wake up problem

4. blue screen

5. System crash

6. Hardware damage

VII after-sale repairing

## FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2A4BF-AIWO1001A