

红色线表示折线 成品尺寸：119 x 77 mm

Warning Tips

 
- 1) Do not charge the speaker with other unsuitable power adaptors, It may cause damage to the speaker. The speaker must be charged properly by the given USB-C charging cable.
- 2) In order to avoid damage to your hearing and prolong the speaker's use-life, please do not listen to music for long time in high volume environment.
- 3) When a fault occurs, please immediately turn off the power switch and unplug the USB plug to prevent speaker and other components from being damaged.

FAQs

- 1) Why is there no sound when the speaker is turned on?
A: Make sure that you have charged the battery fully for the first time. Charging time is approx 3 hours.
- 2) Why is there no sound when playing the speaker?
A: Check the speaker is connected by you phone. If there is no connection, please reconnect and make sure you have the phone connected to the proper speaker.
- 3) How to recognize the Bluetooth speaker is fully charged?
A: When the speaker is being charged, and the red indicator is automatically turned off, it is already fully charged.
- 4) Why is the phone not charging?
A: Make sure the positioning of the phone is correct on the charger and that the power source is connected.

R-60


DESKTOP CHARGER W/
PORTABLE BLUETOOTH SPEAKER

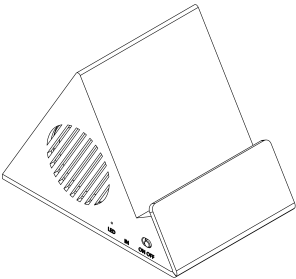

Product Introduction


Thank you for our desktop charger with portable Bluetooth speaker. Please read the manual carefully.

 Package Contents



Product Features

 - ① Type-C Input
- ② Power Switch
- ③ Indicator light
- ④ Center of Wireless Charger
- ⑤ Luminous Panel
- ⑥ Groove Phone Stand

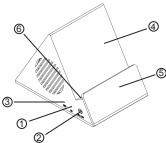

Specification

Model:	R-60
Wireless Version:	5.0
Loudspeaker Output:	3W
Frequency Response:	20Hz-20KHz
Distortion:	≤1.0%
Signal-To-Noise:	≥75dB
Range:	≤10m
Wireless charging input:	9V/2A, 5V/2A
Wireless charging output:	10W Max.
Dimension:	113x100x83mm

Operating Instruction

1. Pairing with mobile phone

- Slide power switch to the left to turn on wireless speaker. You will hear "Bluetooth device is ready to pair."
- Turn on the bluetooth function of the mobile phone. Search for the accessible Bluetooth devices and select name "R-60" from the device list to pair. The mobile phone will show "connected". If the phone is paired with the wireless speaker, you will hear "The bluetooth device is connected successfully."
- After the speaker is connected you can play your music and listen.

2. Charging wireless speaker

- Insert the USB-C charging cable to the speaker and the other end to the power of the unit using the included USB-C cable.
- Red blinking light means it is low on power. Red LED will light up when charging. The Red LED light will go off when fully-charged.

Note: When the speaker's voice is lower than normal or you hear a warning tone, please charge the speaker.

3. Wireless charging device (Optional)

- Insert the USB-C charging cable to the speaker and insert the other end to the power of the unit using included USB-C cable.
- Put the phone on the wireless charging area and make sure the phone is properly positioned for charging (most likely the center).

Note: make sure your phone is fit for the Qi standard receiving equipment.

Please note that cases or attachments may interfere with wireless charging.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For Bluetooth speaker

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For WPC

Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.