

ETOE



**Projector A1171
User Manual**

Safety Instructions

Read and understand all instructions before you use this device.

Do not make any changes or settings that are not described in this manual.

Any physical injury, and loss of data or damage caused by failure of following instructions, is not included in the warranty.

Setup

To reduce the risk of fire and/or electric shock, do not expose the device to rain or moisture, and objects filled with liquids, such as vases, should not be placed on the device.

Do not place the device on soft surfaces such as tablecloths or carpets as doing so could be a fire-hazard.

Do not place the device in areas susceptible to excessive dust and dirt or near any appliance generating a strong magnetic field.

To prevent overheating, do not block or clog the ventilation openings.

Never place the device in a confined space. Always leave enough space around the device for ventilation.

Protect the device against direct sunlight, heat, large temperature fluctuations and moisture.

When the device runs for a long period of time and the surface becomes hot, shut it down and unplug the power cord. Resume operation only after the device has cooled.

Always handle the device with care. Avoid touching the lens.

Never place heavy or sharp objects on the device or the power cord.

To avoid electric shock, do not disassemble.

Only use attachments or accessories specified by the manufacturer.

Avoid extreme vibration. It may damage the internal components.

Do not allow children to handle the device without supervision.

Under the following conditions, a layer of moisture can appear inside the device which can lead to malfunctions:

- a) if the device is moved from a cold to a warm area;
- b) after a cold room is heated;
- c) when the device is placed in a damp room.

To avoid any moisture, seal the device in a plastic bag before moving it to another room, and wait for one to two hours before you take it out of the bag.

Power Supply

Use only the provided power adapter.

Power off the device before removing the power supply from the socket.

Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from this device.

Unplug this device if there are lightning storms or when unused for a long period of time.

Where the power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Before you make or change any connections, ensure that all devices are disconnected from the power outlet.

Never touch the power cable or the power connector with wet hands.

Hearing Safety

To avoid hearing damage, do not listen for extended periods at high volume. Set the volume at a safe level.

Cleaning

Power off the device and remove it from the power supply before cleaning the surface.

Use a soft, lint-free cloth. Never use liquid, gaseous, or easily flammable cleansers (like sprays, abrasives, polishes, and alcohol).

Do not use any liquid cleaning agents to clean the lens as they may damage the protective coating on the lens.

Wipe over the surfaces gently. Be careful that you do not scratch the surfaces.

Use lens cleaning paper to clean the lens of the projector.

Repairs

Do not make any repairs to the device by yourself. Only have your device repaired by an authorized service center.

Improper maintenance can result in injuries or damage to the device.

 
 
 
Refer all servicing to qualified service personnel.

Caution:


Possibly hazardous optical radiation is emitted from this device.

Do not stare at operating beam. The bright light may hurt your eyes.


What's included

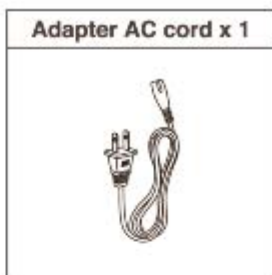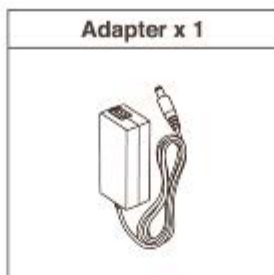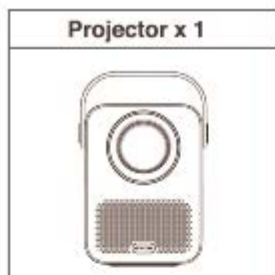

Overview

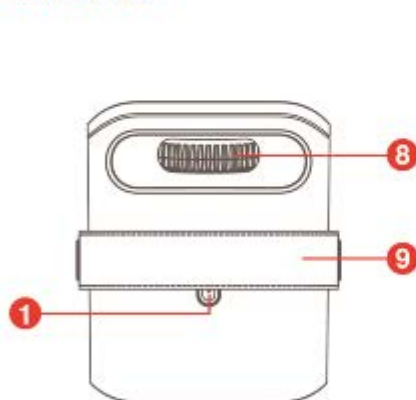 


Projector Top View

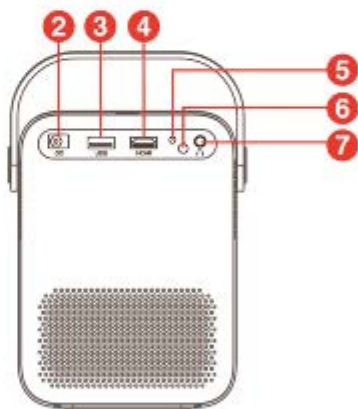 

Projector Back View


1. Power Switch
2. 19V DC in
3. USB Port
4. HDMI In
5. Indicator Light

 6. Infrared Receiving Window
7. 3.5mm AUX
8. Manual Focus
9. Projector Handle

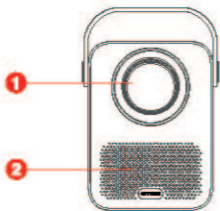

Projector Front View

 
- 1. Lens
- 2. Speaker

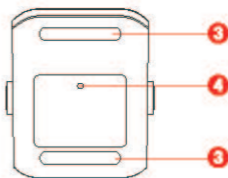

Projector Bottom View

- 3. Pads
- 4. Tripod Screw Hole

 ⚠ Attention: Please do not look into the lens directly to avoid harm for your eyes.

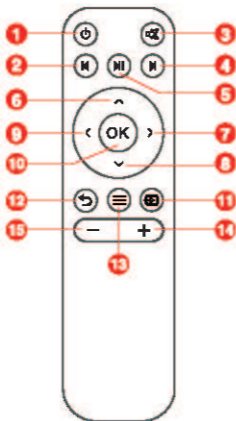

- 1 Power
- 2 Previous
- 3 Sound off
- 4 Next
- 5 Play/Pause
- 6 Up
- 7 Right
- 8 Down
- 9 Left
- 10 OK
- 11 Channel
- 12 Return
- 13 Menu
- 14 Volume +
- 15 Volume -

Get started

1. Placement

Place ETOE Projector A1711 on a stable, flat foundation in front of the projection surface. For the best results, the projection surface should be white and flat.

 
It is unnecessary to tilt the projector towards the projection surface. You can correct the projection image with the built-in keystone correction and with remote control.

The distance between the projector and the projection surface determines the image size.

2. Prepare the Remote Control

1. Prepare 2 x AAA battery, which is not included in the box.
2. To replace the battery, slide off the battery back cover to open the battery compartment, insert new batteries (matching the polarity (+/-) indicated), and close the battery compartment.

3. Power On

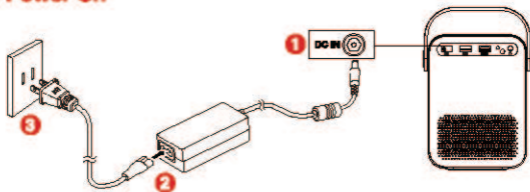

1. Connect the included adapter to the DC-IN port of the projector.
2. Connect the AC cord to the adapter.
3. Plug the adapter to the outlet and the LED indicators will light on.
4. Angle the projector towards a suitable projection surface or wall.

 
4. Focus

1. Place the projector towards a suitable projection surface or wall, adjust the distance for a proper size of picture.
2. Scroll the [Manual Focus] left or right until the picture is crystal clear.


5. Keystone correction

ETOE projector A1171 supports automatic vertical keystone correction, and remote four-point keystone correction.

1. Place the projector towards a suitable projection surface or wall, adjust the distance for a proper size of picture.
2. Focus the picture perfectly clear.
3. If your projector is directly towards the projection surface, but pointing up and down, the picture will be adjusted automatically. You can still use remote control [keystone+] or [keystone-], or go to [Projection Setting] -> [Four point correction] for further minor adjustment, till the picture is perfectly rectangular.

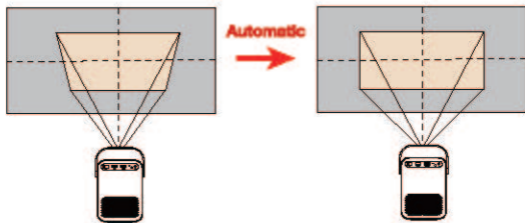

 4. If your projector is not vertical to the projection surface, use remote control, go to [Projection Setting] - [Four point correction].

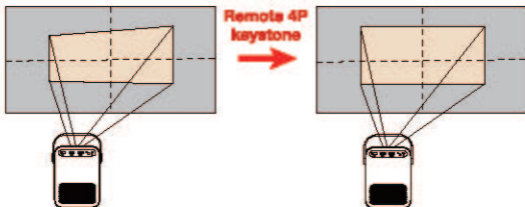

5. Press [OK] to select the point, 4[Navigation button] to adjust, until the picture is perfect rectangular.

Settings

Go through the set-up process when you turn on the projector for the first time.

1. Projection setting

Projection mode

[Desktop Front Projection]: The device is located in front of the projection surface.

[Desktop Rear Projection]: The device is located behind the projection surface.

[Ceiling Front Projection]: The device is hanging from the ceiling in an upside-down position. The image is rotated by 180 degrees.

[Ceiling Rear Projection]: The device is hanging from the ceiling in an upside down position behind the projection surface. The image is rotated by 180 degrees and horizontally mirrored.

Zoom in/out

Use the remote control, zoom in or out from 50% ~ 100%, fit the image size in a certain screen.

Vertical correction

Vertical keystone correction from 0-100.

Horizontal correction

Horizontal keystone correction from 0-100.

Four point Correction

Use the remote control, **[OK]** to select the point, 4 **[Navigation button]** to adjust, **[Back]** to ext.

Keystone correction reset

Reset Keystone correction value.

2. Network

This projector can be connected to the Internet via a wireless(Wi-Fi) connection.

1. Go to the home page, select **[Settings]** > **[Network setting]**.
2. Follow the on-screen instructions to complete the network connection.

3. Bluetooth

You can connect a Bluetooth headphone or speaker to ETOE Projector A1171.

1. On the home menu, select **[Settings]** > **[Bluetooth]** and press.
2. Follow the on-screen instructions to complete the Bluetooth connection.

4. Other settings

Default Input Signal

[HDMI] / **[USB]** / **[off]**

Select default display signal source from HDMI, USB, or turn to home page. No need switch signal source every time when the projector is turned on.

Language setting

Select your language from **[English]**, **[Deutsch]**, **[Français]**, **[Italiano]**, **[Español]**, **[日本語]**, **[한국어]**.


Restore factory setting

Reset your device and restore factory setting.

Using the ETOE projector A1171


Connect to a HDMI playback device

This projector supports connections with various HDMI playback devices such as PC, TV stick, TV box, DVD player, set-top box (STB), game console or other devices.

1. Connect this projector to an HDMI playback device with an HDMI cable (not provided).
2. Press the signal source button  on remote, or click the Signal Source button at homepage, select **[HDMI]**, and press. (*It will automatically start the HDMI playback when connected to an HDMI playback device)

Connect to a USB storage device

With this projector, you can enjoy music, video, and pictures, that are stored on a USB storage device.

1. Plug in the USB storage device.
2. Press the signal source button  on remote, or click the Signal Source button at homepage, select **[USB]**, and press.
3. Select the file you plan to play from the file and folder menu.
4. Press **[OK]** to start playing.

Connect to a Bluetooth headphone or speaker

You can connect a Bluetooth headphone or speaker to ETOE Projector A1171.


1. On the home page select **[Settings]** > **[Bluetooth]** and press.
2. Follow the on-screen instructions to complete the Bluetooth connection.

Connect to a headphone via AUX cable

You can connect a headphone or speaker to ETOE Projector via AUX cable as well.

1. Plug in the 3.5mm AUX cable connector to ETOE projector AUX port.
2. Plug the other connector of the 3.5mm AUX cable to your headphone or speaker.
3. Play your media on projector.

Companion mode

1. At home page, use the remote control to select **[Companion mode]** and press **[OK]** to enter. companion mode will be turn on and a random scene will be displayed.
2. To switch another scene, press the **[Menu]** button  of the remote control, you will see all scenes at the bottom of the screen, **[<]** or **[>]** to select, **[OK]** to confirm and enter.
3. When your device has been idle for 5 mins, it will turn to Companion mode automatically.

iOS AP Screen mirroring

For iOS device, Using the projector as Wi-Fi AP hotspot and connect iPhone / iPad / MacBook to projector Wi-Fi.

1. Select iOS AP screen mirroring at homepage
2. Follow instructions on the screen

Note: Mirroring via Netflix playing may not supported due to copyright limitation.

iOS Wi-Fi Screen mirroring

For iOS device, connect the projector to the same Wi-Fi with your iPhone / iPad / MacBook.

1. Select iOS AP screen mirroring at homepage
2. Follow instructions on the screen

Note: Mirroring via Netflix playing may not supported due to copyright limitation.

Android Screen mirroring

For Android device, Using the projector as Wi-Fi AP hotspot and connect phones and tablets to projector Wi-Fi.

1. Select Android screen mirroring at homepage.
2. Follow instructions on the screen.

Specifications

Native Resolution: 1920*1080

Brightness: 150 ANSI Lumens

Contrast Ratio: 5000:1

Aspect Ratio: 16:9/4:3 Adaptive

Speaker: 5W*2 Stereo Speaker

Connection: HDMI*1; USB*1; AUX*1;

Bluetooth: Bluetooth 5.1

Wi-Fi: 2.4G/5G Dual band

Projection size: 40"-200"

Zoom: 50%-100%

Keystone Correction: ±45°

Warranty: 24-Month

Projection distance and Screen Size

Image Size (Inch)	Projection Screen L*W (cm)	Lens-Screen distance (M)
40	0.91*0.5	1.1
50	1.13*0.62	1.36
60	1.36*0.75	1.62
70	1.57*0.86	1.85
80	1.78*0.98	2.09
90	2.0*1.11	2.32
100	2.20*1.2	2.53

Warranty

30-Day Money-Back Guarantee for Any Reason

You may return your undamaged product and packaging within 30 days of purchase to receive a FULL REFUND for any reason. If the reason for return isn't quality-related, the customer must pay for the return shipping.

24-Month Warranty for Quality-Related Issues

ETOE Technology's products are warranted to be free from material and workmanship defects for 24 months from the date of purchase. Within this period, ETOE will provide a replacement and cover any return shipping costs for products that fail in normal use.

Please Note: Any provided shipping labels must be used within 20 days from the date they're issued by ETOE Technology Customer Support.

ETOE

Model: A1171

© ETOE Technology Limited.

All rights reserved. ETOE and the ETOE logo are trademarks of ETOE Technology Limited, which is registered in the United States and other countries. All other trade marks are the property of the respective owners.

Manufacturer: HUNAN ETOE Technology Co., Ltd

Address: Room 603, Building 3, Zone A, Jindaoyuan, NO.169, Hutzh Zhong Road, High-tech District, Changsha

E-mail: support@etoe-tech.com

Made in China



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.