

# USER MANUAL



**Please read the manual before using**



## ► Profile:

this pet training device is proved to be safe, effective and comfortable after a long-term market validation and users feedback . It can help you control and train your dog in an effective range. Through the functions of vibration warning, sound warning and static shock punishment, it can realize remote control of barking, correcting dog running, easy recall, and preventing dogs from bad habits like quarreling and attacking people, picking and eating in the outdoor . It will be your best right-hand assistant to train your dog.




## ► Features:

 
- 1.Rechargeable: rechargeable Remote and rechargeable Receiver
- 2.Waterproof Receiver: your pet can swim or walk in the rain with it
- 3.Adjustable Levels: You could adjust the level of Vibration mode and Shock mode from 1-99.
- 4.Four training mode: Shock/ Vibration / Light / Sound
- 5.Three Channels : Choose channel for max 3 Receivers with one Remote
- 6.Auto Power Save :The Remote and Receiver will go into standby mode if no operations within 5 minutes
- 7.Large remote control range: 800M max
- 8.Suitable for all size dogs

## ► Important Notice

- 1.Please charge before first using
- 2.Training collars should be used to help fix behavioral issues, not for punishing /abusing animal.Recommend to use vibration/tone mode to train your dog. Improper use of the shock mode may cause pain/physical injury or may traumatize the dog. So the shock mode should only be used in case of an emergency and should not be used as a form of positive behavior training.Observing the dog's reaction , make sure the training intensity not too much.
- 3.Check your dog' s skin , don' t hurt it by shock.


## ► Key Definition

- ① Antenna: transmit the signal strongly
- ② LED light : Press the button ⑨ to light it , press ⑨ again to be off.
- ③ LCD screen : Show the modes , levels and channels
- ④ + button: press + to increase the levels.
- ⑤ - button: press - to reduce the levels.
- ⑥ Shock button : Press to choose to Shock mode, the screen show  , press + or - button to adjust the levels from 0 -- 99 , press Shock button again to make the Receiver shock.
- ⑦ Sound button : Press to choose Sound mode , the screen show  , the levels of sound can' t be adjusted, press this button to make the receiver sound Bee~~
- ⑧ Vibration button : Press to choose to Vibration mode, the screen show  , press + or - button to adjust the levels from 0 -- 99 , press this button again to make the Receiver vibrate
- ⑨ Light button : Press to light the LED of the Remote, press again , the LED will be off ; If you press this button for 2 seconds, the white LED on the Receiver will be on, press for 2 seconds again , the White LED will be off; If you don' t press this button to shut the Receiver' s white LED off , the White LED will be off automatically after 5 minutes.
- ⑩ Channel button : switch your training channel

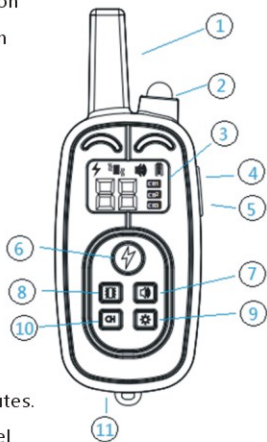

between CH1/CH2/CH3 by press this button

 - Charging hole of the Remote
- Contact points: to install the rubber cap, r each to pet' s skin . Conduct the safe static
- Power button: press to turn on the Receiver , press again to turn off it
- Charging hole of the Receiver
- Indicator light : the light will flash when the receiver is power on or power off , when charging, it will flash.

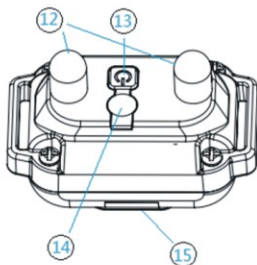

## ► Please charge the Remote and the Receiver before first use

### 1.Charge the Remote :

1. Plug the cable to the charging hole
- 2.Connect the USB charge adapter and plug it into outlet
- 3.When you charging , the battery icon in the screen will be flashing; after charge fully , the battery icon stop flashing



## **2.Charge the Receiver :**

- 1.Open the rubber cover of the receiver' s charging
2. Plug the cable to the charging hole
3. Connect the USB charge adapter and plug it into
- 4.The indicator green LED light will be flashing ;  
after charge fully , the green LED light will stop  
flashing and always on.



## **NOTE:**

 
- 1.Please charge the Remote and Receiver more than 5 hours at first charging.
- 2.When charge the Receiver , it' s in sleep mode, and can' t receive the signal from the Remote.
- 3.There will be showing empty battery icon on the screen of the Remote if it' s low battery.
- 4.If the Receiver is low battery , the indicator light will be on every 1 second.
- 5.Please charge them fully before you keep them idle for a long time , it' s necessary to charge them every one month.

## **► Auto Power Saving system :**

- 1.If no operation on the Remote within 10 seconds , the back lit of screen will be off, and no operation within 30 seconds , the Remote will be sleep mode , the screen display will be shut off , press any button can activate the Remote.
- 2.If no signal to the Receiver within 5 minutes , it will go into standby mode; you could press shock or vibration or sound button to activate it.
- 3.You could turn the Receiver OFF by pressing the power button of the Receiver

## ► Pair the Remote and Receiver

1. Press the shock button or vibration button to turn on the Remote
2. Choose a channel CH1 or CH2 or CH3 by press the CH button
3. Adjust the level by press + or - button , make sure the level above 01
4. Press the Power button of the Receiver by 3 seconds , you hear a sound like Bee~, and the indicator light is flashing; Now quickly, Press the vibration button or Shock button within 10 seconds after the sound Bee~, you can hear a sound Bee~ again , that means the pairing successful.
5. If you have 2 or 3 Receivers , just choose the different channel , and pair as above same steps.

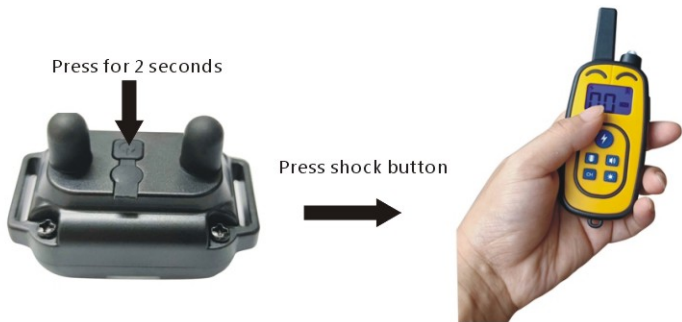

### **Note:**

please remember the channel you choose to pair , if you use another channel without pair , you can't control the Receiver.

**If the training collar set is NOT sensitive, please review the following question.**

- 1) Are the remote and receiver too far apart?
- 2) Are there any barriers/interference between the remote and the receiver?
- 3) Are the remote and receiver fully charged?
- 4) Are the remote or the receivers in standby mode?
- 5) Are the two modes switched frequently?
- 6) Is the button pressed too lightly or are you pressing the center of the button?

**Note:** The IP67 waterproof feature protects the receiver and remote from getting wet. However, they cannot be submerged in the water for a long period of time.

## ▶ **Test the training collar set (After paired successfully)**

### **1. Test the Shock function**

- Take out the test bulb and put it on the Receiver's contact point
- Press the Shock button (make sure the level above 01)
- The test bulb will be on

### **2. Test the Vibration function**

- Press the Vibration button (make sure the level above 01)
- The Receiver will vibrate



### **3.Test the Sound function**

- Press the Sound button (don't need to adjust the level)
- The Receiver will sound bi~bi~

### **4.Test LED function**

Press the LED button to light the LED of the Remote, press again, the LED will be off; If you press this button for 2 seconds, the white LED on the Receiver will be on, press for 2 seconds again, the White LED will be off; If you don't press this button to shut the Receiver's white LED off, the White LED will be off automatically after 5 minutes.

## **► How to wear the Receiver to your pet**

- 1.Put the Receiver on dog's neck
- 2.The contact point reach to the skin of dog, you need to choose the suitable rubber cap.
- 3.Adjust the belt collar, make your dog comfortable.

### **Tips:**

1.Before training, let your dog wear the electric collar for about 5-7 days (no more than 8 hours per day) so that he can be accustomed to the weight of the collar and believe it is just another normal collar.

2. Timing is crucial

The more precise the timing is the quicker your dog will make the association and change his or her behavior.

3. Praise your dog

It will be helpful to praise your dog as soon as it responds to the collar. Reward it with a pat, by saying "good dog", or with a special treat.

## F.A.Q

**Q: How old can a dog use this trainer?**

A: This training device is suitable for most dogs within 25kg, and some heavier dogs can also be used.

---

**Q: My dog has followed my orders. Is there any need for continuous training?**

A: You may also need to strengthen your dog's memory.

---

**Q: The length of the nylon belt collar ?**

A: The length of the collar is 27.5 IN (70 CM)

---

**Q: How weight dogs does this training collar suits for ?**

A: We suggest above 20 lb .

---

**Q: Is the Receiver waterproof?**

A: Yes , it' s totally waterproof, your dog can swim with it.

---

**Q: How long does my dog get training every time?**

A: 10 - 15 min .

---

**Q: The Receiver do not shock or vibrate in auto anti-bark mode**

A: check the level of the Remote , the level of shock or vibration cannot be 00, you could adjust the level

---

**Q: How to adjust the sensitivity level if my dog 's bark is weak**

A: press the Mode button of the Remoter to switch to the microphone icon , then adjust the level from 1-4 by pressing + - button , press Y button to confirm , hearing a bee~ sound means done .

---

**Q:What should i do if the training collar set don't work?**

- A: 1. Check the battery power of the Remote and Receiver , if low battery, charge them.
2. Check the level , if you choose vibration mode or shock mode , adjust to above 001.
3. Check the Receiver , if you don't turn it on , press the Power button of the Receiver.
4. Check the channel , if you choose the different channel , press up/down button to adjust
5. Repair the Remote and the Receiver.
6. Check the metal screw cap if they are too short , change to install the longer cap.

**FCC Requirement:**

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Frequency : 433.92MHZ**

**Transmitter: 3.7V 300ma LIP**

**Receiver : 3.7 V 300ma LIP**

**Made in china**