


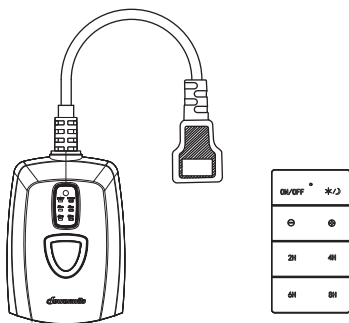

Outdoor Remote Control Dimmer

SKU:HORD02A
[Instruction Manual]



Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

Note:


This dimmer switch only works for dimmable LED bulbs and Incandescent bulbs. Incompatible with non-dimmable bulbs.

Warning:

To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.

1. To prevent water immersion, the dimmer must be mounted in a vertical position with the outlets facing down and at least 2ft above the ground.
2. Do not immerse in water.
3. To avoid overheating or possible damage to other equipment, do not use it to control motor-operated or transformer-supplied appliances.
4. Do not connect any bulbs which may exceed the maximum ratings of this dimmer.
5. Do not disassemble or repair the product unless by authorized service staff.
6. Children are not allowed to use the remote outlets without supervision.
7. To prevent children from suffocation and choking, keep them away from packaging materials.
8. Used batteries should be disposed safely and environmentally.

Product Layout

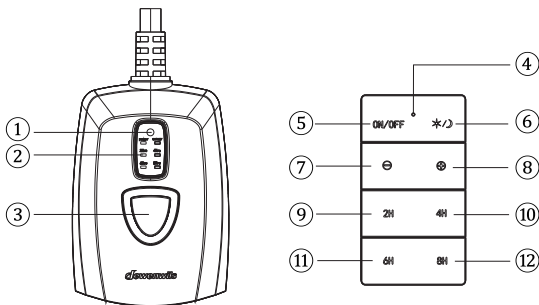

- ① Light Sensor
- ② Receiver Indicators
- ③ Program/ON/OFF Button
- ④ Transmitter Indicator
- ⑤ ON/OFF Button
- ⑥ Light Sensor Button
- ⑦ Dim Button: Turn the light darker
- ⑧ Brighten Button: Turn the light brighter
- ⑨ 2h Countdown Button
- ⑩ 4h Countdown Button
- ⑪ 6h Countdown Button
- ⑫ 8h Countdown Button

Operating Instructions

Notes: The receiver must be located within 100 feet from the remote transmitter. Actual functional range may be affected by the following factors: weather, radio frequency interference, low remote battery, and obstructions between the transmitter and receiver.

1. Remove the isolation tap in the battery compartment on the transmitter.
2. Plug the receiver into a powered outlet.
3. Plug your light into the socket of the receiver.
4. To control your matching devices:
 - 1) Turn the light ON/OFF with ON/OFF button.
 - 2) Use the “+” and “-” buttons to adjust desired dimming level.
Short press for slow dimming, long press for fast dimming.
 - 3) Operating mode
Normally ON/OFF Mode: Press ON/OFF button, and the power indicator on the receiver will light up.

Dusk to Dawn Mode: First press ON button to power on, then press Light Sensor button, then the Sensor Indicator on the receiver will light up, and then the devices will turn on at dusk (with the power indicator light on) and turn off at dawn (with the power indicator light off) each day.

Countdown Mode: First press ON button to power on, and select the preferred countdown time duration by pressing 2h /4h/6h/8h countdown button, then the corresponding countdown indicator on the receiver will light up, and then the device will shut down after the countdown.

Dusk to Dawn and Countdown Mode: First press ON button to power on, then press Light Sensor button, the Sensor Indicator on the receiver will light up, then press 2h/4h/6h/8h countdown button to select the preferred countdown time, the corresponding countdown indicator on the receiver will light up, then the device will turn on at dusk each day (with the power indicator light on) and turn off after the countdown.

Program the Dimmer

Note: The transmitter and receiver have been pre-programmed for immediate use, and the configuration could be customized to meet your needs.

To Program a Remote Transmitter and Receiver:

- 1.Plug the receiver into an outlet, press and hold the programming button on the receiver, the indicator would flash after 5 seconds.
- 2.Release the button, and press any button on your transmitter.
- 3.The indicator stops flashing, showing your dimmer has been successfully paired.
Repeat the steps above, the dimmer allows you to pair with up to 4 transmitters.

Cancelling All Programming

1. Plug the receiver into an outlet, press and hold the programming button on the receiver, the indicator would flash after 8 seconds.
2. Keep holding the programming button until the indicator is off and then release the programming button.

Specifications

- Input Voltage: 125VAC 60Hz
- Max. Load Power: Tungsten 400W, LED 200W
- Transmission Frequency: 433.92MHz
- Remote Battery: CR2032

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

