 



A App Download

(1) Search for "Chef Robot" in the app store to download and install.

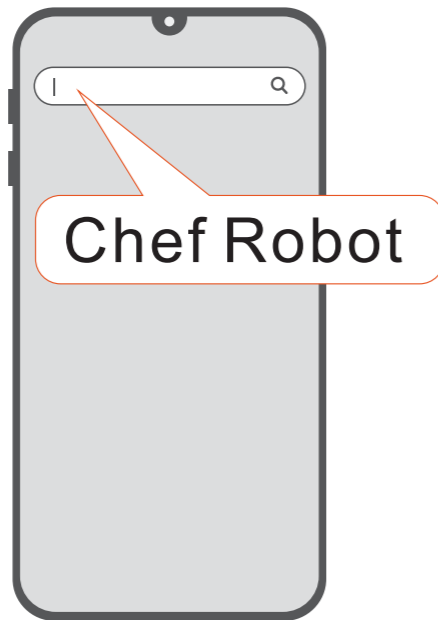


(2) Scan the app QR code to download on machine.

 Press  and press  to enter the following interface

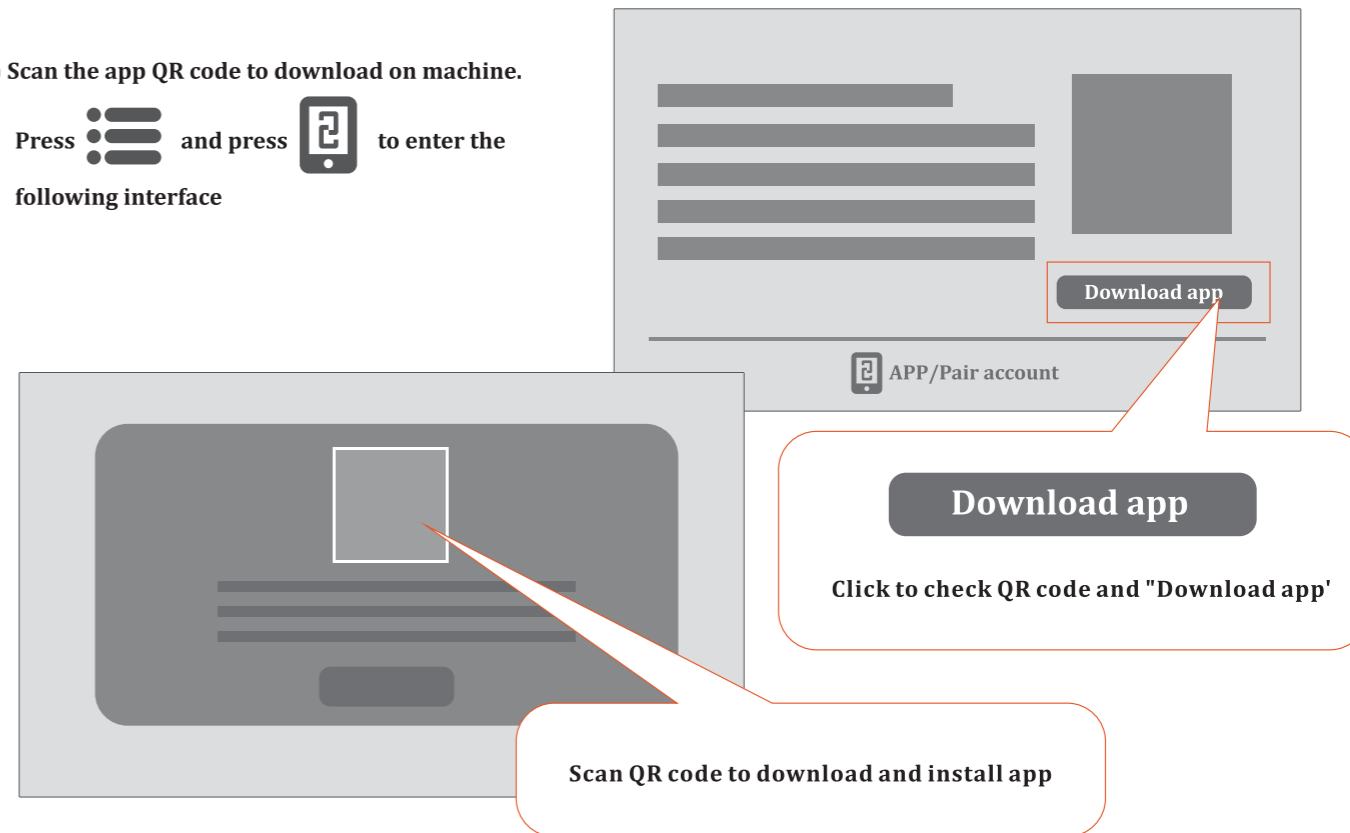


B Pair account

 Press  and press  to launch the following screen

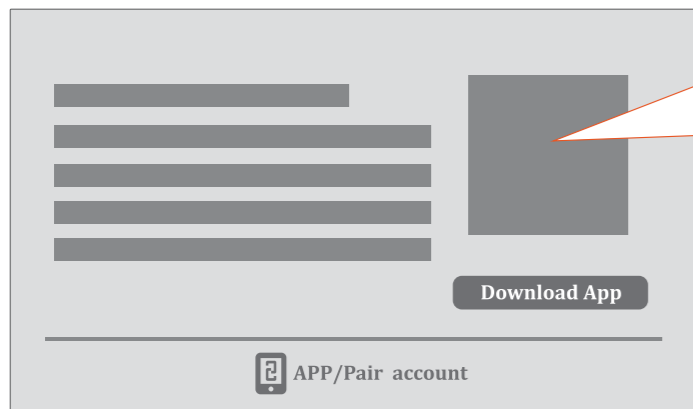


Scan the QR code and pair account

- (1) After registering an account, open the app, click "Profile" - "Chef Robot" or click  - "Add device", and then scan the QR code on machine to pair the account.
- (2) Account registration can only be performed on the app.
- (3) Only one machine can be paired with each app account.
- (4) After pairing with the app, you can access all the functions of machine, including cloud recipes, history self-created, shared, my week, collection, sending app recipes to the machine for cooking and other functions.

C Unpair account

 
Press  and press  to launch the following screen

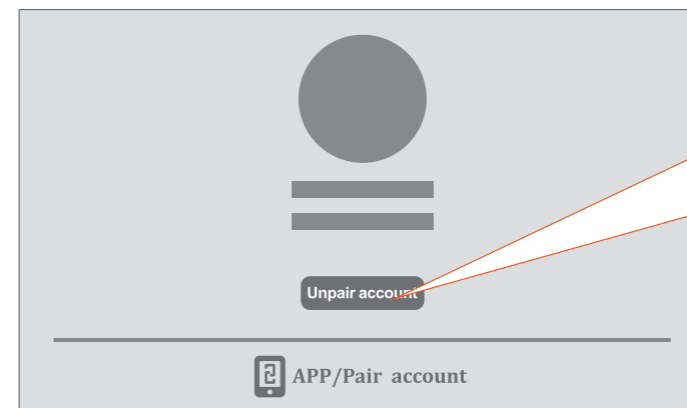


Unpair account

- (1) Click the "App / Pair The Account" - "Unpair"
- (2) App path: click "Profile" - "Chef Robot" - "unpair".
- (3) Both device and mobile app can be unpaired unilaterally
- (4) After unpairing, most functions of the recipe will not be available.

 
4.2.7.3 Operation Guide

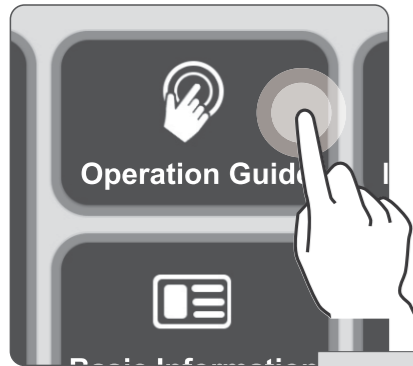

 Press Operation Guide to open the guide.
There are four options to select on the Operation Guide screen:
Safety Guide, Instructions, Speed Guide, and Temperature Guide.
Select any of the options to read the details.

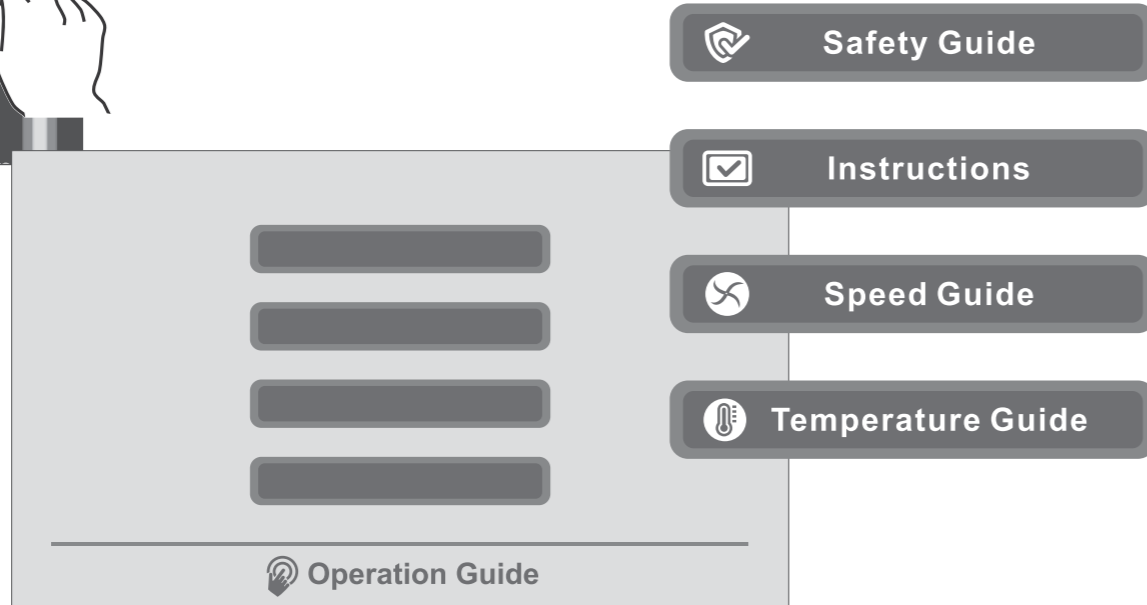

 4.2.7.4 Basic Information

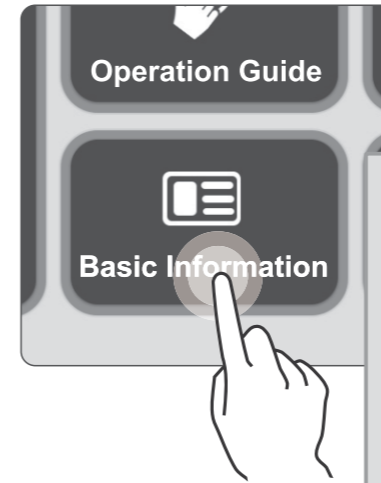

5.0 Troubleshooting

Problem	Solution	When will it appear
E01 Motor locked	Power off and restart the motor after cleaning out the large food stuck under the knife.	When machine is running
E07 Motor overheating	Please wait 10 minutes before restarting the motor	When machine is running
E09 Communication failure	Please unplug the machine, reinsert the plug and power it on again	Anytime possible
E13 Abnormal communication of scale	Please exit the scale screen and re-enter	Scale screen
E17 The motor speed is not controlled	Please unplug the machine, reinsert the plug and power it on again	When machine is running
E18 Bowl is not detected	Put the mixing bowl in place, check the connection between the mixing bowl and the machine, or replace the mixing bowl.	When machine is running
E19 Motor NTC fault	Please unplug the machine, reinsert the plug and power it on again	When machine is running
E20 The bowl lid is not closed	Please close the bowl lid and restart	When machine is running

6.0 Cleaning & Maintenance

6.1 Cleaning the Main Unit

 
- Unplug the main unit before cleaning.
- Clean the main unit only with a dry or damp cloth.
- Do not pour water over the main unit.
- The main unit and electrical cables and the plugs should always be kept dry and clean.
- Do not immerse the main unit in water or other liquids.
- If water has managed to penetrate the main unit, contact our service center.

Caution

- Before cleaning the main unit, disconnect the machine from the power supply.
- If water penetrates into the electrical components, you are in danger of an electric shock.

6.2 Self-Cleaning

- Using the self-cleaning mode of the quick functions, you can quickly clean the stubborn and sticky food left in the bowl and on the blade, such as dough.
- The time of self-cleaning can be adjusted according to your own needs.

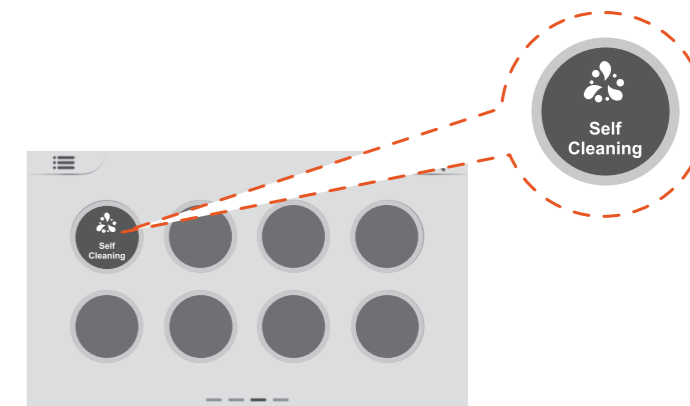

6.3 Cleaning the Mixing Bowl

How to clean the mixing bowl?

1. Remove the mixing bowl from the machine and remove the mixing blade as well if needed.
2. Scrub with a mild detergent and soft cleaning cloth, then rinse with water and let dry.
3. It's recommended that you not put the mixing bowl in the dishwasher.

⚠ Caution

The mixing blade is extremely sharp. Please be very careful when removing it.

 
⚠ Attention

- Do not use abrasive objects, such as steel wool, to clean the mixing bowl. Doing so could damage or negatively affect the capacity to use the mixing bowl.
- To prevent corrosion, don't use corrosive cleaners to clean the mixing bowl. Be sure to fully dry the connection pins promptly after cleaning.

6.4 Cleaning the Mixing Blade

How to clean the mixing blade?

- Hold the upper part of the mixing blade, clean with a soft cleanser then rinse with water and let dry.
- The mixing blade is also dishwasher-safe.

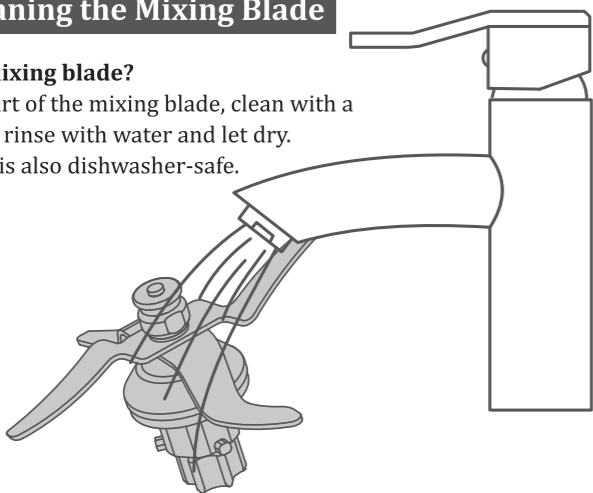

⚠ Attention

- To prevent corrosion and rust, don't use corrosive cleaners to clean the mixing blade.
- Rust on the mixing blade is harmless, but it can be removed using a soft brush or vinegar.
- Don't soak the mixing blade in water for long periods of time. This can cause the mixing blade seal to lose its efficacy.

6.5 Cleaning other accessories

How to clean other accessories (steamer, basket, measuring cup, spatula, and butterfly)?

 
- All the accessories are made of high quality food grade plastic. They can be cleaned with a mild detergent and soft cleaning cloth.
- The accessories are also dishwasher-safe.

6.6 Storage & Maintenance

- No oil is needed when change to doing the maintenance.
- Store the machine in its original packaging in a dry area. Keep away from children and pets
- Do not expose to direct sunlight.
- Any other servicing than mentioned in this manual should be performed by an authorized repair center
- Ensure that the mixing bowl and especially the connection pins underneath are thoroughly dried after cleaning. If you use the mixing bowl when it is still wet, rust could form inside the main unit.
- Let the mixing bowl dry completely before inserting it into the main unit.

⚠ Warning




Any other servicing should be performed by an authorized service representative.

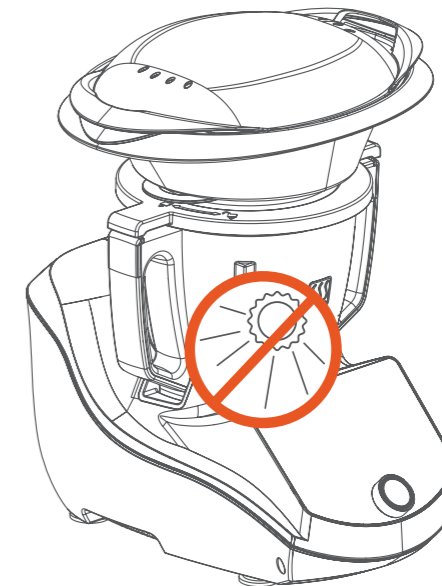

7.0 GROUNDING INSTRUCTIONS

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle. The appliance has a plug that looks like sketch A. An adaptor, sketch B, should be used for connecting sketch-A plugs to two-prong receptacles. The grounding tab which extends from the adaptor must be connected to a permanent ground such as a properly grounded outlet box as shown in sketch C using a metal screw.

   Grounding methods

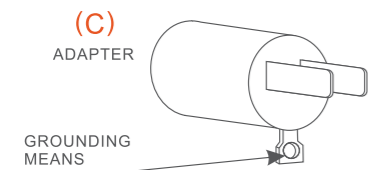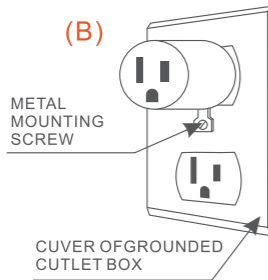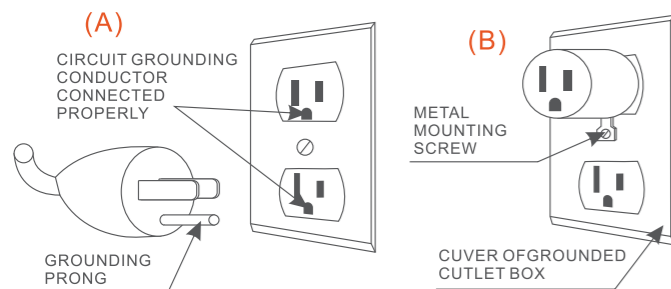

8.0 Specifications

Model	CR-7
Size of unit with bowl	16.8" x 12.7" x 14"
Net weight of unit	19.8 lbs
Color	White/Black
Cord length	130CM
Heater	1200W
Motor	500W
Voltage	120V 60Hz
Units per master	1 Set
Carton size	20.3" x 14.8" x 21.7"
Carton weight	27.6 lbs

9.0 Certifications



10.0 Disposal

This symbol means that electrical and electronic appliances may not be disposed of in the normal household waste. Please check your local guidelines for instructions on how to dispose of electronic devices.

