 


WALKING PAD UNDER DESK TREADMILL

Model: N38

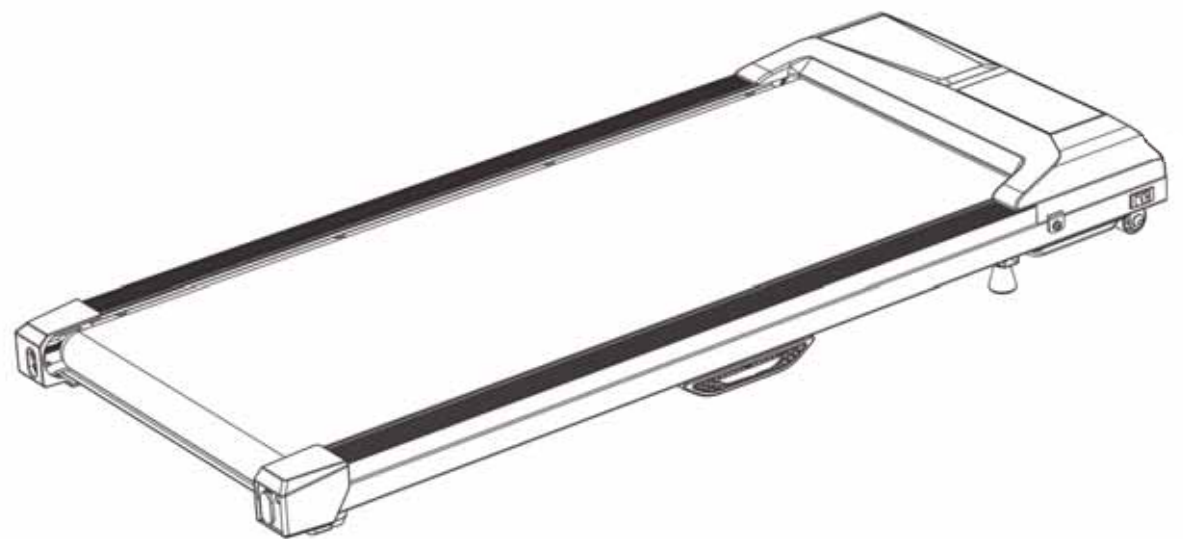

Official Website
<https://uswellfit.com/>



USER MANUAL

***Thank you for selecting treadmill. To provide a better using experience, please read this manual carefully before operation or maintenance, and SAVE THESE INSTRUCTIONS for future reference.**

Contents

- 1. Customer Support 1
- 2. Important Precautions2
- 3. Product Introduction3
 - 3.1. Product Diagram 3
 - 3.2. Console Diagram 3
 - 3.3. Package Contents5
 - 3.4. Specifications 5
- 4. Product Setup Instructions 5
 - 4.1 The Product Assembly5
 - 4.2 The Remote Control Setup6
 - 4.3 The Smart App Setup7
- 5. WELLFIT Health & Fitness App9
- 6. Exercise Instructions10
- 7. How to Fold and Move the Treadmill 11
- 8. Maintenance & Care12
 - 8.1 Centering the Running Belt13
 - 8.2 Tighten the Running Belt 14
 - 8.3 Running Belts & Treadmill Lubricant14
- 9. Troubleshooting 16

1. Customer Support

HOW TO CONTACT US ON AMAZON?

3 WAYS TO CONTACT US,BEFORE/AFTER ORDER

24/7/365 Online Service, response within 5 hours

OPTION 1:

Find the Seller Profile -- have a question for seller, ask a question -- an item for sale -- Product details



OPTION 2:

Product details page -- “Customer questions & answers” part -- post your question



OPTION 3:

For technical support, the user manual and other information, you can also contact us via support@uswellfit.com



 
2. Important Precautions

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons, read all important precautions and instructions in this manual and all warnings on your treadmill before using your treadmill. Seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


1. It is the responsibility of the owner to ensure that all users of this treadmill are adequately informed of all warnings and precautions.
2. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
3. Keep the treadmill indoors, away from moisture and dust. Do not put the treadmill in a garage or covered patio, or near water.
4. Do not operate the treadmill where aerosol products are used or where oxygen is being administered.
5. During running, it's recommended to wear athletic shoes. Never use the treadmill with bare feet, wearing only stockings, or in sandals to avoid injury.
6. The treadmill is capable of high speeds. Adjust the speed in small increments to avoid sudden jumps in speed.
7. Read, understand, and test the emergency stop procedure before using the treadmill.
8. Never leave the treadmill unattended while it is running. Always press the power switch into the off position, and unplug the power cord when the treadmill is not in use.
9. The treadmill should be used only by persons weighing 300 lbs. (136 kg) or less.
10. Please add 10ml of lubricant before first use. Add lubrication oil every 3-4 months.
11. Treadmills are made by fusing the belt together, which creates a seam. The seam is made when the belt is heated up, and all belts are tested to make sure they're good quality. This way of making treadmill belts is the standard in the industry, so you can trust that they're strong and will last a long time.

3. Product Introduction

3.1 Product Diagram

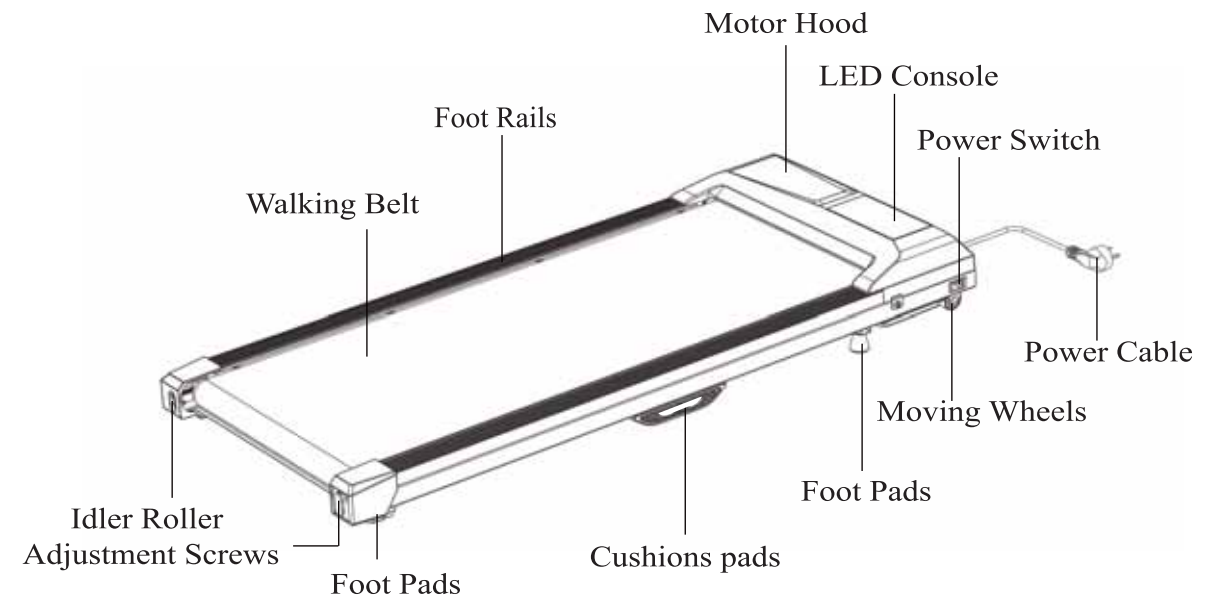

 3.2 Console Diagram

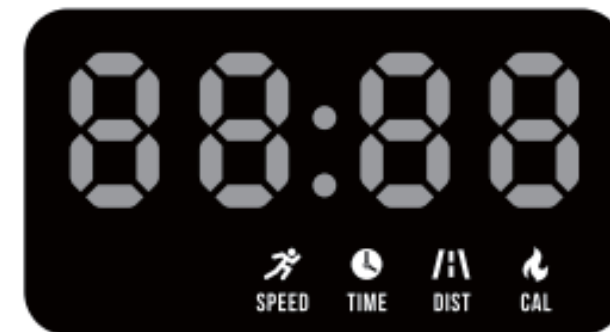

Window Display

During operation, automatically switch the display window every 5 seconds between the "SPEED", "TIME", "DIST" and "CAL" data.

The information displayed on each window is as follows:

- 1. Speed:** the speed range is 0.6-3.8 mph.
- 2. Elapsed Time:** range from 0:00 to 99: 59 (mins : sec)
 - Display starts at 0:00, minutes: seconds.
 - When time elapses reaches 99:59 , the machine will continue running. It will start counting again from 0:00, and all the data will be automatically accumulated in the WELLFIT App.

3. Distance: Displays the distance traveled 0.0-99.99 Miles.

When the data reaches max, it will start counting again from 0.00, and all the data will be automatically accumulated in the WELLFIT App. The machine will continue running.

4. Calories: the display is 0~9999 kcal

When data reaches the maximum, the machine will continue running. It will start counting again from 0, and all the data will be automatically accumulated in the WELLFIT App.

3.3 Package Contents

Description	Qty.	Description	Qty.
Treadmill Body	1	Lubrication Oils	2
User Manual	1	Tools pack	1

3.4 Specifications


Power Supply	AC 120V, 60Hz
Peak Motor Power	2.5 HP
Speed Range	0.6-3.8mph
Product Size	44.3*19.2*4.9 inch
Controlling Mode	App \ Remote Control

4. Product Setup Instructions


4.1 The Product Assembly

Install the foot pads correctly.

 Turn the treadmill sideways and screw the foot pads off the screw holes as shown in the figure above. The foot pads not only help you to change the incline but also decrease cushions.

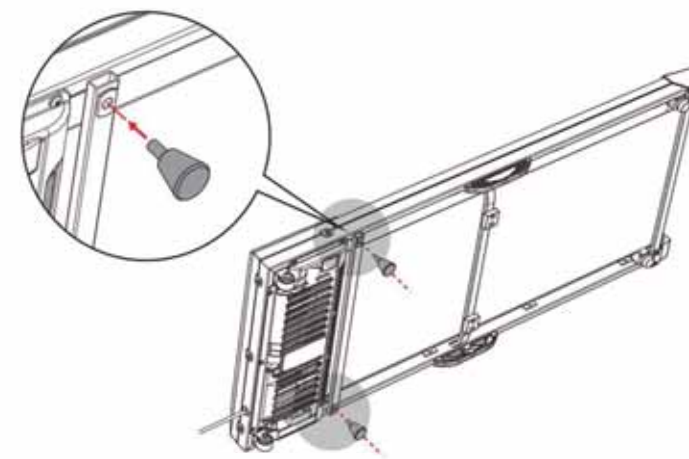

 ⚠ Important: If the ground is uneven or the treadmill is shaking, please adjust the four adjustable foot pads at the bottom of the treadmill to appropriate positions, the foot pads must fit the ground.

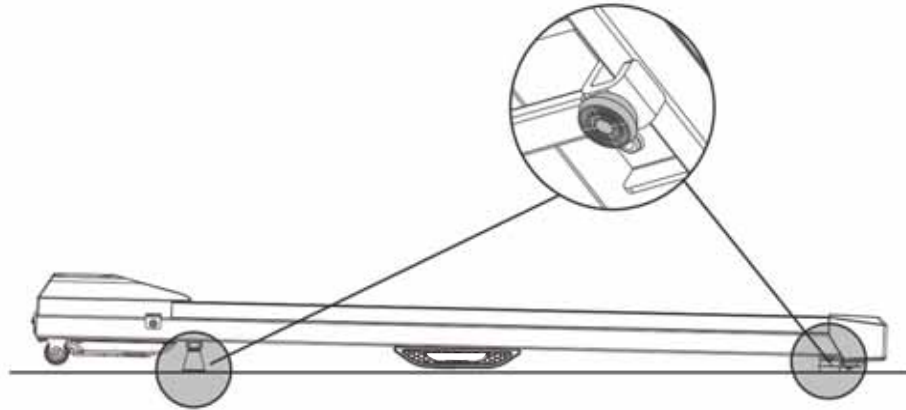

4.2 The Smart App Setup

Step 1. Scan the QR code to download "WELLFIT FITNESS" App, you can also search "WELLFIT FITNESS" from  or  to install the App.



or

 


Step 2. Run the "WELLFIT FITNESS" App, tap "Register" to register a "WELLFIT FITNESS" account with your email or login with Google account.

Then sign in.

Step 3. Turn on your mobile phone Bluetooth and Location enable your treadmill to be found.

Follow the steps as below pics shown.

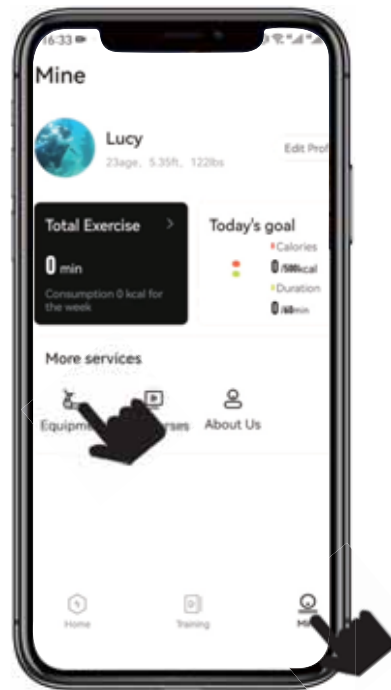

Step 1



Step 2



 
Step 3




Step 4

5. WELLFIT Health & Fitness App


Explore more functions and wonder how to use the above functions in detail, please kindly contact us via support@uswellfit.com, so that we can offer a video demonstration.

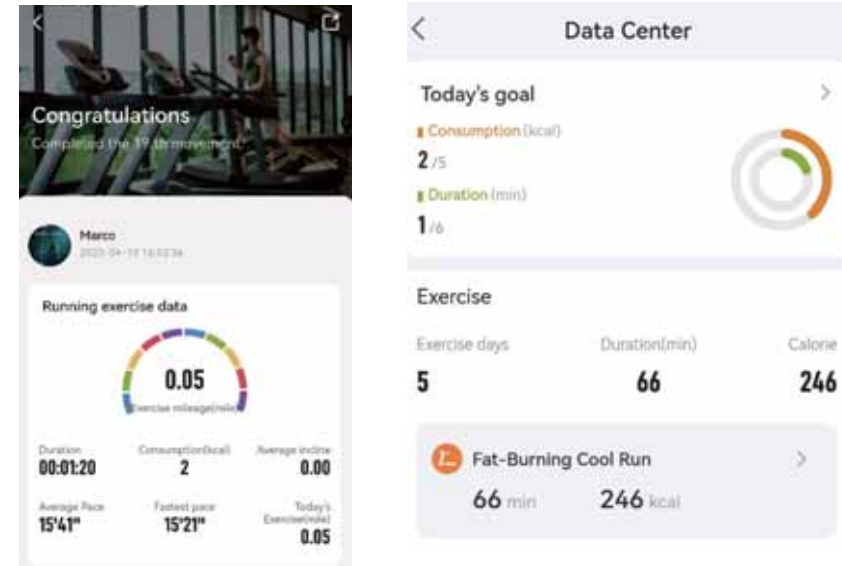

 1. Workout statistic track and analyse

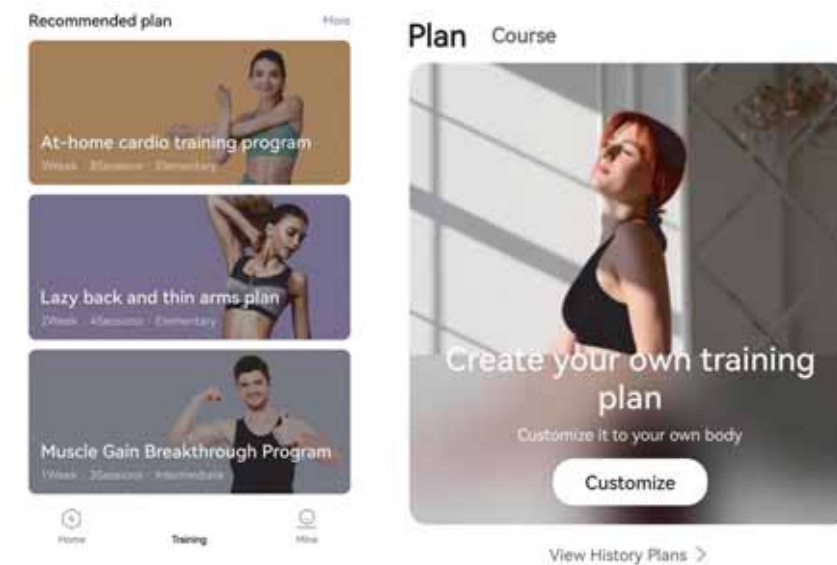


 2. Workout plan setting and reminder

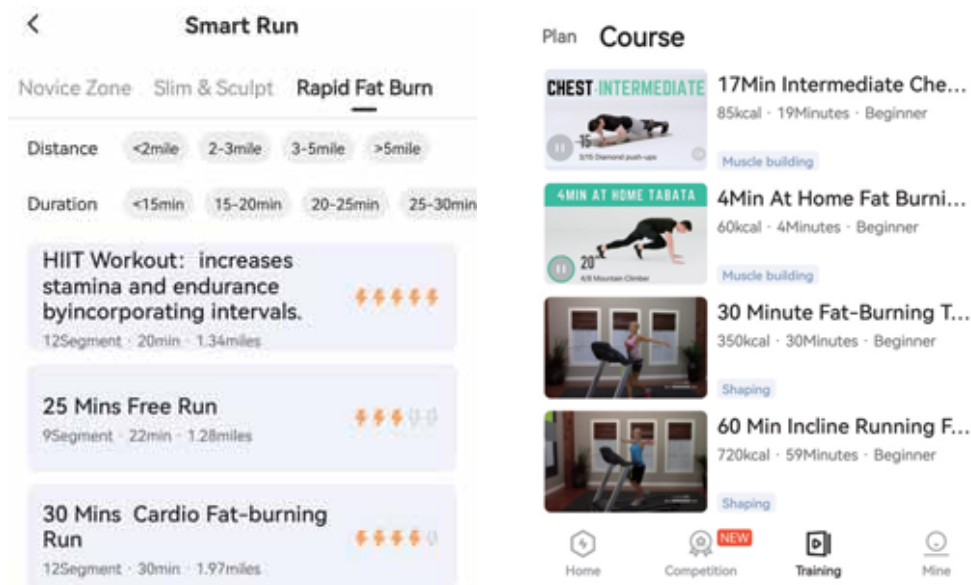

3. Diverse free training course

 1. No matter how fast you walk, it's best to stretch first. Warm muscles stretch more easily, so take 5-10 mins to warm up. Do it again after the exercise.
2. Once you get on, you can stand with your feet on the side rails, stabilize yourself
3. Press the START button on the remote control or app page to start the machine.
4. The machine will start at the system default setting speed of 0.6 MPH. when you feel comfortable, you may slowly increase this speed.

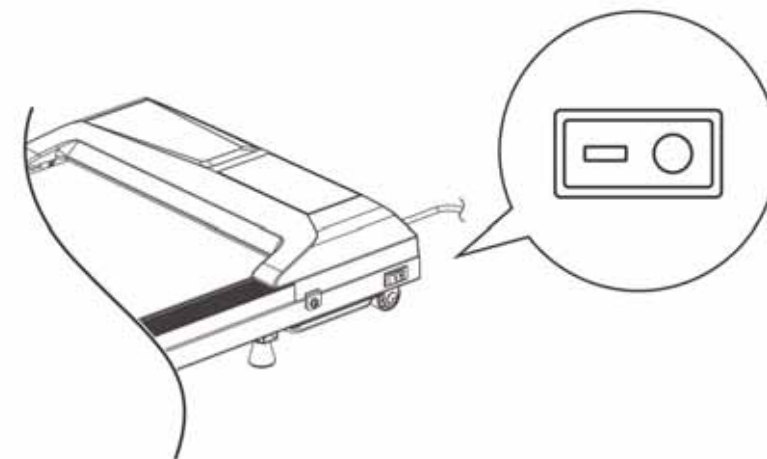

6. Exercise Instructions

GETTING STARTED:

Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising immediately if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, light headache, dizziness, or feelings of nausea.

 
Get to know your treadmill. Before attempting to use the treadmill take some time to stand alongside and familiarize yourself with the controls.

Before Use: Plug in the power cord, turn on the switch, and the treadmill enters standby mode.

After Use: When you are finished with your exercise, switch off the walking pad and unplug the power cord.

7. How to Move the Treadmill

To move the treadmill, unplug the power cord, fold and hold the frame until the wheels are able to move on the ground.

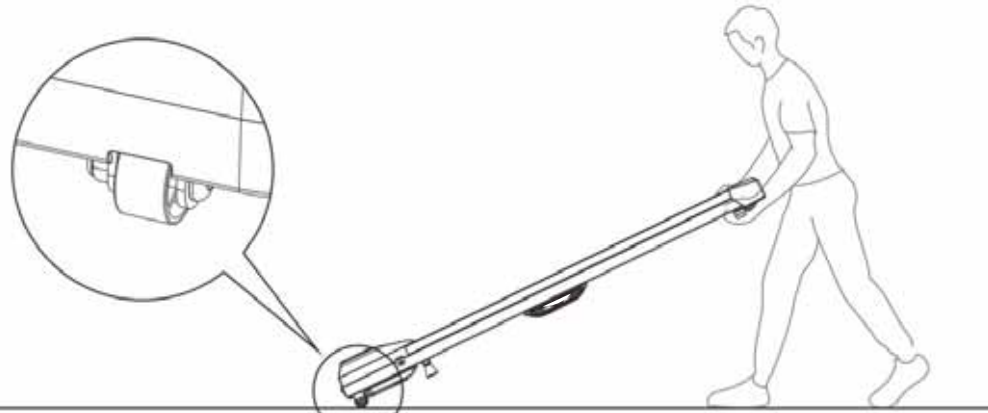

8. Maintenance & Care

General cleaning will help prolong the life and performance of your treadmill. Keep the unit clean and maintained by dusting the components on a regular basis. Clean both sides of the running belt to prevent dust from accumulating underneath the belt. Keep your running shoes clean so that dirt from your shoes does not wear out the running board and belt. Clean the surface of the running belt with a clean damp cloth.

- > To better maintain the treadmill and prolong its life it is suggested that the machine be powered off for 10 minutes every 2 hours and fully powered off whenever not in use.
- > The moving parts should turn freely and quietly. Abnormality of moving parts will affect the safety of the equipment. Inspect and tighten bolts regularly.

 
8.1 Centering the Running Belt

Place the treadmill on level ground and set it at 2.0-3.6 mph to check if the Running Belt drifts. Before and after installation, all treadmills need to undergo belt alignment. However, over time, the treadmill may still experience belt deviation. The possible causes for this phenomenon are as follows:


1. Uneven placement of the main unit.
2. User's feet not centered on the treadmill while exercising.
3. Uneven distribution of force applied by the user's feet.

If the belt deviation is caused by user error, it can be resolved by running the treadmill without any load for a few minutes. If the issue persists and cannot be automatically corrected, please use the provided Allen Wrench to adjust the belt alignment gradually as following.

1. If the Running Belt moves to the right, turn the adjusting bolt on the right side 1/4 turn clockwise, then turn the left adjustment bolt 1/4 turn counter-clockwise. If the belt does not move, keep adjusting 1/4 turn at a time until it centers. Refer to picA.

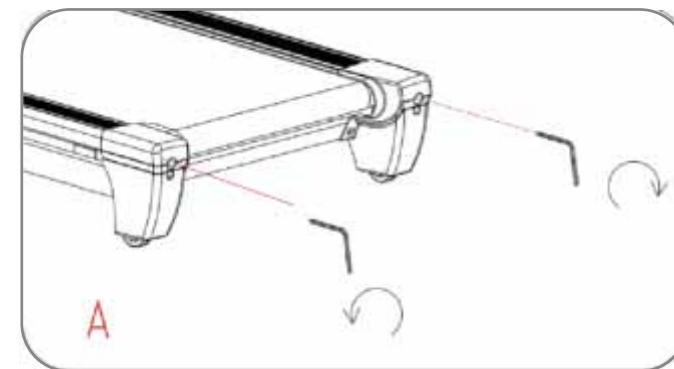

 2. If the Running Belt moves to the left, turn the adjusting bolts on the left side 1/4 of a turn clockwise, then turn the right adjustment bolt 1/4 turn counter-clockwise. If the belt does not move, keep adjusting 1/4 turn at a time until it centers. Refer to pic B.

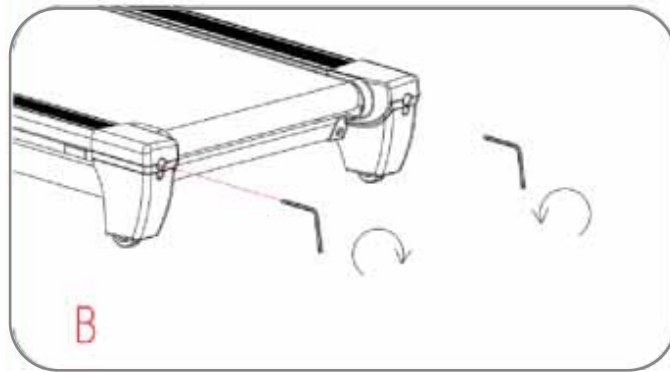


8.2 Tighten the Running Belt

The most suitable tightness for the belts is pulled out 0.2-0.3 inch (two fingers height) from the Running Board.

>A loose Running Belt will result in the runner sliding off when running, while too tight of a Running Belt will result in decrease to the motors performance and also create more friction between the roller and running belts.

Over time the Running Belt will loosen. To tighten the belt turn the Left & Right side adjustment bolts one full turn clockwise, check the tension of the belt.

 Continue this process until belt is at the correct tension. Make sure to adjust both sides equally to ensure correct belt alignment. Refer to pic C

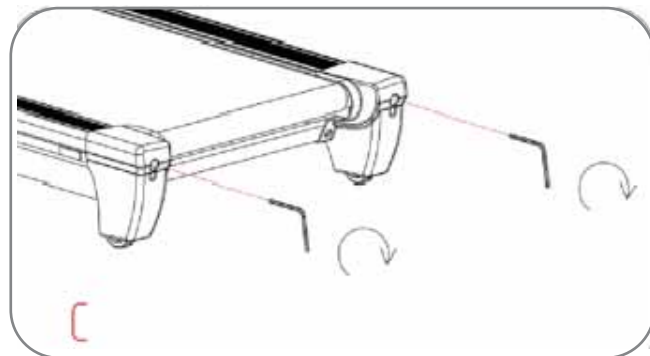

8.3 Running Belts & Treadmill Lubricant

★NOTE: You will need to lubricate your treadmill before the first use

Lubricating the running board and running belt is essential as the friction between the two affects the lifespan and function of the treadmill, therefore it is suggested that the running board and belt be inspected regularly. Should you find any wear on the Running Board, please contact us at:

support@uswellfit.com.


Lubrication Check:

To determine if lubrication is needed, simply grab the treadmill belt and touch your hand to the center of the backside of the belt. If your hand feels slightly damp or has a silicone residue, it means no additional lubrication is required. However, if the belt feels dry and there is no residue on your hand, lubrication is needed.

NOTE: Excessive lubrication is not recommended.

Suggestion:

The following time table is recommended :	
Light user (less than 3 hours/week)	every 6 months
Medium user (3-5 hours/week)	every 3 months
Heavy user (more than 5 hours/week)	every 2 months

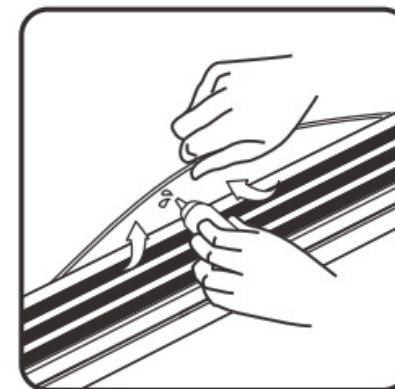 

Lubricant Steps:

1. Turn off the treadmill.
2. Lift a small section of the belt and apply methyl silicone oil on the inner side, towards the center.
3. Set the treadmill to a speed of 0.6 mph and run it smoothly. Lightly step on the belt from left to right for a few minutes to ensure even distribution and absorption of the oil.

9. Troubleshooting

PROBLEM	POSSIBLE CAUSE	SUGGESTED ACTION
Treadmill will not start	Not plugged in/power is not switch on.	Plug cord into outlet, turn on the treadmill.
	circuit signal system open circuit.	Check controller inputs and signal lines (contact customer support).
Running belt not centered	Running belt tension not correct on the left or right sides of the running board.	Tighten the adjustment bolts on the left and right side of the rear roller.
The running belt does not run smoothly.	Lack of lubrication.	Add lubrication oil.
	Running belt is loose.	Adjust the running belt tightness.
The running belt slipping.	Running belt is too loose.	Adjust the running belt tightness.
	Motor Belt is too loose.	Please first adjust the running belt tightness, if still no function, please contact service support for help.
E01 or E13: Message failure	Wires from the computer and bottom control board not properly connected.	Check wire connections from the computer to the control board. If the wire has been punctured or damaged, you will need to replace it. If the problem is not rectified, you may need to replace the control board.
E02: Burst clash protection	Incoming voltage is lower than 50% of the required voltage.	Check that the incoming power supply is the correct voltage. Otherwise, the control board needs to be replaced.

E03/E04: Current overload protection (Self Protecting System)	The incoming voltage is too low or too high. The control board is damaged.	Restart the treadmill. Check the incoming voltage to ensure it's correct. Check the control board and wires, replace it if damaged.
	A moving part of the treadmill is stuck and therefore the motor is unable to rotate properly	Inspect moving parts of the treadmill to ensure that they are operating correctly. Check the motor, listen for strange noises and check for a burning smell. Replace the motor if necessary.
E05: Motor Abnormality	The motor is damaged or a moving part of the treadmill is stuck and therefore the motor is unable to rotate properly	Inspect moving parts of the treadmill to ensure that they are operating correctly. Replace the motor if necessary.
E06: Motor Abnormality	The motor wire is not connected or the motor is damaged.	Check motor wires to see if the motor is connected. If the wire has been punctured or damaged, you will need to replace it. If the problem is not rectified, you may need to replace the motor

NOTE: If you are unable to resolve an issue using the troubleshooting guide above, please contact Customer Service at support@uswellfit.com

IC Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le present appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisee aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioelectrique subi, meme si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with RSS-102-Radio Frequency (RF) Exposure guidelines,

this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

le dispositif de a ete evalue a repondre general rf exposition exigence.pour maintenir laconformite avec les directives d'exposition du RSS-102-Radio Frequence (RF).ce materiel doit etre installe et exploite a une distance minimale de 20 cm entre le radiateur et votre corps.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance.

Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20cm between the radiator and your body, and fully supported by the operating and installation