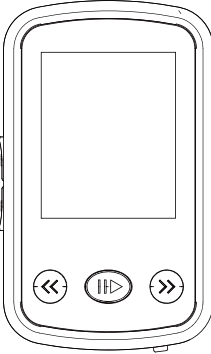 
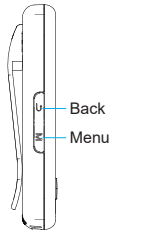 
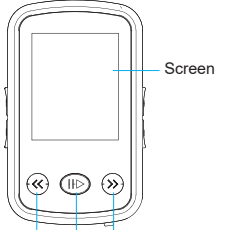 
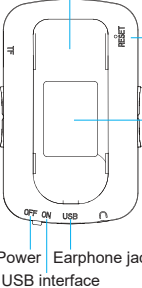 
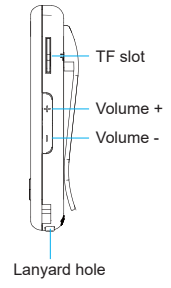 
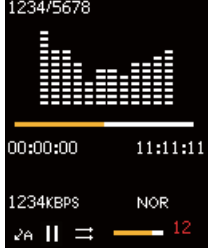 



<div>MB07 User manual</div> <div></div> <div>Thank you for purchasing our products! In order to allow you to operate this product proficiently, we are equipped with a detailed manual, so that you can better use the product.</div> <div>V2</div>	<div>Function introduction</div> <div><ul style="list-style-type: none">• This mp3 player uses a color 1.7-inch TFT screen.• Support MP3, APE, FLAC, OGG, WMA, WAV, AAC-LC, ACELP formats.• Supports high-definition WAV, MP3 formats and 8 sampling bit rates recording.• Support high-definition JPEG, BMP, GIF format picture browsing.• Support TXT, LRC format text file reading, support external TF card expansion.• Support high-definition resolution AMV, AVI format video playback.• Support TYPE-C high-speed interface transmission.• Practical gadgets to meet your different needs, calendar, stopwatch, alarm clock.</div> <div>1</div>	<div>Button function distribution</div> <div><div></div><div></div><div></div><div></div></div> <div>2</div>	<div>Button function introduction</div> <div><div> Previous/Rewind; Next/Fast forward</div><div> Play/Pause/Confirm</div><div> Back</div><div> Menu button</div><div> Adjust volume</div></div> <div>Main Disk Directory: Built-in memory Card catalog: External expansion card (TF card)</div> <div> Bluetooth Press "/</>" to select Bluetooth, press to enter Bluetooth, Automatically start searching (please turn on the Bluetooth device when searching), Press to pair.</div> <div>Menu 1: Bluetooth switch control: Bluetooth on, Bluetooth off. 2: Search for devices: When Bluetooth is turned on, you can search for Bluetooth devices (headphones, speakers). When the name of the Bluetooth device appears, click the play button and select "Connect". Bluetooth pairing is now complete.</div> <div>3</div>	<div>3: Device list: display the names of connected devices. 4: Play via Bluetooth: you can play music files via Bluetooth. Note: 1) Please make sure that the Bluetooth device is turned on and in a pairable state. 2) If you cannot enter the search state, please unpair the existing device first, and then search for the device again. 3) Please make sure your Bluetooth device is not connected by other machines.</div> <div> Music Press "/</>" to select Music, press to enter Music, Now playing, last time playing, all songs, artist, album, style, directory list, playlist, update playlist, (if there is a TF card inserted, there will be a main disk directory, card directory)</div> <div>Now playing: The song is currently playing. Last play: press the play button to enter and directly play the last listened song. All songs: arrange all the music in the order of the music time copied into the player. Singer: List the singers of all songs in the internal memory in alphabetical order.</div> <div>4</div>	<div>Album: Display in alphabetical order of the first letter of the album name. Style: Sort by song style. Update the playlist: copy the songs into this machine, if you can't read this file, you can update the media library to appear. Music playback screen: </div> <div>1) Select "All songs" press to play music, press to next song, press to previous song. Long press or can rewind or fast forward the song. When playing, press to pause playing. Volume adjustment: Press the volume or volume key to adjust the volume when playing music.</div> <div>5</div>	<div>Lyrics display This machine supports synchronous display of lyrics files in the format of " *.LRC " during playback. (*LRC) The lyrics file name must be the same as the song name. For example: if the song named as Big Big World.mp3 Then the name of the lyrics should be: Big Big World.lrc The player will automatically recognize the lyrics file with the same name as the song and display it synchronously.</div> <div>Music menu settings When playing/pausing music, short press the menu button to enter the music sub-menu settings. The music sub-menus include: play mode, equalizer, variable speed playback, enter playlist, delete from playlist, bookmark, single delete, delete all, press Next to select the menu you need and press the play button to confirm.</div> <div>1. Play mode: Press play button to enter 1) Play in order: play in the order when the songs are copied in. 2) Single repeat: play current file in loop.</div> <div>6</div>	<div>3) Repeat all: loop all files. 4) Browsing play: play the first 10 seconds of all songs in the current directory in sequence.</div> <div>2. Shuffle Playback: Randomly play all files, press to turn on/off.</div> <div>3. Repeat settings: a. When playing music or voice, short press the "menu button" to enter the "play mode", select "repeat settings"→repeat mode" and then press the "play button" to confirm the start point A, the screen will display the mark A flashing. b. Press the "Next" button to confirm the end point B. Point "B" will flash on the screen, press the "next" button to display the mark "A-B" and start repeating. c. Repeat times: The system defaults to 5 times, and you can press the "Next/Previous" button to adjust 1-10 levels of repeat. Press "Play" button to confirm. d. Repetition interval: Repetition time from A-B. Press Next/Previous button to adjust for 1-10 seconds. Press "Play" button to confirm. ※ The system repeats 5 times by default, or you can press "Next" to exit.</div> <div>7</div>	<div>4. Equalizer: Press Next/Previous button to select the music format you like; press "Play" button to confirm. Variable speed playback—Press Next/Previous to enter fast play or slow play, and press "play" to confirm. Choosing this function will cause the song to change, please choose carefully. 5. Delete: Press the "Next/Previous" button to select the content to delete, select "Yes"; press the "Play" button to confirm, the deleted content is the current one or all music files.</div> <div>Video 1. In the main menu, select "Video". 2. Press the play button to enter the video mode, and press the Next/Previous button to select the previous video/next video. Press play button to play or pause, long Next/Previous button can rewind or fast forward play. 3. Press the volume "+, -" key to adjust the volume. 4. In the video directory interface, long press the menu button to set, delete, update, etc.</div> <div>8</div>	<div>Video 1) Select recording, press the play button to enter the recording, select to start voice recording, press the play button to confirm to enter the recording interface and start recording. </div> <div>Press the play button during recording to switch between pause/continue recording status. During the recording process, press the return button to prompt whether to save the recording, press the "Next/Previous" button to select "Yes" and press the play button to confirm and return to the directory interface. Recording library: All recording files are saved here. Just select the recording file to play.</div> <div>9</div>
--	--	--	---	---	---	--	--	---	---

<p>Storage location: Choose whether the recording file is built-in or TF internal and external (the memory function will be displayed when a TF card is inserted).</p> <p>Recording format: MP3/WAV.</p> <p>Recording settings: recording bit rate.</p> <p>MP3: 32kbps/64kbps/128kbps/192kbps</p> <p>WAV:512kbps/768kbps/1024kbps/1536kbps</p>	<p>the menu button to enter the sub-menu, and you can choose: auto play time setting, delete e-book, bookmark selection, delete bookmark, add bookmark, page number selection, font size, background setting, operation mode, press play button to enter , Press Next/Previous button or volume +,-to select the function, then press the play button to confirm, short press the back button to return to the previous level or main menu.</p>	<p>2: Select "Alarm Time", press Next/Previous button to select minutes and seconds; press Volume+ - to adjust minutes and seconds; press play button to confirm after adjustment.</p> <p>3: Alarm clock cycle (single time means once, daily means every day, weekday means Monday to Friday) Press Next/Previous button to select, press "Play" button to confirm.</p> <p>4: Alarm music: press "play" button to enter, press Next/Previous button to select and confirm.</p> <p>5: Alarm volume: press "play" button to enter, press volume + - to increase or decrease.</p> <p>Note: After the adjustment is completed, press "back" to return to the upper directory or main interface, and the switch of the machine should be kept in the "ON" state. When the time comes, the machine will ring automatically. Be sure to adjust the machine time to the local accurate time before timing.</p>	<p>2) Set the date, press the play button to enter the option, press the Next/Previous button to select the date format; DD stands for day; MM stands for month; YYYY</p> <p>Represents the year; press the play button to confirm after selection. Then select the set date, press the Next/Previous button to switch the year, month, and day; press the volume +/- to adjust. After setting, press the play button to confirm.</p>	<p>Player information: Press the play button to enter, view the machine version information.</p> <p>disk space: Press the play button to enter, check the memory or TF card memory space. Need to wait for 10 seconds when viewing.</p> <p>Format device: Press the play button to enter, select the memory to be formatted, press the Next/Previous button to select "Yes, No", select "Yes", all files in the machine will be deleted, please operate with caution.</p> <p>Factory setting: Press the play button to enter, press the Next/Previous button to select "Yes, No", select "Yes" to restore all the function settings to the factory settings.</p>	<table><tr><th colspan="2">Specifications</th></tr><tr><td>Dimensions</td><td>100*51*8mm</td></tr><tr><td>Screen</td><td>1.7 inch TFT display screen</td></tr><tr><td>Memory space</td><td>16GB/32GB</td></tr><tr><td>Video format</td><td>AVI, AMV</td></tr><tr><td>Video resolution</td><td>320*240</td></tr><tr><td>Music format</td><td>MP3、APE、FLAC、OGG、WMA、WAV、AAC—LC ACELP</td></tr><tr><td>Picture Viewer</td><td>JPEG、BMP、GIF</td></tr><tr><td>MP3 bit rate</td><td>32/64/128/192Kbps</td></tr><tr><td>WMA bit rate</td><td>512/768/1024/1536Kbps</td></tr><tr><td>EQ</td><td>Normal, Rock, Funk, Ship Hope, Jazz, Classical, Electronic Music, Custom</td></tr><tr><td>Signal to noise ratio</td><td>≥90dB</td></tr><tr><td>Storage medium</td><td>Built in FLASH</td></tr><tr><td>Expansion slot</td><td>TF card</td></tr><tr><td>Interface Type</td><td>TYPE-C USB2.0 (high speed)</td></tr><tr><td>Battery</td><td>Built-in polymer battery 293345(420mAh)</td></tr><tr><td>Operating</td><td>0 to 45 degrees Celsius</td></tr><tr><td>Pperating</td><td>Support Windows</td></tr></table>	Specifications		Dimensions	100*51*8mm	Screen	1.7 inch TFT display screen	Memory space	16GB/32GB	Video format	AVI, AMV	Video resolution	320*240	Music format	MP3、APE、FLAC、OGG、WMA、WAV、AAC—LC ACELP	Picture Viewer	JPEG、BMP、GIF	MP3 bit rate	32/64/128/192Kbps	WMA bit rate	512/768/1024/1536Kbps	EQ	Normal, Rock, Funk, Ship Hope, Jazz, Classical, Electronic Music, Custom	Signal to noise ratio	≥90dB	Storage medium	Built in FLASH	Expansion slot	TF card	Interface Type	TYPE-C USB2.0 (high speed)	Battery	Built-in polymer battery 293345(420mAh)	Operating	0 to 45 degrees Celsius	Pperating	Support Windows	<p>FCC warning:</p> <p>1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <p>(1) This device may not cause harmful interference, and</p> <p>(2) This device must accept any interference received, including interference that may cause undesired operation.</p> <p>2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>3. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular</p>	<p>installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <p>—Reorient or relocate the receiving antenna.</p> <p>—Increase the separation between the equipment and receiver.</p> <p>—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</p> <p>—Consult the dealer or an experienced radio/TV technician for help.</p>
Specifications																																											
Dimensions	100*51*8mm																																										
Screen	1.7 inch TFT display screen																																										
Memory space	16GB/32GB																																										
Video format	AVI, AMV																																										
Video resolution	320*240																																										
Music format	MP3、APE、FLAC、OGG、WMA、WAV、AAC—LC ACELP																																										
Picture Viewer	JPEG、BMP、GIF																																										
MP3 bit rate	32/64/128/192Kbps																																										
WMA bit rate	512/768/1024/1536Kbps																																										
EQ	Normal, Rock, Funk, Ship Hope, Jazz, Classical, Electronic Music, Custom																																										
Signal to noise ratio	≥90dB																																										
Storage medium	Built in FLASH																																										
Expansion slot	TF card																																										
Interface Type	TYPE-C USB2.0 (high speed)																																										
Battery	Built-in polymer battery 293345(420mAh)																																										
Operating	0 to 45 degrees Celsius																																										
Pperating	Support Windows																																										