




# PARTY BAR G2

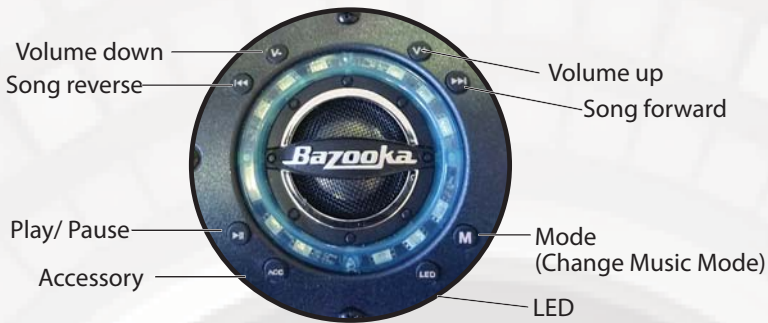

1. Long press the Mode button to turn the Party Bar ON/OFF.
2. Long press the LED button to turn the LED lights On/Off. Click press the LED button to cycle through stored LED sequences.
3. ACC button turns ON/OFF the accessory 12v pig tail for an external LED light bar or other accessory.
4. Click press the Mode button to toggle between Bluetooth/Aux/USB listening modes.
5. Press >|| to Pause/Play music.
6. Press Vol +/- to raise and lower the volume of the Party Bar.
7. Press |<< and >>| buttons to track forward/reverse on songs.

**Detailed instructions can be found at [www.bazooka.com](http://www.bazooka.com)**

**Unleash the Sound and Illuminate Your Adventure**



### Pairing 2 Party Bars together in Bluetooth mode:

1. Disconnect Main Power from the Party Bar being paired.
2. Long press the Pause/Play Button on the Party Bar that still has power. The voice will say "TWS Pairing".
3. Reconnect power to the Party Bar being paired and turn it ON. The Party Bars will find one another and sync together. The LED indicator will turn yellow/green when TWS pairing is successful.
4. Pair your mobile device. (Note: It is very important that you DO NOT pair your mobile device until AFTER TWS pairing has been completed or it can interrupt the TWS pairing process).
5. To remove TWS pairing and return the 2 Party Bars back to individual pairing mode, long press the Pause/Play Button on the Master unit.



#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.