

Instruction Manual

Vehicle player

说明书

车载播放器

1. HOME

In the task bar click  to enter the main menu interface.



2. MUSIC

In the main menu interface, touch MUSIC icon to enter the music state.

2.1 Features taskbar icon




3. PHOTO

In the main menu interface, touch PHOTO icon to enter the photo state.

- ① Click here to play the prev/next picture.
- ② Click here to play / pause.
- ③ Click here zoom in.
- ④ Click here zoom out.
- ⑤ Click here to rotate image.

1. HOME

在任务栏点击  进入主菜单界面

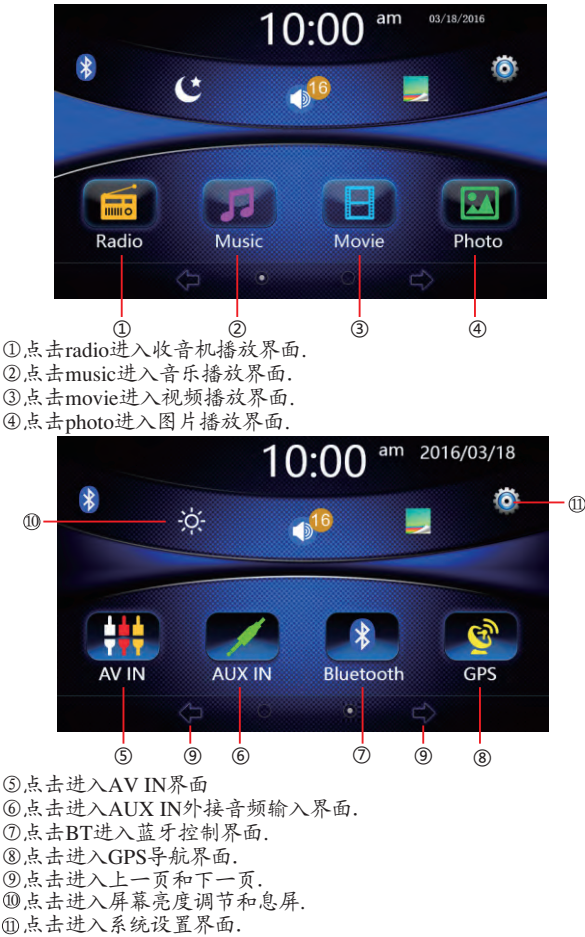

2. MUSIC

在主页面点击MUSIC进入音乐播放界面。


2.1 任务栏图标功能



3. PHOTO


在主页面点击PHOTO进入图片播放界面。

- ① 点击播放上一张和下一张照片
- ② 点击播放和暂停
- ③ 点击放大照片
- ④ 点击缩小照片
- ⑤ 点击旋转照片

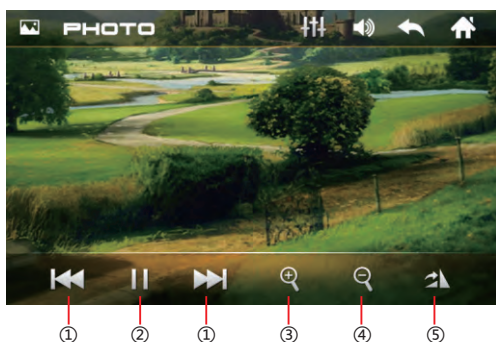


4. VIDEO

In the main menu interface, touch VIDEO icon to enter the video state.

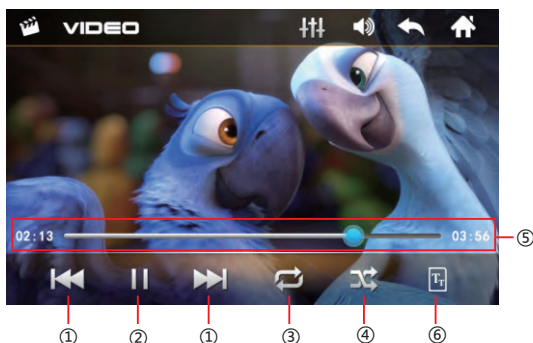


- ① Click here to play the prev/next video.
- ② Click here to play / pause.
- ③ Click here loop.
- ④ Click here to Shuffle.
- ⑤ Playback progress display, Touch paddling can fast forward and rewind.
- ⑥ Next page

3

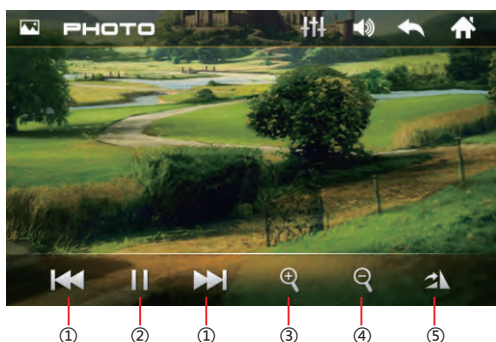

4. VIDEO

在主页面点击VIDEO进入视频播放界面。

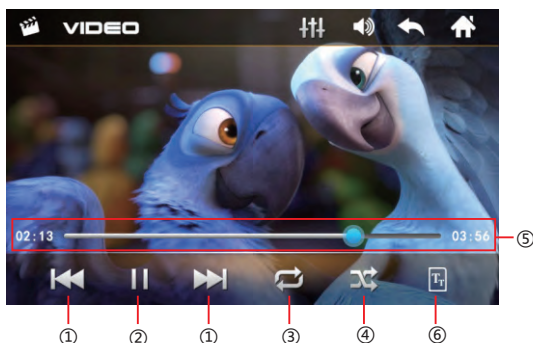

- ①点击播放上一曲和下一曲
- ②点击播放和暂停视频
- ③点击进入循环播放
- ④点击进入随机播放
- ⑤播放进度条显示,按住拖拉可以快速或快退
- ⑥下一页

3

5. RADIO

In the main menu interface, touch RADIO icon to enter the radio state.



- ① Click here to manually scan radio.
- ② In radio state, each band has six frequency points, press any frequency, you can store your favorite radio stations.
- ③ LOC/DX Switch
- ④ Stereo
- ⑤ Press to automatically search for radio stations and store the FM1- FM2- FM3 18 radio stations, short press to navigate through the radio.
- ⑥ Band Switch

6. BT

In the main menu interface, touch BT icon to enter the bluetooth state.



4

5. RADIO

在主页面点击RADIO进入收音机界面。



- ①点击手动搜索电台
- ②在收音模式中, 每个波段存有6个频率点, 按任意频率, 可以存储喜欢的电台
- ③选择近程/远程
- ④立体声切换
- ⑤在收音模式中, 点击手动搜索电台并存储于 FM1, FM2, FM3 等 18个台中,短按浏览电台
- ⑥波段选择 FM1, FM2, FM3

6. BT

在主页面点击BT进入蓝牙控制界面。




4

6.1 Click into the dial-up interface.


- ① Bluetooth dial number keys can be used to enter a phone number to dial.
- ② Backspace
- ③ Bluetooth is available under the call state will host the button to switch the sound to the phone.
- ④ hang up the phone.
- ⑤ Dial / answer a call.

6.2 Click to go to the call log interface

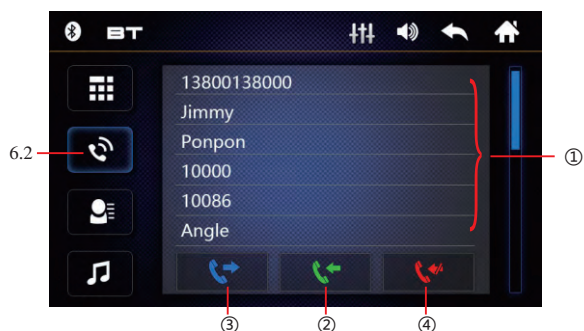


- ① Missed record, received record dial record list.
- ② Received record
- ③ Dial record
- ④ Missed record

6.3 Click into contact interface

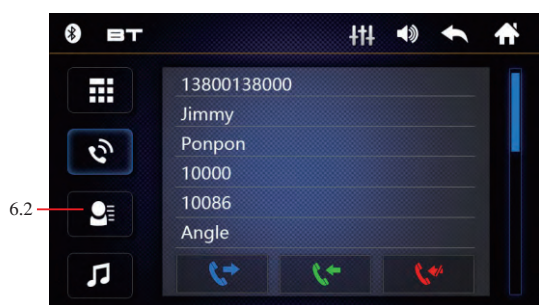

5

6.4 Click to go to the Bluetooth music interface.

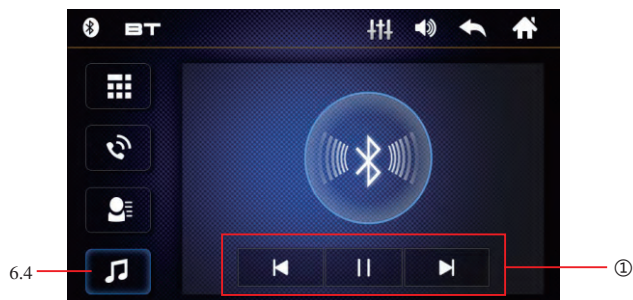

- ① Prev / Next , play / pause function.

7. SETUP

In the main menu interface, touch SETUP icon to enter the setup state.




- ① Click to sound settings.
- ② Click on the language Set up.
- ③ Other settings.
- ④ Click to go to the radio region selection.
- ⑤ Click on the steering wheel control settings.
- ⑥ Click to set the time.

6

6. 1.点击进入拨号界面

- ① 蓝牙拨号键可以用于输入要拨打的电话号码
- ② 退格点击进入拨号接口
- ③ 蓝牙通话状态下按此按钮将通话声音传回手机
- ④ 挂电话
- ⑤ 拨打/接听电话

6. 2.点击进入通话记录界面

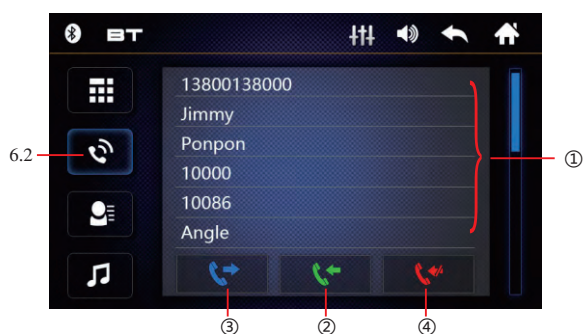


- ① 未接电话、已接电话、拨号记录列表。
- ② 已接电话
- ③ 拨号记录
- ④ 未接电话

6. 3.点击进入联系人界面



5

6. 1.点击进入蓝牙音乐播放界面

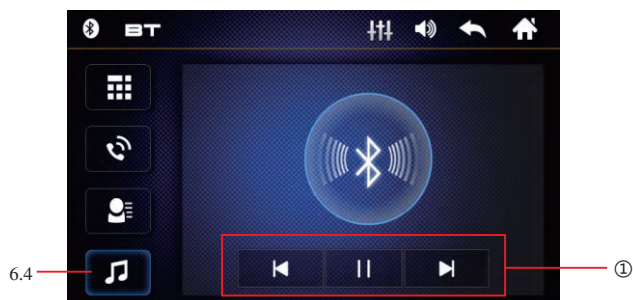

- ① 上一曲/下一曲，播放/暂停功能。

7. SETUP


在主页点击SETUP进入系统设置界面。




- ① 点击设置声音
- ② 点击设置语言
- ③ 其他设置
- ④ 点击选择收音区域
- ⑤ 点击设置方向盘控制
- ⑥ 点击设置时间

6

7.1 Touch Radio Area ,select the radio region.

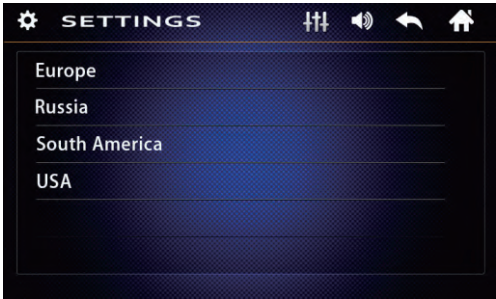

7.2 Touch TIME, into the time setting.

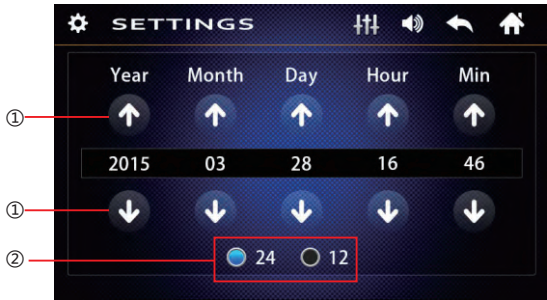

- ① Touch to set the time and date
- ② 12/24 standard switch

7.3 Touch Wheel Control , Steering wheel control interface.




- Enter the learning state:
- ① long press button on the steering wheel use left hand, then touch screen corresponding function use right hand, make it highlight, mean learn OK;
 - ② When the learning was completed, click Confirm.
 - ③ When learning has failed, it should be not respond in the steering wheel.
 - ④ If operating mistake in the learning process, click Reset to re-learning.

7.4 Other settings interface.




- ① Softenware Update
- ② Factory Data Reset
- ③ Calibration
- ④ Background Set

7. 1.点击RADIO AREA，选择收音区域。

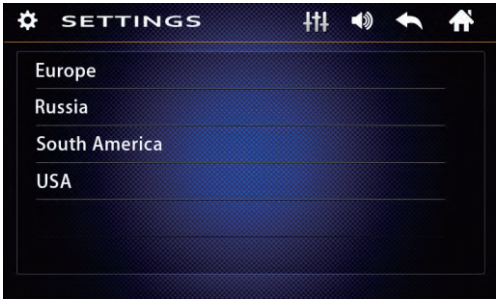

7.2 点击TIME，进入时间设置。

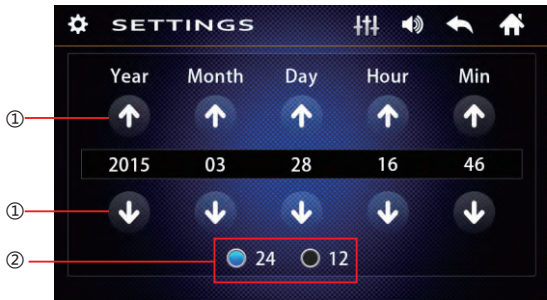

- ①触摸设置时间和日期
- ②12/24时制选择

7.3 点击 WHEEL CONTROL ,进入方向盘设置界面



- 进入续写界面:
- ① 左手按住方向盘上的按键不放,然后用右手选择屏幕上对应的功能钮,使其高亮,意思就是已经学习成功;
 - ② 当学习完成后, 点击Confirm确认;
 - ③ 当学习失败时, 点击方向盘按键是无响应的;
 - ④ 如果学习时发生失误, 可以点击Reset键重新学习。

7.4 其他设置界面



- ①软件更新
- ②恢复出厂设置
- ③屏幕校对
- ④背景图设置

7.5 Touch Language, select the national language.




8. GPS NAVIGATION (Optional)

In the main menu interface, touch GPS icon to enter the Navigation.



9. AUX IN


In the main menu interface, touch aux in icon to enter the aux in state.

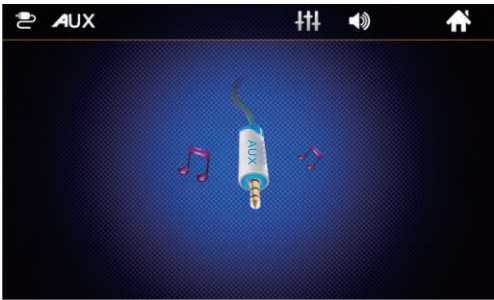

Front panel 3.5mm audio input.

10. AV IN

In the main menu interface, touch av in icon to enter the av in state.

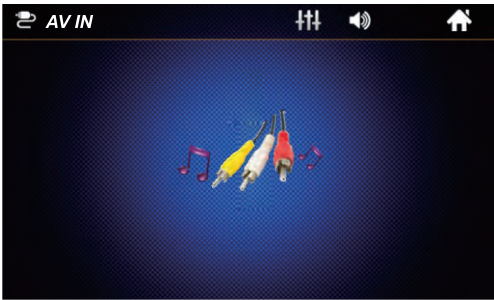

RCA audio/video input.

7.5 点击LANGUAGE进入语言设置




8. GPS NAVIGATION (Optional)

在主页点击GPS进入导航界面。（可选功能）



9. AUX IN


在主页点击AUX进入外接视频输入界面。

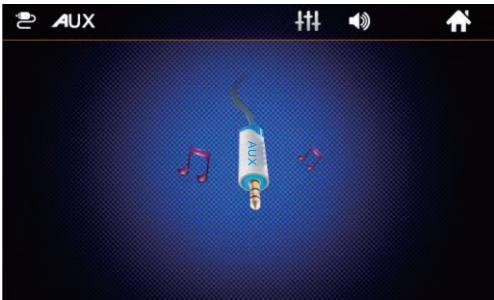

前面板3.5mm外接音频输入接口

10. AV IN

在主页点击AV IN进入外接音视频输入界面。

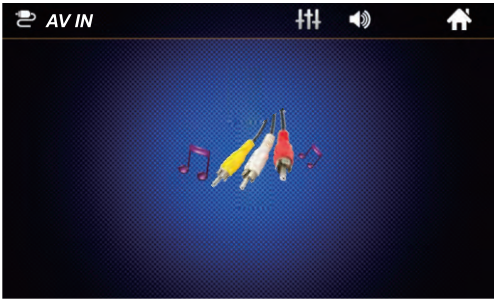

后面板RCA莲花插外接音视频输入接口

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.