

- For the best viewing effect, please use the projector in dark room. 1. Do not install this projector in the area which directly blown by the air conditioner, to prevent projector failed caused by water vapor condensation or excessive temperature.
- 2. Ensure that the environment is ventilated to prevent overheat caused by heats build-up.
- 3. Prevent foreign objects from falling into the machine. Never insert any metal objects into the machine. If foreign objects fall into the machine accidentally, please power off immediately and seek professional
- 4. Do not place any liquid on the machine to avoid leakage. 5. Avoid violent vibrations when transporting. Please protect the lens
- 6. Do not touch the vents when using the projector to avoid burns due to excessive temperature.
- 7. Do not look directly at the lens while the projector is running to
- 8. Please clean the filter regularly to prevent malfunction caused by clogging.


Notice 🖄 Do not open the case of projector to prevent electric shock. Please

seek professional assistance for maintenance matters. Warn 🖄

Do not touch! The inside of the projector contains uninsulated

Warn 🖄 Do not install the projector around flammable objects to prevent

Important Safety Notes

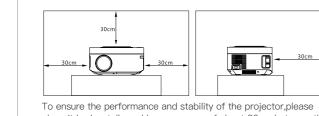

place it horizontally and leave a space of about 30cm between the projector and the wall.



Do not install in place with Do not install in high



Do not block the vents Do not install in dust or smoky places


Specifications



1 Package contents

Storage Temperature

Operating Humidity

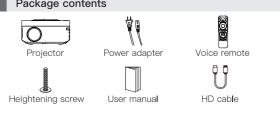


-20 ~ 65°C


0 ~ 90% Non-condensing

Projector Introduction

Power Jack -

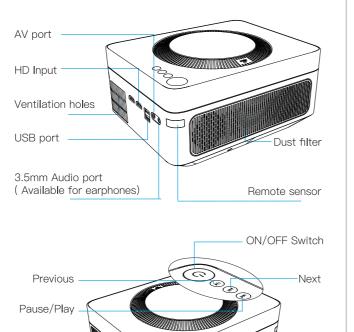

Bluetooth Remote

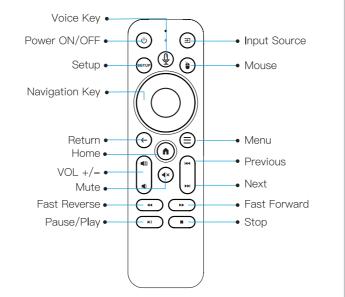


Paring method(Bluetooth mode connection) 1. Select [Settings] > [Bluetooth & Remotes] > [Add accessory]. 2. Press and hold the left & right direction buttons at the same time for 3-5 seconds until the red light flashes.

3. Select the name [Bluetooth remote] of the list to connect. 4. After pairing, you can now use the voice button to search

Projection Size/Distance Reference

The projection screen size (or size of images) is determined by the distance between the lens of the projector and the projection surface.

The projection image size is to up to 200"

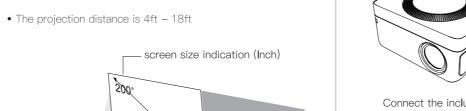



Power–On/Off Operation

1 Power connection

Power on/off by the Power on/off by button on projector. remote control.

Screen Adjustment

Adjust the size and position of the picture by adjusting the projection angle (height of the image), tilting the image left and right, adjusting the focus, zoom out/zoom in the image size, adjusting the keystone correction.


1 Adjust the height screw

 Raise the front of the projector. 2. Screw on the heightening screw to adjust the picture to the height you want.



2 Adjust the focus(Sharpness adjustment)

After the machine is placed horizontally, turn the focusing ring up and down to make the picture clearer.

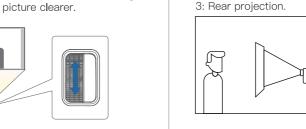

Screen Adjustment

3 Projection Methods Depending on the installation method, select the appropriate

option in the settings.













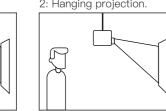

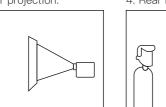

1 Unable to boot up


4 Keystone Correction

Screen Adjustment

If the machine installed tilted, please set the keystone correction to adjust. If unable to get the satisfactory sharpness, move the machine slightly forward or backward.



Correct keystone manually. Default value is 0 (Vertical & Horizontal Correction).

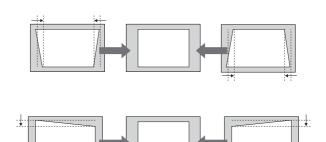

* The video source is not turned on or connected correctly.

* The projector is not correctly connected to the input source

* The video or audio file format is not supported by the projector.

7 Black screen or abnormal picture after booting for a while

* Make sure the power plug is working and firmly fitted into the

*The vents are blocked(Cleaning every three months is

* Cooling fan is not working properly. If abnormal, please return

6 Computer can't display through HDMI cable

* HDMI cable not securely connected.

* Try to turn off HDMI 2.0.

* Reboot the projector.


5 Eletronic Zoom

Screen Adjustment

No more space constraints, no need to change the projector distance, just move the projector to fit the screen size, you can customize your projection screen size from 35% to 100%.



Digital Zoom 100%--->35%.

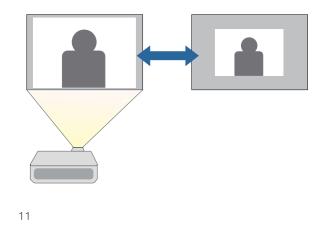

System Initial Setup

1 Language Select

1. Select [Setting], open [Device Preferences], click [Language], choose your preferred language.

2 Date & time

1. Select [Settings], open [Device Preferences], click [Date & time], then you can access to [Set time zone] and [Use 24-hourformat].

3 Network

1. Select [Settings], click [Network & Wi-Fi] to access to the Wi-Fi settings page.

2. Choose the Wi-Fi option and enter passwords to connect.

4 Bluetooth connection

1. Select [Apps], open [FOTA update], click [Check Version], follow the on-screen instructions to upgrade the firmware

System Initial Setup

5 Bluetooth connection

A. Bluetooth Speaker Mode

You can use this device as a standalone Bluetooth speaker.

Open [Settings], select [Bluetooth speaker] to switch to Bluetooth speaker mode (or open the app named Bluetooth Speaker).

② Enable Bluetooth on your smartphone and select [ZH_

X1MAX] as the device to be added. ③ Play the music you want.

④ Press the [Back] button on the remote control to exit this

B. Projector Mode

12 13

You can connect Bluetooth headphones or a speaker to ZH_X1MAX while in projector mode.

1 Turn on your device's Bluetooth.

ry], turn on your device's Bluetooth and choose the name of your device to complete the Bluetooth connection.

Press [Home] button select [Settings] >[Apps] > [See all apps] and press [OI Select an app and check the

current version, open or force stop, check the storage used or clear data, or clear cache, or clear default, or uninstall it

14 15

System Initial Setup

Installed Apps, like Netflix, TikTok, YouTube, Chrome, Prime

up reminding customer to update, please click "CANCEL",

do NOT update.(Installed Netflix is very stable, so updating

Video, WPS office, etc.

is not recommended).

App Manager

1 Connect to HDMI/AV Playback Devices

Once connected to a wireless network, you can access This device supports connections with various HDMI/AV online services, enjoy movies, music and pictures, and playback devices such as streaming media player. TV stick. TV browse internet. Apart from the apps installed, you can also box, DVD player, set-top box(STB), game machine or other install any other apps either from the App Store or by a USB devices(HD cable provided).

HDMI/AV cable.

② Press [Input Source] key or Select [SignalSource] to access the menu, then select the source channel you need.

of the picture for Signal Source. * It can be set to stay on the previous input source after you

② Select File Manager app and press [OK].

③ Select a file, then press [OK].

Select the Input Source

1) Connect this device to an HDMI/AV playback device with an

Press [Menu] on the remote control, you can set parameters

reboot this device.

2 Connect to USB Storage Device

With this device, you can enjoy music, video, and picture, or install apps that are stored on a USB storage device.

Select the Input Source

3 DVD Playback

projection picture.

1. Press the Ubutton to turn on the unit.

2. Press the 3 Input Source button to enter and use buttons to select the DVD mode.


Open the disc cover by lightly pressing the cover and insert a playable DVD or CD disc. Make sure the label side is facing up, and then close disc cover.

4. The player will scan the disc, and then the playback will start automatically.

5. Press ▶ button to fast forward and rewind.

6. Press ▶ button to search next or previous file.

7. During playback, press the MI button to pause and press again to resume.

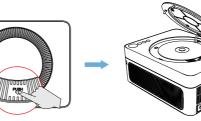

* Press the
Menu key to enter the setting and adjust the



Screen Mirroring

1 For iOS devices:

① Please ensure the iOS device and projector connected to the same Wi-Fi network.

Data for reference only

2 Select [Cast] on home page > open [iOS Cast]. ③ Open the Screen Mirroring from the control center on iOS device.

to start mirroring screen. 2 For Android devices:

① Select [Cast] on home page > open [Miracast].

4 Search for available devices > connect to [Bytefly-xxxxxx]

② Open the Wireless Cast on Miracast-compatible device to search available devices, select [ZH_X1MAX] to connect. 3 Accept the connection invitation from the device. If the

3 For Windows Laptop(Win 8.1/10/11)

screen is synchronized, means screencast completed.

① Select [Cast] on home page > open [Miracast]. 2 Press the Windows key and P key on your keyboard at the

same time > [Project] > Select Connect to a wireless display.

Screen Mirroring


⚠ If the Connect to a wireless display option is not listed, this means your device or video card does not support Miracast.

desired wireless display device named [ZH_X1MAX]. 4 Once connected, your Windows device should now be mirrored by the wireless display.

3 A scan for wireless display devices will start. Select your

Certain content may be unavailable to be casted due to copyright restrictions. In this case, you can stream those content via the same app installed in your projector.

Maintenance Suggestion

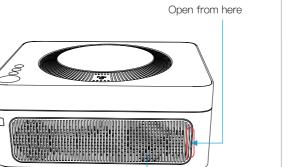

♠ Notice

To make this projector work longer, we recommend you to follow the ideas.

1. Before cleaning the projector, turn off the projector, then

3. Make sure to close the projector off once you finished using it.

turn off the main power and unplug it from the outlet. 2. Clean the filter regularly every month to prevent clogging.

4. Make sure not to use it continuously for more than 6 hours.

Troubleshooting

* Check if the power cord is connected properly, and if the power light is on. Try to unplug and plug the power if the projector still cannot boot up. 2 Remote control is insensitive or unresponsive

* Do not cover IR receiver. * In infrared mode, make sure remote points at IR receiver

* There is an obstacle between the remote control and the * The batteries are out of power or the battery is not installed

* Pair the Bluetooth remote control and make sure it is working within 5 meters.

3 No network connection

* WiFi is not connected properly, or the WiFi signal is poor. * Please connect hotspot of smart phone to verify if router is working properly.

4 Image or audio is unstable

* The connection cables are not securely connected to the projector or the signal source.

connection.

Warranty Card

1. This projector supports Three Guarantees Service Warranty for 1 year from the date of purchase (non-artificial damage). 2. Within warranty, we support warranty service for any failures

- caused by product technology. 3. The following situations are not covered by the warranty:
- --- Accessories except the projector. -- Products that have been disassembled and repaired without
- Damage caused by external force and other natural disasters. 4. When the product fails, please contact the dealer or supplier

in time to arrange for repair withi this warranty card.

5. This warranty liability is limited to product failure repairs within the warranty period.

* The lens is not clean. * The projection lens is not correctly focused. * The projector and the screen are not aligned properly

Troubleshooting

5 No input source

9 Screen freeze

* The Internet bandwidth is limited or over-occupied. * The projector is out of effective range of Bluetooth



for repair.

8 Blurry display

* Please reboot the projector to test again. If the screen still freeze, please turn off for 10 minutes and turn on again.

If you have any other problems or suggestions, please contact our online services to help you immediately.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Caution: Changes or modifications not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, p ursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against h armful interference in a residential installation. This equipment generates uses and can radiate radio freq uency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a partic ular installation. If this equipment does cause harmful interference to radio or television reception, which c an be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement .

Radiation Exposure Statement

To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

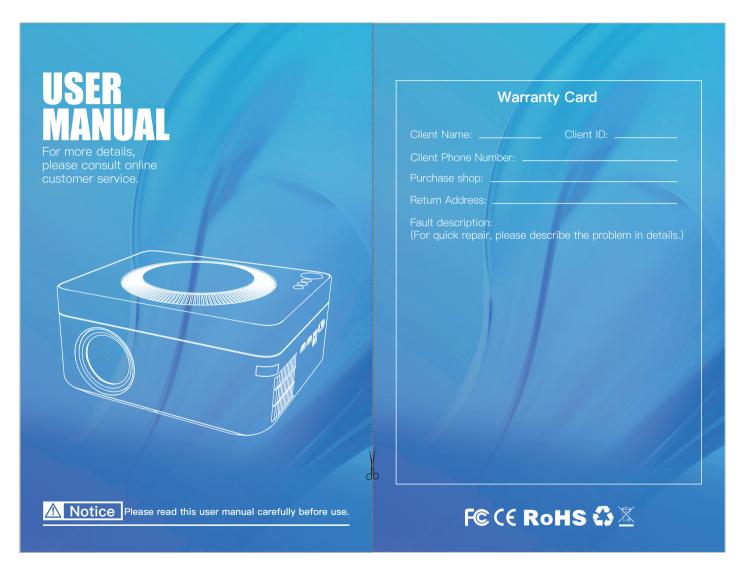

封面

封底