 


Automatic Pet Feeder

Smart Type Operation Guide

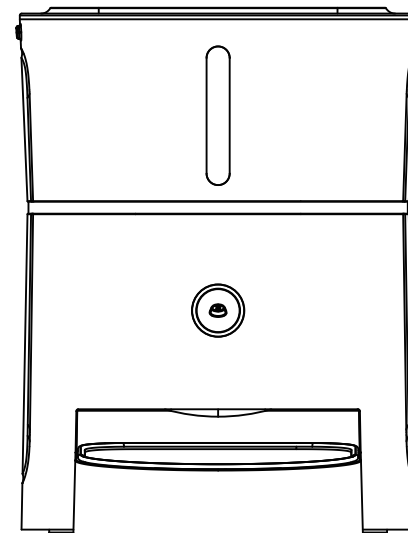

Please Read the Manual Carefully
Before Using the Product

Safety Instruction

- 1.Children must be accompanied by adults to use it.
- 2.Do not use the feeder for pets which cannot reach the food tray or have physical disabilities.
- 3.Do not immerse the base part in water, which will damage electronic components such as control panel.
- 4.Do not put any foreign objects into the pet feeder.
5. Do not put canned or wet food into the feeder.
- 6.Do not disassemble the equipment by yourself.
- 7.Do not modify the pet feeder.
- 8.If the equipment can not work or have damaged accessories, do not try to repair the pet feeder by yourself. Contact the seller immediately and solve it.
- 9.Please make sure the the feeder is unplug and power off when not using or cleaning it.
- 10.If the plug is damp, please turn off the socket rather than trying to unplug the power.

 
Notice

- 1.Please purchase hard plastic protector from hardware store to protect plugs and power cord then prevent your pet from damaging the accessories.
- 2.Do not put the pet feeder in an high temperature place.The temperature should be within the range of 0 °C~40 °C.
- 3.Please use alkaline Size D battery for power supply. Do not use rechargeable batteries.
- 4.Check the battery regularly. Please replace the battery before having a trip.
- 5.Do not lift the pet feeder directly with the cover, food bucket and food tray. Hold the base with both hands to lift and carry, while keeping the device in an upright position.
- 6.Only applicable to dry food with a diameter of 3-10mm. Larger food may get stuck or block the food outlet.
- 7.Please read all the notices on the packing and manuals carefully.

Product Image


Front View

1. Button To Open Cover
2. Food Tank Lid
3. Food Tank
4. Feed Button
5. Food Outlet
6. Body
7. Food Bowl

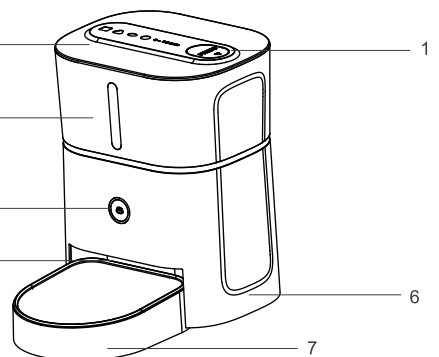


Bottom View

 8. Speaker
9. Battery Compartment
- 10.Type-C Interface

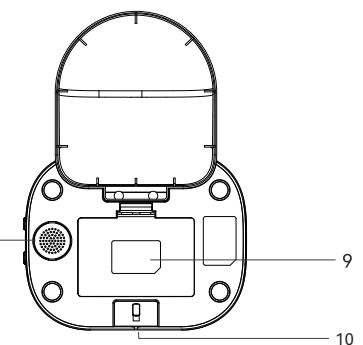


Button Description

 Front

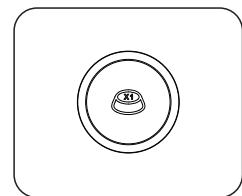

Back

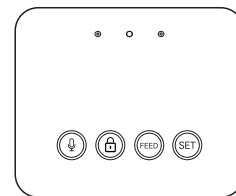 

- ☺ Feed button:press once to feed manually.
- ⏸ Recording button: Long press for 1s until you hear "di" and start recording.The recording time does not exceed 10s, After you release your hand, you will hear "didi" to indicate that it has been saved.
- 🔒 lock/unlock: under unlock state,Long press for 6 seconds and the red indicator light flashes twice to lock the machine, then long press again for 6 seconds and the red indicator light flashes 2 times to unlock.
- 🍽 Manual feeding: press it to feed 1 portion.
- 🔄 Reset(Switching the network configuration mode): When the power is turned on and the network is not configured, the white indicator flashes quickly by default (WiFi quick connection configuration mode), press and hold this button for 7 seconds until you hear "di-didi" beeps, The red/white indicator is always on for 6 seconds and then switches to slow flashing (hot spot network configuration mode).

Indicator light (white light)

1. Fast flashing: flashing twice in 1 second, WiFi quick connection mode
2. Slow flashing: flashing once every 3 seconds, AP hotspot network configuration mode
3. Steady on: The network connection is successful
4. Power on, WiFi quick connection/AP mode switch: always on for 6 seconds

Indicator light (red light)

1. Flashing: abnormal detection of limit switch (motor does not rotate)
2. Lock/unlock: flash twice
3. Power on, WiFi quick connection/AP mode switch: always on for 6 seconds

Cleaning and Maintenance

Please clean the feeder regularly to keep your pet's health.

When it starts to get dirty and a lot of loose food in the food trough, you can remove the food cover to clean it.

Clean the feeder base containing the control panel with a soft, damp cloth. Do not wet this part. Remember not to rinse it directly with running water.

Do not put the product in the dishwasher, otherwise it will be permanently damaged!

Packing list

After opening the product package, please confirm whether the machine is in good condition.

Please check the list to confirm whether the accessories are complete.

The Feeder ×1

The power adapter ×1

Power Cord ×1

Product Manual ×1

Specification

Food Tank Capacity:3L

Power supply: DC 5V/1A power adapter; 3pcs alkaline D Size batteries

Power adapter: AC110-240V input, DC5V output

N.G: 1.26KG

Size: 20.8×16.6×27.4cm

NO.1.0.1

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, (2) and this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines,This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Instructions


01 | Installation

 - Remove the feeder from the box.
- Place the feeder in the suitable location.
- Combine the food tray with the base of the feeder.

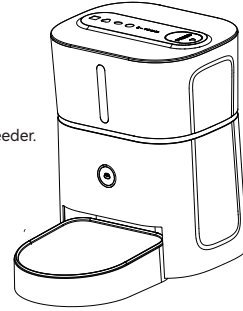


02 | Connect the power supply

 - Plug the 5V/1A power adapter into the wall socket and connect the device.
 - Open the battery compartment at the bottom of the feeder and install 3 pcs D size batteries (not necessary) to prevent power failure
 - The LED light is turn on to indicate that the feeder is powered on.
- Note:
Does not including battery .
Before turning on the power, make sure that all parts are clean and completely dry.

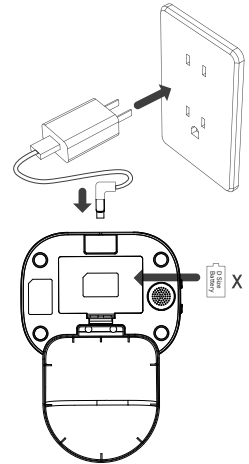

03 | Put pet food into food tank

 - Fill the food tank with dry pet food then close the lid.
- Note:
Do not place canned, wet or wet pet food.
The recommended pet food size range is 3-10 mm.

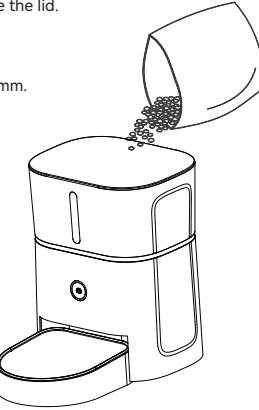

04 | Recording

- Long press for 1s until you hear "di" and start recording. The recording time does not exceed 10s, After you release your hand, you will hear "didi" to indicate that it has been saved. If you are not satisfied, you can repeat this step to replace the previous recording.
- note:
1) Recording will be played by pressing the recording button
2) Recording will be played when feeding



5 | Lock/unlock button

- Under unlock state, Long press for 6 seconds and the red indicator light flashes twice to lock the machine, then long press again for 6 seconds and the red indicator light flashes 2 times to unlock.
 - In the locked state, you can press and hold the SET button to restore the factory settings
- Note:
Pressing the feeding button in the locked state does not work, it must be unlocked for normal use.
The APP operation is not affected in the locked state.
Feeder will be locked after 15 seconds not operated.



6 | Feeding

- Manual feeding: short press to serve 1 portion.
- Note:
The feeding plan will not be affected



07 | Reset

 
- Reset(Switching the network configuration mode): When the power is turned on and the network is not configured, the white indicator flashes quickly by default (WiFi quick connection configuration mode), press and hold this button for 7 seconds until you hear "di-didi" beeps, The red/white indicator is always on for 6 seconds and then switches to slow flashing (hot spot network configuration mode). Repeat the operation to switch between the two network modes.




Smart Life APP specific operations




1. Download the App, register a dedicated account and log in

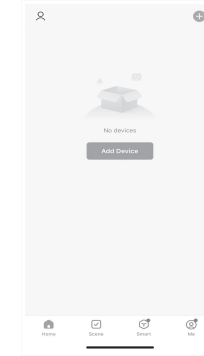

 
2. Enter the App and click "Add Device"

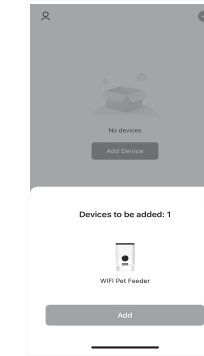

 
3. First open your phone Bluetooth and allow permissions. After entering the interface, wait for the device to be discovered automatically, then click "add"

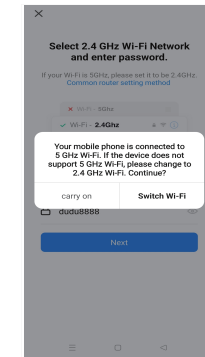

 
4. Enter the WiFi password. Note that the name and password do not contain Chinese or special symbols, and support 5GWIFI.

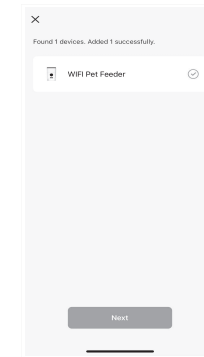

 
5. Waiting for the device to connect the network, successfully added-next step

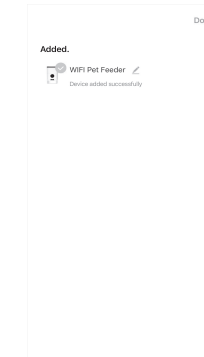

 
6. Then you can customize the name of the device and click on the upper right corner to finish this step

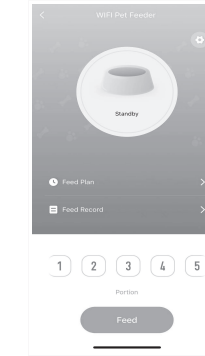

 
7. Enter the main interface, you can choose the meals and portions as needed, click "Feed" to feed immediate

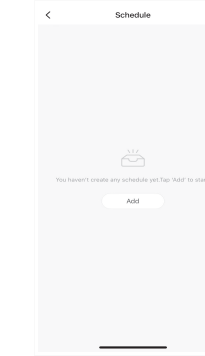

 
8. Click on the Main Interface "Feed Plan" to add feeding schedule

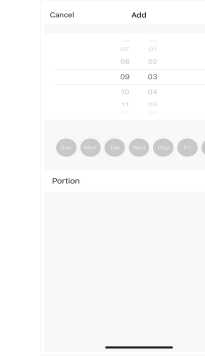

 9. Add timing, set feeding time and number of meals. Select the time, repeat the selection to every day, and select the number of servings per meal

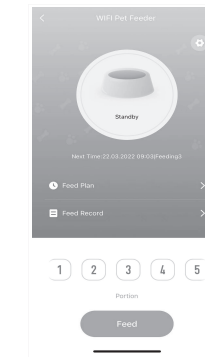

 10. Back to the main interface. Please click the icon in the upper right corner to enter the settings option

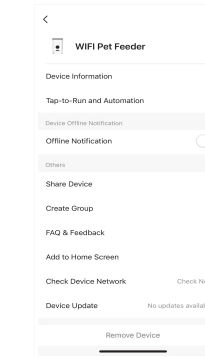

11. Then Click "Share Device"



12. Click "Add Sharing" to share the device with multiple people.

Simple Troubleshooting

- Q: Cannot be configured
A: 1) WiFi name and password should not be in Chinese, and should not exceed 12 digits. Please use a combination of numbers and letters to support 2.4G/5G WiFi signals.
2) Some software conflicts in the mobile phone will also cause the network connection to fail. Please restart the mobile phone, close the non-system software that starts automatically when you turn it on, turn on the mobile phone's Bluetooth and positioning, and then try to reconnect.

- Q: The feeder is inaccurate or unable to feed
A: Please check whether there is too much food on the food tray and whether the food outlet is blocked; usually clean the food outlet and food channel in time; when using battery power, please check whether the battery is dead and whether the battery is leaking.

- Q: The feeder displays offline
A: Please check whether the distance between the feeder and the router at home is more than 10 meters (effective distance is 10 meters); try not to partition the wall in the middle. According to the WiFi characteristics, the WiFi signal of the partition wall will drop sharply, and the connection will become unstable, which will cause the product to be offline.

- Q: No response when turn on the feed
A: First check that the feeder is plugged in and the switch is on. If they are all plugged in, please check whether the power adapter and power cord are damaged, and contact customer service to handle.

Hotspot distribution network (optional)

- Please follow the button instructions to switch the network distribution mode to hot distribution network, the LED light flashes slowly, the specific operation steps are as follows:
1. Open the Smart Life APP, select Add Device - Manually Add - Small Appliances - Pet Feeder (Wi-Fi) - Enter the WiFi Password Next - Click "Next", select Slow Flash - Click "Connect" - then go to connect SmartLife -XXXX WiFi signal.
2. After connecting, return to the previous interface, and then enter the network configuration interface to wait for the connection.