Automatic Pet Feeder

Smart Type **Operation Guide**



Please Read the Manual Carefully Before Using the Product

Safety Instruction

1.Children need to be used in the company of adults:

2.Do not use the feeder for pets who cannot reach the food tray or have physicaldisabilities.

3.Do not immerse the base part in water, which will damage electronic components such as control panel.

4.Do not place any foreign objects in the pet feeder.

5.Do not put canned, wet or wet food in the feeder.

6.Do not disassemble the equipment by yourself.

7.Do not modify the pet feeder.

8.If the equipment has faults or damaged accessories, do not try to repair the pet feeder by yourself. Contact the seller immediately and solve it.

9.Be sure to unplug the power plug when not using the product or cleaning the product.

10. If the power plug of the equipment is damp, please turn off the power of the socket and do not try to unplug the power plug

Notice

1.Do not let your pet chew or swallow any accessories. If you are worried about the power cord, please buy wire conduit (hard plastic protector) and protect the power cord at the

2.Do not install or put the pet feeder in an exposed place. The temperature should be within the range of - 10 °C~40 °C.

3.Please use alkaline Size D battery for power supply. Do not use rechargeable batteries.

4.Check the battery regularly. If you travel or travel for a long time, be sure to replace the battery.

5.Do not lift the pet feeder directly with the cover, food bucket and food tray. Hold the base with both hands to lift and carry, while keeping the device in an upright position.

6.Only applicable to dry food with a diameter of 3-13mm. Larger foods may get stuck or block the Food Outlet.

7.Please carefully read and follow all important instructions listed on the pet feeder and

Product Image

1.Button To Open Cover

2.Food Tank Lid 3.Food Tank

4.Control Panel 5.Food Outlet

6.Body


7.Food Bowl



Bottom View

8.Speaker 9.Battery Compartment

10.Type-C Interface 11.Rocker Switch

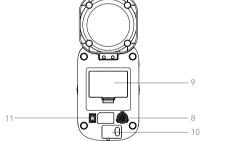



Button Description

Manual Feeding Button: short press to serve 1 copy of food. When there is a recording. play the recording

once at the same time Recording Button: Long press for 1 second until you hear "di" and start recording. The

time does not exceed 10 seconds, After you release your hand, you will hear "didi" to indicate

that it has been saved

€ Lock/Unlock Button: The device will automatically lock without operating for 30 seconds, and the lock light will be on; Under unlock state, long press for 3 seconds the

Reset Button: long press the button for 6 seconds until you hear "di di di"and it restore the factory settings. The Feeder reset automatically restarts

Connection status indicator (white light)

1. Fast flashing: flashing twice in 1 second. WiFi guick connection mode

2. Slow flashing: flashing once every 3 seconds. AP hotspot network configuration mode

3. Steady light: The network connection is successful

4. Power on and start: if the network is not configured, it will enter the distribution mode, and the distribution network indicator will flash white:

Connection status indicator (red light)

Indicates equipment failure, the red light is always on

Remaining grain indicator (white light)

Stead light: Low food remainder

Lock/unlock light (white light)

Steady light: Lock Lights off: unlock

AM light (white light)

When the set time during 0-12 o'clock AM, the AM light will light up, and the real-time time will also light up at 0-12 o'clock.

PM light (white light)

When the set time during 12-24 o'clock PM, the PM light will light up, and the real-time time will also light up at 12-24 o'clock.

Time light (white light)

Indicates local real time(The time correspond to the local time zone after network distribution)

Colon light (white light)

Separating colons for time display, beat for seconds

Copies light (white light)

Indicates the number of servings to be served with the meal

Meal number light (white light)

The device's meal indicator lights up when app sets the feeding plan; The corresponding indicator lights off after feeding plan is executed, up to 6 meals/day ,all the indicator lights are on when the time reach 0 o'clock in the morning

Note: The surplus grain lamp only supports products with surplus grain detection function

Cleaning and Maintenance

Please clean the feeder regularly to keep your pet's health.

When it starts to get dirty and a lot of loose food in the food trough, you can remove the food

Clean the feeder base containing the control panel with a soft, damp cloth. Do not wet this part. Remember not to rinse it directly with running water.

Do not put the product in the dishwasher, otherwise it will be permanently damaged!

Packing List

After opening the product package, please confirm whether the machine is in good condition. Please check the list to confirm whether the accessories are complete.

The Feeder ×1

The power adapter ×

Power Cord ×1

User's guidance ×1

Specification

Food Tank Capacity:5L

Power supply: DC 5V/1A power adapter; 3pcs alkaline D Size batteries

Power adapter: AC110-240V input, DC5V output

Size: 28×17.2×32cm

G.W:1.95KG

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part I5 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or televis ion reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technic ian for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body; Use only the supplied antenna.

Instructions


01 | Installation

- Remove the feeder from the box.
- Place the feeder in the suitable location.
- O Combine the food tray with the base of the



02 | Connect the power supply

- Plug the 5V/1A power adapter into the wall socket and connect the
- The bottom of the equipment is a rocker switch, which can cut off or open the power supply.
- Open the battery compartment at the bottom of the feeder and install 3 pcs D size batteries (not necessary) to prevent power failure
- The LED light is turn on to indicate that the feeder is powered on.
- 1) Does not including battery .
- 2) Before turning on the power, make sure that all parts are clean and completely dry.

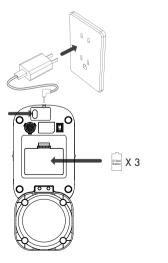

03 | Put pet food in food tank

© Fill the food tank with dry pet food. To close the lid, press and hold the lid open button, align the side clips, and release the lid lid button to secure the food bucket and lid together.

- 1) Do not place canned, wet or wet pet food.
- 2) The recommended pet food size range is 3-13 mm.



04 | Recording

© Long press for 1s until you hear "di" and start recording. The recording time does not exceed 10s, After you release your hand, you will hear "di" to indicate that it has been saved. If you are not satisfied, you can repeat this step to replace the previous recording.

- Note:
- 1) Recording will be played by pressing when there is a recording.
- 2) Recording will be played once when feeding



05 | Lock/unlock button

© under unlock state,Long press for 3 seconds and the white indicator light are on to lock the machine, then long press again for 3 seconds and the white indicator light off to unlock

Pressing the feeding button in the locked state does not work, it must be unlocked for normal

The APP operation is not affected in the locked state.



06 | Feeding

Manual feeding: short press to serve 1 portion, recording will be played once when there is a recording.

note:

The feeding plan will not be affected



07 | Reset

© Switching the network configuration mode: long press the touch button for 6 seconds until you hear "di di di"and it restore the factory settings. The Feeder reset automatically restarts



Smart Life APP specific operations

 




2. Enter the App and click "Add Device"




Add Device





1. Download the App, register a

 
dedicated account and log in






then next step

 
5. Waiting for the device to connect the network, showing successfully added,



WIFI Pet Feeder

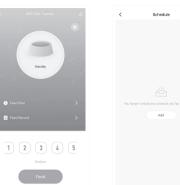



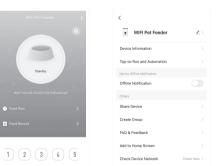

Device Update

Remove Device

10. Steps of sharing equipment: main 11. Enter the settings menu option and interface. Click the icon in the upper right corner to enter the settings option



9. You can set the time and the number of meals according to the pet's eating pattern, set it to choose from Monday to Sunday every day, and click Save.



12. Click "Add Share" and enter the other party's APP account to share the device with multiple people

Simple Troubleshooting

problem solution

- Q: Cannot be configured
- A: 1) WiFi name and password do not use Chinese, not more than 12 digits, please use a combination of numbers and letters, do not support 5G WiFi signal, please use 2.4G WiFi
- 2)Some software conflicts in the mobile phone will also cause the network connection to fail. Please restart the mobile phone, close the non-system software that starts automatically when you turn it on, turn on the mobile phone's Bluetooth and positioning, and then try to reconnect.
- O: The feeder is inaccurate or unable to feed
- A: Please check whether there is too much food on the food tray and whether the food outlet is blocked; usually clean the food outlet and food channel in time; when using battery power, please check whether the battery is dead and whether the battery is leaking.
- O: The feeder displays offline
- A:Please check whether the distance between the feeder and the router at home is more than 10 meters (effective distance is 10 meters); try not to partition the wall in the middle. According to the WiFi characteristics, the WiFi signal of the partition wall will drop sharply, and the connection will become unstable, which will cause the product to be offline.
- O: No response when turn on the feeder
- A: First check that the movie is plugged in and the switch is on. If they are all plugged in, please check whether the power adapter and power cord are damaged, and contact customer service for handling.

Hotspot distribution network (optional)

Please follow the button instructions to switch the network distribution mode to hot distribution network, the LED light flashes slowly, the specific operation steps are as follows:

- 1. Open the Smart Life APP, select Add Device Manually Add Small Appliances Pet Feeder (Wi-Fi) - Enter the WiFi Password Next - Click "Next", select Slow Flash - Click "Connect" - then go to connect SmartLife -XXXX WiFi signal.
- 2. After connecting, return to the previous interface, and then enter the network configuration interface to wait for the connection.