 


UK
CA
CE RoHS FC ♻️ 
FCC ID: 2AC5IH3
Made in China

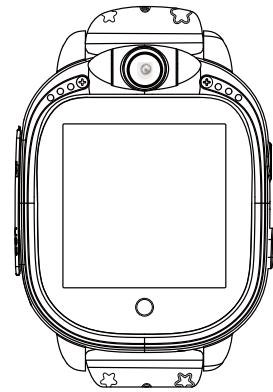


Quick Start Guide for Watch

Please read the instructions carefully before use so as to assemble and use the watch correctly and quickly. The color is subject to the actual product.


Preparation for use

Check whether the model is correct and whether the accessories are complete. Please fully charge the watch before use.

Introduction of watch

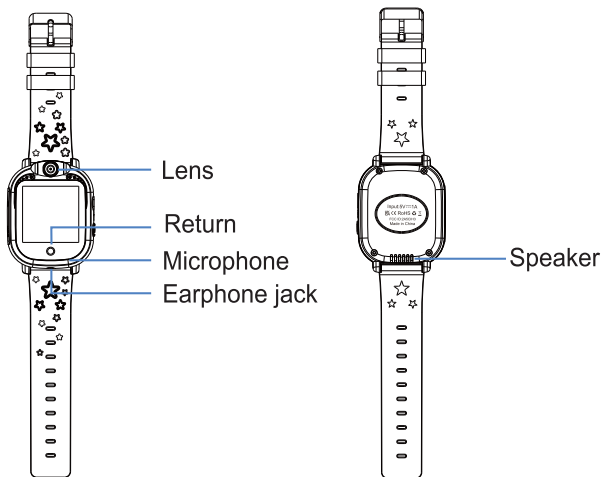

1

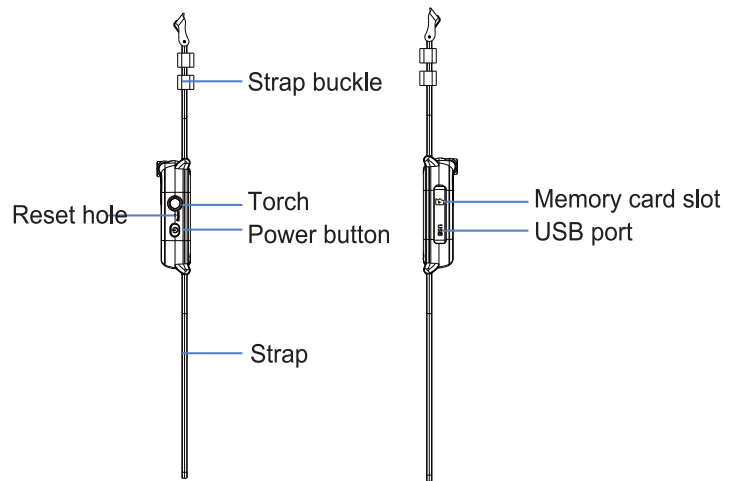

Product Introduction

Return key

Operation: Tap this key to return to previous menu.

Tips: Please tap within the touch area.

2

Power button

Operation:

1. Hold the ON/OFF key for 5s to turn on/off the watch.
2. When the watch is on, press the ON/OFF key to convert the ON/OFF status of the screen.
3. When operating the watch, press the ON/OFF key to return the main interface for shortcut.

Tips: Please charge the watch for at least 5 minutes if the watch is not used for a long time in case low battery.

Reset hole

Operation: Please reset the watch with a sharp pin sticking into the reset hole.

- Tips:**
1. The reset operation mainly works for the watch crash due to malfunction or static electric.
 2. After the reset operation, the built in battery will enable the power-off protection, you need to charge the watch again to reactivate the battery.

Torch

Operation: Touch the touch screen and find the torch icon, tap the ON/OFF icon to turn on/off the torch.

Tip: Please do not look at the torch directly when it is ON in case hurt your eyes.

Camera

Operation: Push the camera slightly upwards or forwards with your finger to adjust the camera position.

Tips: Push the camera repeatedly or with heavy force may damage the camera and cause malfunctions.

Earphone jack

Operation: Uncover the silicone cover on the earphone jack and plug in the earphone.

Tips: Plug in the earphone with heavy force may cause damage.

Charging USB port

Operation:

Uncover the silicone protective shell on the USB charging port charge the camera with the USB port.

Tips: Please use 5V-1A / 5V-1.5A / 5V-2A adapter to charge the watch.

Memory card installation

Operation: Open the silicone cover on the right side, insert the SD card with same direction shown on the silicone cover, push the end of the SD card until you hear a "Click".


Tips: 1. Please format the SD card to FAT32 before inserting.
2. Please turn off the watch before inserting the SD card.

Speaker and Microphone: Built-in speaker and microphone.


Menu Introduction

Home Interface

1. Press the power button to activate the home interface when the watch is standby.

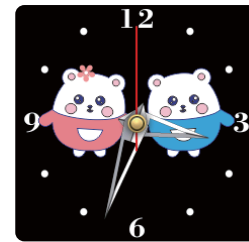

2. Press the touch screen to convert the display of the main interface.

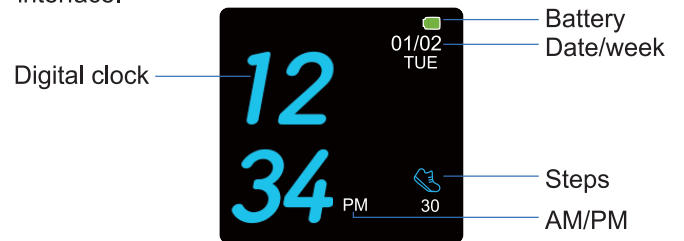


Menu Including



Operation Guide

1. Camera

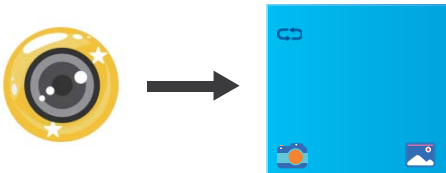

7

Tap icon to enter camera.


Convert the camera direction.

Shortcut to view the Album.

Capture a picture.

Delete: Delete this picture. Back: Save and go back to camera.

2. Album

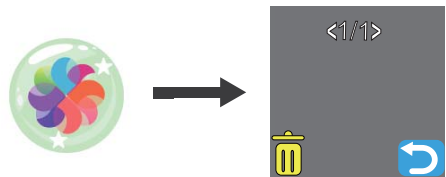


Press to enter the Album, slide the screen to check the pictures.

Delete Back

8


3. Music

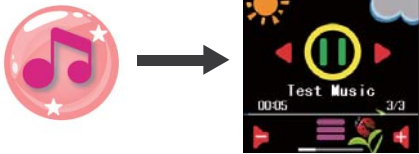

Press icon to enter music. Press to play, to go back to previous music, to go to next song, to turn up/turn down the volume. to check the playlist.

- Tips: 1. Please create a folder "My Music" and copy music into this folder.
2. This watch only support MP3 music.

4. Sound Recorder

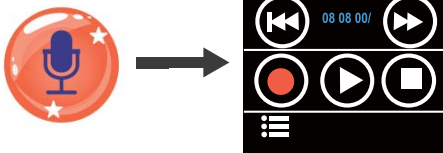


9

Press icon to enter sound recording mode.

Previous Start sound recording Play/pause
 Next Simple setup Back


Tips: Please do not record when connecting to earphone/blue tooth earphone.

5. Calculator

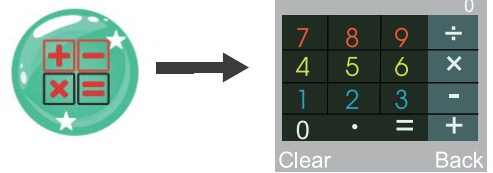

Press icon to get into the calculator.

6. Calendar

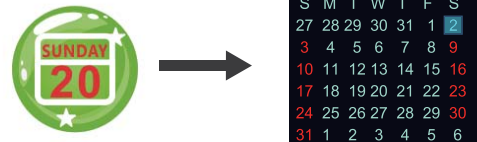


10


Press  icon to get into the calendar.


7. Torch



Press  icon to enter the torch, tap ON/OFF to turn ON/OFF the torch.

8. FM

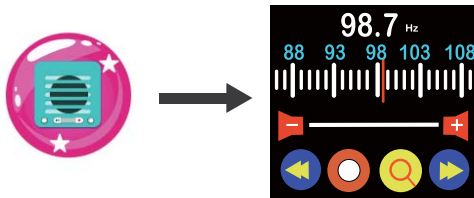

Press  icon to enter the FM.

 Previous channel  Play/Pause  Search  Next Channel

   Volume Adjust.


Tips: Please plug in the earphone before using the FM.


9. BT



Press icon to enter the bluetooth function, operate according to the function introduction.

Tips: The bluetooth only support pairing with the bluetooth earphone.

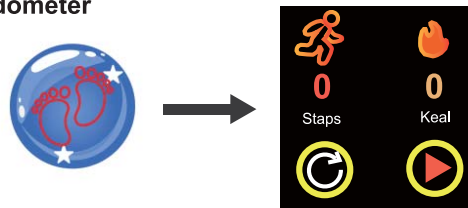10. Pedometer




Press  icon to get into the pedometer.

 Start/Pause  Clear


11. Tools



Press  icon to enter the tools.

1 Alarm 2 Stopwatch 3 Countdown 4 File manager
Please operate above tools with introduction.

12. Games

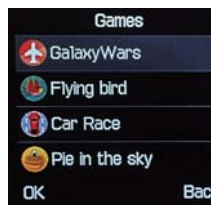

Built-in 5 games: GalaxyWars、 Flying bird、 Car Race 、 Pie in the sky、 2048.


Operation for GalaxyWars、 Car Race、 Pie in the sky:


Slide your finger left and right on the touch screen to change the position of airplane/ cars/people, thereby destroying enemy spaceships/ preventing cars from running into other cars catching objects falling from above.

Operation for Flying bird: Tap the touch screen to keep the bird at a certain level and go through the barrier wall again and again.

Operation for 2048: Slide the screen to find the same number and make it superimpose into a larger number.

13. Settings

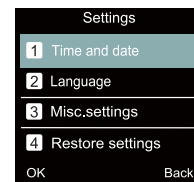

Press  icon to go into settings.

Please change the language, Time &Date, Time format or Factory reset according to the guide.

Q&A

Q: What charger is recommended to ?

A: Please use a standard USB charger. Such as mobile phone chargers. It is recommended to use a 5V 1A/5V 1.5A/5V 2A adapter for charging.

Tips: Please do not use an adapter with a rated output voltage of more than 5V for charging to avoid damage to the machine.

Q: How long does it take to fully charge the watch?

A: It may take 2-3 hours to charge the watch. There is a power icon on the watch that indicates the current power source. When the battery is low, charge it immediately.

Q: Fail to turn on the watch?

A: If the watch is not used for a long time, the battery may run out. Please charge the device for 10 minutes before using it again.

Q: Why can't the memory card be read?

A: 1. Please install the memory card when the watch is OFF.
2. Please format the memory card as FAT32.

3. Please check if the memory card is not correctly placed in the card slot .

Q: Fail to load music on the memory card?

A: 1. Please double check if the musics are under “My Music” Folder.
2. Please check the music format as this watch only support MP3 music.

Parameter			
CTP	1.54 "IPS with high resolution 240*240		
Camera	Rotatable	Speaker	8Ω 1W
Buttons	Power Button	Home Button	Reset Button
External Interface Supported	Support 1-32GB MICRO SD		
	Support MICRO USB for data transmission/charging. (adapter 5V 1A/5V 1.5A/5V 2A)		
	3.5 Headphone Jack		
Battery	3.7V 600mAh Lithium polymer battery		

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.