

X-ONE Controller Wireless Adapter for Window 7/8/10 PC



Instruction Manual

PREFACE


- Thank you for choosing our product. For bringing you with pleasant gaming experience, please read this user guide and all safety instructions carefully to ensure safe and proper use.
- The instructions in this user guide are based on the default settings of the device.
- All pictures, statements and text information in this guide are for references only, actual product prevails; Updates are subject to change without prior notice and it will be edited in a new version guide, we reserve the right of final interpretation.
- Please don't store this product in damp or high temperature place.
- Do not knock, beat, pierce or try to disintegrate this product so as not to damage it unnecessarily.
- Don't use this product near fire or heat sources.
- Unauthorized or non-professional personnel are not allowed to disassemble this product, otherwise it won't be in the scope of after-sales warranty.

PRODUCT FEATURES

1. The X-ONE controller wireless adapter applicable to the PC with window 7/8/10 system.

2. Up to 8 controllers can be connected at the same time (the games need to support).
3. Can compatible with all The original X-ONE controllers (**Not applicable to XBOX 360 controllers or other controllers**).

PART NAME

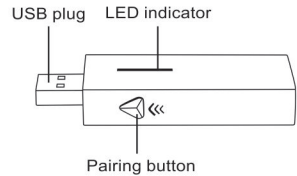

INSTRUCTIONS

1. Insert the U disk in the package into the computer, select the driver corresponding to the system and install it (win10 or win7 / 8 driver).




2. Install the XBOX ONE wireless series USB driver.

The method of confirming the driver has been installed on the PC: Right click - Manage - Device Manager.

If the icon with an exclamation point indicates that the driver has not been installed or unsuccessfully installed.



If this icon is displayed, the driver has been successfully installed and it can be used normally.

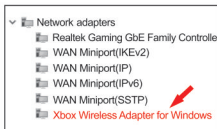

WIN10 64/32 bit driver [xbox_wireless_10461_x64_1012/microsoft_xboxwl_2134237_32_16](#)

WIN7/8 64/32 bit driver [microsoft_xboxwl_6316384_64_315/microsoft_xboxwl_6316384_32_16](#)

3. Insert the wireless receiver into the USB interface of the PC (support USB2.0/3.0);



4. After installing the battery into the controller, press and hold the pairing button on the receiver for about 2 seconds and then the green light flashes. Turn on the power button of the XBOX ONE wireless controller and press and hold the top pairing button for 2 seconds. The white light on the controller starts to flash quickly. After the pair is successful, the white light on the controller is on and the green light on the wireless receiver is on. You can play games on the device.



NOTE:

1. After the receiver is plugged into the device, wait for about 3 seconds (device identification), and then press the pairing button, otherwise the lights may flash randomly or the controller cannot be connected.
2. The controller will automatically shut down if there is no operation for about 15 minutes, the connection will be disconnected and the green light of

the wireless receiver will go out. The connected controller only need to turn on the controller power button 2 seconds to automatically pair and connect.

SPECIFICATIONS

Product name:	X-BOX wireless adapter
Product size:	67.2*22.11*10.5mm
Product weight:	11g
Colour:	Black
Use platform:	windows7/8/10
Receiving range:	9m

CONTACT INFORMATION

For support or general help questions please contact

E-mail:ycc@yccteam.com
[website:www.yccteam.com](http://www.yccteam.com)

名称: XB077 XBOX ONE PC 二代接收器说明书
 尺寸: 165*90mm
 材质: 105G铜版纸, 双面双色印刷, 三折

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction