

Product Instruction

Bluetooth/USB/charging/AUX/multifunctional touch button furniture soundbox

Please carefully read the instruction before use

Function introduction

Thank you for choosing our multifunctional sofa soundbox!

This soundbox adopts full touch button, auto function switch mode, surround sound effect

Sincerely hope that it can bring you who love music with the enjoyment in the digital era.

Main functions:



USB: plug USB device to automatically switch to USB flash disk mode, scan the music file in USB device and automatically play.

AUX

AUX: plug 3.5mm audio cable to AUX port to automatically enter AUX mode, can connect mobile phone/computer/TV/MP3/MP4/MP5 and other music player for music play. Under this mode, only the volume up and down of sound source device can be controlled.



BT/Bluetooth:default Bluetooth mode after start, Bluetooth search will be started for matching, after matching is successful, the music can be remote played by Bluetooth device, the Bluetooth distance is within 10m in broad and open area, and the use distance is different due to different environments.



USB charging:plug USB data cable to charge mobile phone/mobile power source, etc. In the situation of playing music, charging may lead to failure of touch, please cut off power and restart.

Attentions: it is recommended to charge after shutdown or stop playing music.



Startup and shutdown button:single click touch or short press for startup, long press for shutdown.

MODE

MODE/M: mode switch, when Bluetooth/USB/AUX are connected at the same time, it can be switched to another mode



Pause mode:perform pause function when the device is playing music



Previous/Next: support local songs in USB flash disk/downloaded. Network terminal cannot be supported, please use sound source device to control.



Turn down the volume: long press the touch button to turn down the volume (when overlapped with previous/next function, it is long press)

Short press and long press are OK if not overlapped.



Turn up the volume: long press the touch button to turn up the volume (when overlapped with previous/next function, it is long press)

Short press and long press are OK if not overlapped.

Repair guide and problem solution

Before repairing the product, please check the following solution to find the possible cause of your problem, some simple check or minimum adjustment you make may solve the problem and recover normal operation, if you have question on some inspection essential, or have no solution, please ask the professional repair personnel to repair.

Problem	Solution
Soundless	Volume is set too low or the soundbox is not well connected.
Startup failure	The power source is not plugged in place, if the problem of power source is confirmed, replace the power source, if the power source has no problem, the control box may have problem, replace the control box
No response	Please cut off power and try again, check whether mobile phone/USB flash disk/AUX is connected.
Button failure	Please cut off power and try again, do not press by force, check whether there is impurity or water, and restart.
Music play is disordered, skip	The product is light sensed touch, please confirm that there is no object over the product touch button.
Bluetooth cannot match	Please shut down all other matched Bluetooth devices, restart and search. Check whether the list of Bluetooth search device is full, delete useless Bluetooth and connect again
AUX is soundless	Please confirm that the volume of sound source device TV or mobile phone is turned on and can normally play music, check whether the audio cable is plugged in place and in good condition.
Remark	Please contact the dealer if there is other abnormal situation, sorry for the inconvenience!

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.