




Product Introduction

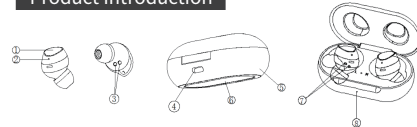

- | | |
|---------------------------------------|-------------------------------|
| 1.(Multi-function button) MFB Control | 5.Charging Case |
| 2. LED Indicator | 6.Wireless charging base |
| 3.Charging Contactor | 7.Earbuds charging base |
| 4. TYPE-C Charging Port | 8.Charging case LED indicator |

Basic Skills

Power on: When the earbuds is picked up from the charging case, it will be automatically turned on and connected to the connected device in a team.

Power off: The earbuds will automatically shut down after being put into the charging case.

Steps:

- 1.Turn on the Bluetooth device of the mobile phone.
- 2.Take out the left/right earbuds from the charging case and automatically power on, the indicator light flashes blue to enter the pairing state; or press and hold the "multi-function button" for about 3 seconds when the earbuds is turned on, and the indicator light flashes red and blue alternately to enter the pairing state.
- 3.Find the earbuds model " C12 " to connect. (To confirm the Bluetooth name)

Note


- 1.When using the earbuds for the first time, remove the insulation label on the earbuds so that the earbuds can be charged normally.
- 2.The earbuds is placed in the charging case and will automatically shut down after the charging state is activated.

3.When the earbuds is picked up from the charging case, it will automatically switch on and automatically connect to the connected Bluetooth device.

Automatic Connection:

After the first connection is successful, the next time the earbuds is switch on, it will automatically connect to the last paired phone by default.

Touch function

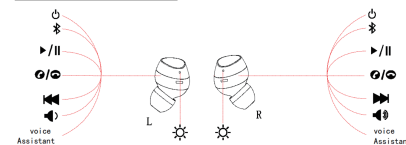

Features	Operating
Boot up	Long press the left/right earbuds MFB button for 3 seconds
Shutdown	Touch the MFB button for 5 seconds (non-music playback mode/call mode)
play / Pause	Just one touch
Previous song/next song	Double click the left earbuds, the previous song Double click the right earbuds, the next song
Answer/hang up a call	Tap the left/right earbuds 1 time
Reject the call	Long press the left/right earbuds for about 2s
Volume + / volume-	Long press the right earbuds, volume + Long press the left earbuds, volume-
Voice assistant activation	Tap the left/right earbuds MFB key 3 times

Tips

In the left ear stand-alone mode, the next song and volume + touch are not supported.

In the right ear stand-alone mode, the previous song and volume are not supported-touch.

LED Indicator

Charging Compartment Indicator

Status	Light
Charging in the charging compartment	Red light flashes
Full	Red light is on
The earbuds is charging	Blue light on
Low battery in charging compartment	Red light flashing

Headphone Indicator

Status	Light
Boot up	Blue light flashes for 1 second
Shutdown	Red light flashes for 1 second
Search earbuds	Red and blue flashing alternately
The earbuds is connected successfully	Blue light flashes cyclically for 6 seconds
Music/call status	No lights
low battery	Flashing red
charging	Red light is on
Fully charged	After the red light goes out, the blue light turns on for 5 seconds and then goes out

Specification

Bluetooth version	V5.0
Bluetooth distance	33ft/10 m (unobstructed)
Earbuds size	25.2*23.3*21.9
Charging compartment size	71.1*40*27.2
Wireless charging input rated power	DC5V/1A
Earbuds charging time	1 hour
Charging time of charging box	1 hour
Earbuds battery	40mAh
Rechargeable battery	230 mAh
Rechargeable times	3 times
Standby time	60 hours (Bluetooth connection status)

Package Contents

- 1×Wireless earbuds
- 1×Charging case
- 1×Earbuds (S / M / L) (Default M is installed on the earbuds)
- 1×TYPE-C charging cable
- 1×User manual

Reset

If the earbuds cannot be connected correctly or the device cannot be connected correctly, reset the earbuds.

- 1.Turn off Bluetooth on the device or delete the connection history on the device.
- 2.Touch and hold the earbuds until the red and blue indicator lights flash alternately, then touch the earbuds 3 times, the red and blue indicator lights will light up for 1 second, and the earbuds will automatically turn off the power.
- 3.The Bluetooth connection of the earbuds has been reset.


Note

Please reset the 2 earbuds together instead of resetting one.

Care and Maintenance

- 1.Wearing swimming is not supported.
- 2.After use, keep the earbuds away from heat and moisture.
- 3.Do not place the product in direct sunlight or high temperature places.
High temperature will shorten the service life of the earbuds, battery and/or internal circuit board.
- 4.Turn off the power of the earbuds when not in use and before storage.
- 5.Do not try to disassemble the product.
- 6.Do not drop or knock the earbuds on a hard surface.

Comfortable to Wear

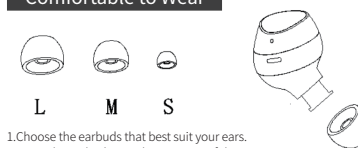

- 1.Choose the earbuds that best suit your ears.
- 2.Insert the earbuds into the inner ear of the ear.
- 3.Turn and find the most comfortable position.

Are the following directions of rotation correct? **Correct**



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirements, the device can be used in portable exposure conditions without restriction