

MANUAL

2-BUTTON REMOTE CONTROL



MANUAL

2-BUTTON REMOTE CONTROL



Quick Start Guide >>

! PLEASE GET THIS PRODUCT CHARGED BEFORE USING

 


On/Off Button

Long press to turn on/off
Short press to switch frequency
(Total of 9 frequencies with
3 types of speed)

 
 


USB magnetic charging

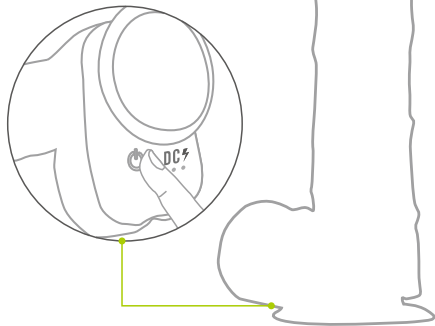

Instruction of Remote Control

NOTE: The remote control cannot turn on the product directly, it can only switch functions. When you use the product, please press the button on the base to turn on first.

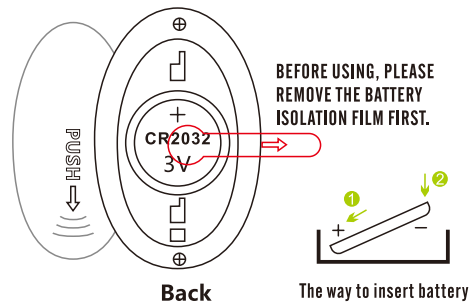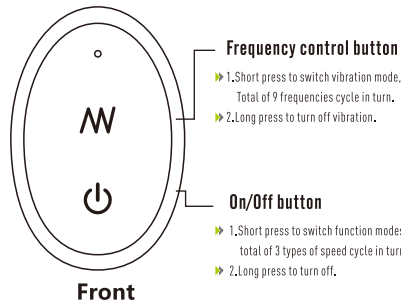 


Functions:

- ⚡ 1. Please get the product charged before using.
- 🕒 2. **Step 1**---Press the button on the base of the product for 1.5 seconds, then the red light flashes, and it is in the standby state.
Step 2---Press the button on the remote to operate and switch the functions.
- 📶 3. Short press the button to switch the function modes, total of 9 frequencies with 3 speeds cycling.
- 🕒 4. Press the hold the on/off button for 1.5 seconds to turn off the product while the indicator light is off.

Charging Instruction:

- 1. Place the magnetic plug on the magnetic connector that on the base of the product, adjust the position if needed, until the indicator flashes it means under charging, and it is fully charged when the light stays on.
- 2. This product can not work when in charging.
- 3. It takes approx 90 minutes to get the product fully charged, and can be used for 50 minutes.

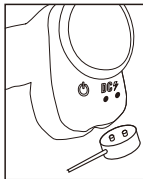

Tips:

- 1. It is recommended to use with lubricant together.
- 2. This product is for individual using only, please do not share with others for health concern; do not use alcohol, gasoline, acetone or other similar stuff for cleaning.
- 3. All products are tested from the factory, in case of low power, please charge immediately.
- 4. All the products are under strict inspection, it is normal for any tiny stains that may be caused during transportation.
- 5. It is for daily water resistant use only, can not be soaked in the water.
- 6. Please do not forcibly get this product jammed while in using.
- 7. Please do not disassemble the product which might cause short circuit, fire or an damage.

Cleaning, storage and safety instructions

- 1. This product is for adult only, please read the manual carefully before using.
- 2. This product should be stored in a cool and dry environment, and should not be exposure to any radiation or heat sources such as sunlight.
- 3. Do not put it together with any corrosive chemicals.
- 4. Check this device by times, and stop using if it is damaged.
- 5. It is for daily water resistant use only, just clean with water.
- 6. It needs to be cleaned before and after use.

Faults Clearing Guide

When this product comes to no working / can't be turned on / abnormal operation / extremely noisy or can't be charged, please follow the guides:

- 1. Please check if the product is under low power, and try again after charging for 15 minutes.
- 2. This product can not work while in charging, please take away the magnetic plug and try again.
- 3. Please check if the magnetic plug is well connected, adjust till indicator light flashes.
- 4. Please check if any filings or dust on the magnetic plug or connector.
- 5. Please try again with another charging power supply to charge.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.