


# 说明书成品尺寸：73X93mm128铜版纸覆哑膜钢琴折

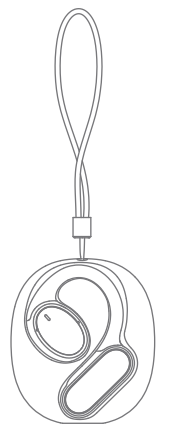

C36 真无线蓝牙耳机  
使用说明书

### 包装清单

耳机X2 充电仓X1 说明书&保修卡X1 Type-C充电线X1

### 产品示意图

指示灯 Touch 键 充电触点 麦克风 出音孔 Type-C充电口 数字屏

### 温馨提示

- 除说明书有特殊标示的操作方式以外，请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他任何液体中，此产品非防水设计。
- 如果有任何液体不小心进入产品内时，请立即断开连接并移开此产品。
- 为避免触电，请在安装或佩戴产品时，确保手上没有沾水。
- 请勿将此产品放置于热源附近或直接暴露在火源附近。
- 请勿将本产品放置在有强大电磁力的环境中，否则会导致产品故障。

### 产品规格

蓝牙版本： V5.4  
传输距离： ≤10米  
音乐时间： 6~7小时  
喇叭尺寸： φ16mm  
充电时间： 1小时±0.5小时  
电池容量： 38mAh  
额定输入： 5V == 30mA  
待机时间： 12小时

### 充电仓规格

电池容量： 200mAh  
充电时间： 1小时±0.5小时  
额定输入： 5V == 220mA  
(所有技术信息以实际性能为准)

给充电仓充电用Type-C充电线连接充电仓到5V电源适配器。  
(温馨提示： 电压低于3.4V 报低电提示 (隔60秒报一次)  
(声音提示： didi/滴滴)

额定输入： 5V == 30mA (耳机)      额定输入： 5V == 220mA (充电仓)

### LED指示状态

开机	双耳闪烁
关机	常亮后灭灯
开机自动配对	双耳闪烁
左右耳机配对	主耳闪烁
连接成功	灭灯
断开连接	主耳闪烁
耳机充电中	白灯常亮

### 产品操作说明

①开机 耳机拿出开机或 (手动长按 Touch 键 3秒开机)  
②关机 耳机入仓关机或 (手动长按 Touch 键 5秒关机)  
③配对与连接  
进入配对状态：  
1. 打开充电仓取出耳机，左右耳机自动开机，耳机无任何回连设备时，自动进入配对模式。  
2. 耳机在手机连接状态下，手动关闭手机蓝牙后，耳机自动进入配对状态。  
耳机连接手机： 耳机在配对状态下，在手机蓝牙列表中选择"C36"进行配对。配对成功以后耳机会提示"Connected/连接成功提示音"。  
(注意： 耳机配对状态未连接设备，3分钟以后会自动关机)

回连： 1. 左右耳机开机以后，会自动回连  
2. 耳机和手机配对成功以后，后续手机蓝牙开启状态下，耳机开机以后会自动和手机连接

### 触摸操作

■ 语音助手  
唤醒SIRI： 长按任意耳机Touch 键3秒

■ 音乐播放模式  
播放/暂停： 单击任意耳机 Touch 键  
上一曲： 双击主耳机 Touch 键  
下一曲： 双击副耳机 Touch 键  
音量加： 三击主耳机 Touch 键  
音量减： 三击副耳机 Touch 键

■ 通话模式  
接听来电： 单击任意耳机 Touch 键  
挂断通话： 单击任意耳机 Touch 键  
拒接电话： 长按任意耳机 Touch 键2秒

### 产品中有有害物质名称及含量

部件名称	有害物质					
	铅 (Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制  
O:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。  
X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。

本表格依据SJ/T11364的规定编制  
印刷电路组件\*:包括印刷电路板及其零部件,电子元器件等,根据产品型号不同,您所购买的产品可能不会含有以上所有部件

在中华人民共和国境内销售的电子电气产品必须标识此标志。标志内的数字代表在正常的使用状态下的产品的环保使用期限。

合格证

产品编号: \_\_\_\_\_

生产日期: \_\_\_\_\_

检验员: \_\_\_\_\_


### 保修声明

免责声明  
本使用手册没有任何形式的担保、立场表达或其他暗示。本使用手册所提到的产品、规格及信息仅供参考，内容亦会随时更新于网页，恕不另行通知。

保修声明：  
就本文件附随的产品做如下保证：如产品在您购买日起十二(12)个月("保修期")内，在正常使用情况下因质量问题发生损坏，能修理的，免费修理；经厂家确认无法修理的，免费更换，修理或更换后的产品，在剩余保修期 (最短不少于30天)内继续享有保修。购买日以销售发票日期为准；如无法确定购买日，则保修期自产品生产日期起按十三(13)个月计算。

如申请保修，请先致电产品服务热线，并按我们指示的方式进行执行。申请保修时，您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况：  
1. 超过三包有效期的；  
2. 涂改保修卡、产品编码与产品本体不符；  
3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏；  
4. 因不可抗力 (如地震、战争、火灾等) 或意外导致的故障或损坏；  
5. 碰撞、挤压因受力过大而损坏；  
6. 因承载过重造成的脱线或断裂；  
7. 任何因尖锐物体造成的损坏；  
8. 有烧蚀或水浸迹象的产品；  
9. 因擅自拆改导致的损坏；  
10. 产品正常使用过程中发生的老化、变色、磨擦、破裂和其他损耗。  
11. 如产品原有标识标签被更改或损毁，本保证将失效。  
产品及随附物料的齐备和外观完好不属于保证范围，您在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证，且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

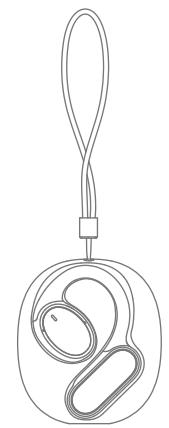

C36 True Wireless Bluetooth Headset  
Instruction manual

### Packing list

Headset X2 Charging CaseX1 Instructions Warranty cardX1 Type-C Charging CableX1

### Product diagram

Indicator light Touch area Charging contacts Microphone Sound hole Type-C charging port Digital display

### Tips

- Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- Don't put the earbuds in the water or any others liquid. The earbuds are not waterproof.
- If any liquid enters the product by accidentally, please disconnect and remove the connection immediately.
- Please make sure that there is no water on your hands when installing or uninstalling the product to avoid electric shock.
- Do not put the product near by the heat source or expose it to the fire source directly.
- Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

### Product specifications

Bluetooth version: V5.4  
Transmission distance: ≤10M  
Music time: 6-7hours  
Horn size: φ16mm  
Charging time: 1.5hours±0.5hours  
Battery capacity: 38mAh  
Rated input: 5V == 30mA  
Standby time: 12 hours

### Charging case specifications

Battery capacity: 200mAh  
Charging time: 1 hours±0.5 hours  
Rated input: 5V == 220mA  
(All technical information is subject to actual performance)

Charge the charging bay Connect the charging bay to the 5V power adapter with a Type-C charging cable.  
(Warm tip: low voltage warning if the voltage is lower than 3.4V (once every 60 seconds)(Voice prompt: didi))

Rated input: 5V == 30mA (headset)      Rated input: 5V == 220mA (charging case)

### LED Indicator Status

Power On	Left and right earphone flashing
Power Off	When it is steady on, turn off the indicator
Power-on automatic pairing	Left and right earphone flashing
Pair left and right earphones	Primary earphone flashing
Successful connection	Turn off the light
disconnect	Primary earphone Flashing
Earphone charging	The white lamp keeps on

### Product Operation Instructions

①Turn on  
Take out the headset and turn it on or (manually press the Touch button for 3 seconds to turn it on)  
②Turn off  
Turn off the headset in the earcase or (manually press the Touch button for 5 seconds to shut it off)  
③Pairing and pairing state:  
Enter the pairing state:  
1. Open the cover of the charging cabin and take out the earphones. The left and right earphones will start automatically.  
2. Then the headset is connected to the mobile phone, the headset automatically enters the pairing state after manually turning off the Bluetooth of the mobile phone.  
Headset Connect to mobile phone: When the headset is paired, select "C36" in the Bluetooth list of mobile phone to pair. After the pairing is successful, the earphone will play "Connected/ Connected successfully". (Note: headset pairing status is not connected to the device, it will automatically shut down after 3 minutes)

Link back:  
1. After the left and right earphones are turned on, they will be connected back automatically  
2. After the headset is successfully paired with the mobile phone, the headset will automatically connect to the mobile phone after it is turned on when the Bluetooth of the mobile phone is enabled

### Touch operation

■ SIRO  
Wake up SIRI: Long press the Touch button on any headset for 3 seconds

■ MUSIC MODE  
Play/Pause: Click the Touch button on any headset  
Previous song: Double click the Touch button on the headset  
Next song: Double click the Touch button on the main headset  
Volume Plus: Three hits the main earphone Touch key  
Volume reduction: three strikes a pair of earphone Touch keys

■ CALL MODE  
Answer an incoming call: Click the Touch button on any headset  
Hang up: Click the Touch button on any headset  
Reject calls: Long press the Touch button of any headset

### The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.  
O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit required by GB/T 26572.  
X: Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.  
The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.  
Printed circuit board components:  
Including printed circuit boards and their parts, electronic components, etc. and depending on the product model, the earbuds you purchased may not contain all the above components.

Electronic and electrical products sold in the People's Republic of China must mark this LOGO, the number in the logo represents the product under normal use Environmental protection use period.

合格证

产品编号: \_\_\_\_\_

生产日期: \_\_\_\_\_

检验员: \_\_\_\_\_

### Warranty statement

Disclaimer  
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:  
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired. Free repair; free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by the ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 12(12) months.  
If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:  
1. Exceeding the validity period of the three packs;  
2. Altering the warranty card and product code does not match the product body;  
3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage obstacles or damage;  
4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident bad;  
5. The zipper and tower buckle are damaged due to excessive force;  
6. Disconnection or tearing caused by excessive load;  
7. Any damage caused by sharp objects;  
8. Products with signs of burning or flooding;  
9. Damage caused by unauthorized disassembly;  
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.  
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.