

BH-T10

User Manual

Thanks for using our wireless electronic products. For a good user experience, please read the manual carefully before using the products. Notice: To avoid unnecessary troubles, please do not disassemble these products by yourself, and please use the standard charger to charge.

Product overview

- Choose the ear cap that suits you.

First time using

- Tear off the insulating film.
- Put the earbuds into the charging case and close the lid to charge (the earbuds are in charging state).
- Open the lid of the case, and they will automatically turn on and pair with each other, then ready for pairing to the phone (both turn red and blue alternately).

Button control

MFB Power Switch

Take out from case OR Hold the power switch for 2s

When back into case OR No connection for 5mins OR Hold the power switch for 8s (when no music playing) OR Low battery

Game Low Latency Mode (not on the phone)

1x Accept L / R Earbud

2x Decline L / R Earbud

2s Reject L / R Earbud

1x Volume- L Earbud

1x Volume+ R Earbud

3x Voice assistant L Earbud

2x Play / Pause R Earbud

Hold Previous track L Earbud

Hold Next track R Earbud

3x Game Mode R Earbud

Active Noise Cancellation (ANC)

TWS State

When not on the phone, tap the MFB on the left earbud to switch among the following modes : when the earbuds turn on, they are defaulted to be ANC Off.

Transparency Mode

ANC On

ANC Off

Restore factory setting

1. When pairing to the phone, please tap both earbuds five times to reset them. They will disconnect and turn off, then power on again.

2. Please delete all paired records on the phone and search again for "BH-T10" on the bluetooth of mobile phone and reconnect.

Earbuds indicator

State	Indicator
Turn on	Flashes blue for 1s
Turn off	Flashes red for 1s
Pairing	Both flash blue quickly
Connected	No light
Music play	No light
Low battery	Flashes red every 4s
Charging	Red light on
Full battery	Red light off

Charging case indicator

Status	Indicator
Charging for case	White light flashes
Full Battery	Four lights on the charging case keep white
Open/Close	White on for a few seconds
Charging for earbuds	White light on
Low Battery	First light on the left flashes white

Specifications

Version	V5.0
Support	HFP,HSP,A2DP,AVRCP
Transmission distance	10m
Frequency range	2.402GHz~2.480GHz
Speaker	Φ 10mm*2
Impedance	32 Ω
Standby time (no music, ANC off)	About 72 hours
ANC (ON)/ Transparency (ON) :	About 7 hours
Music Playing Time	
ANC (OFF)/ Transparency (OFF) :	About 10 hours
Music Playing Time	
Talk time	About 5 hours
Earbud battery capacity	40mAh
Fully charged time	About 1.2 hour
Charging case battery capacity	400mAh
Charging time of charging case	About 1.5 hour
Weight (single earbud)	4.8 g

Note: Please put both earbuds in the charging case to fully charge them on first use.

Charging The Case

Please use a charger with an output voltage of DC5V/1A to charge the charging case. You can also use a computer USB or other USB interface charger to charge (please DO remember choose the charger authorized by formal manufacturer).

Signal transmission distance shown as below:

≤10m Signals is in normal transmission.

>10m Signals will be interrupted.

Notice:

△ When the charging case is out of power, it may cause the earbuds fail to shut down and remain connected to the phone even when they are placed in the charging case. So please remember to charge the charging case in time.

△ If moisture remains in the audio output hole, the sound may become fuzzy or completely inaudible. This is quite a normal case. In this case, please remove the earbuds and shake the audio output hole down several times to allow water to flow out or let it air dry for 1-2 hours, then the sound quality will become normal.

△ If there is noise, broken sound, or low sound, please take off the silicone ear cap and wipe it with a cotton swab.

△ If the earbud is not charging properly, please wipe the charging column with a cotton swab, and then charge it again.

Attentions

The Charging cable is not waterproof

The Charging case is not waterproof

Do not use hot water to disinfect the product

If there is water droplet on the surface, please wipe it with a dry cloth before putting them back into the charging case to avoid damaging the device.

Tip:

- If the product is dirty, please do not rinse it directly with water or use boiling water to soak and disinfect it. It is recommended to wipe the earbuds with an alcohol cloth or a wet tissue.
- If the product falls into the water accidentally, please pick it up in time and let it dry by natural wind under the sunshine for two hours before using it (otherwise it will affect the sound quality, thus fails to give you better experience).

- Do not use corrosive liquid to clean this product.
- When it is stained with any chemicals, please rub it with a damp cloth wet with clean water.
- Do not use this product under extreme circumstances for temperature below -10 degree Celsius or above 60 degree Celsius.
- To avoid explosion, please do not throw this product into fire.
- To avoid scratches, please do not touch the earbuds with sharp objects.
- Do not insert objects into the earbuds, otherwise it would cause damage to the internal components.
- Do not disassemble the earbud.
- Please keep regular charge to earbuds, don't leave them become empty battery status to keep their lifetime.
- Please do not charge this product with power adapter over 2A current. Excessive current may cause damage to battery.

Battery Warning !

There is a built-in lithium battery in this product. To avoid explosion, do NOT expose the product to intense sunlight, fire or throw it into fire.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.