

7. **EO Declaration:**

2. Do not use this product near water.
3. This product should be operated only by the type of power source indicated on the marking or on the type of instruction manual.
4. Do not operate the safety purpose of the **coloured plug**. A **coloured plug** has two **locks** with **one** lock **deeper** than the other. This **plug will fit into the power outlet only** if the **deeper lock** is inserted. **Do not** insert the **other lock** into the power outlet. **If the plug should not fit, do not try to** contact your distributor.
5. Protect the power cord from being pulled on or pinched particularly at plugs, connectors and handles. Do not use the power cord as a rope.
6. Do not overload electrical extension cords, or integrate extension receptacles as they can result in a risk of electric shock.
7. Never touch the power cord or the power plug when the opening is being touched. Dangerous voltage levels or shorted parts that could result in a fire or electric shock, may expose you to dangerous voltage or other hazards. Refer all servicing to qualified personnel.
8. Do not use the power cord as a support for opening or removing covers that may expose you to dangerous voltage or other hazards. Refer all servicing to qualified personnel.
9. Changes or modifications to this unit not expressly approved by the authority responsible for compliance could void the user's warranty to the equipment.
10. Do not use tools or implements not recommended by the product manufacturer as they may cause hazards.
11. A product and cart combination should be moved with care. Quick stops, excessive turning and starting may cause the cart to tip.
12. **Plugs** and openings in the cabinet are provided for ventilation and to ensure **proper** operation of the product and to protect it from overheating. **Do not block or cover** these openings.
13. **Unplug the product during lightning storm** or when unused for long periods of time.

#	ITEM	DESCRIPTION
A	Turntable Holder	Aluminum Alloy Turntable
B	Counter Weight	Turn to Adjust The Needle Pressure
C	RPM selector Switch	Turn To Select The Record Type (33 or 45) Speed Of Your Turntable
D	Tone Arm Lever	Push Forward And Pull Back To Raise And Lower Tone Arm
E	Tone Arm Rest Holder	Place The Tone Arm On This Holder When Not In Use
F	Tone Arm	Hold The Stylus That Produces Sound From The Record
G	Stylus	Generates Sound From A Playing Record
H	Pitch Control	Turn The Control To Adjust The Speed
I	Volume Control	Turn The Control To Adjust The Volume

Setting Up Your Turntable

You need to install the turntable before you can use it.

1. Take the accessories out of the packing case and check that the accessories are in complete and good condition.

2. **Install** the metal **platter** (the **bell** is pre-installed on the bottom of the metal **platter**) and a turntable mat on the metal **platter**.
3. **Install** dust cover.
4. Attach and adjust the counterweight.

Remove the red ribbon from the belt.

Note: When you want to take out the platter from the turntable, remove the mat first, then grasp the platter and pull it upward. This is especially important if you are shipping your turntable to prevent the platter from shaking.

NOTE:

1. Make sure the tone arm is securely locked to avoid any damage.
2. When you are done, don't forget to turn off the power on the turntable and your external device.

- **1 MILLION NEW LEADS TO REFINANCING**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

403-T003000-00-0002