



# Manual

## SAFETY & WARNINGS

Ensure to read all instructions and warnings in this user guide prior to first use. Retain this user guide for future reference.

- This laptop is suitable for use in non-tropical areas below 2,000 metres.
- The supplied power adapter requires 12V and 2A to charge the laptop. Do not use any third party adapters to charge the laptop.
- Do not drop the laptop.
- Do not have the laptop strongly impacted by heavy objects or surroundings.
- Do not use the laptop for long periods in any environment where it is too cold, too hot (> 45°C), highly humid, or dusty.
- Do not expose the laptop to direct sunlight.
- Avoid using the laptop in areas with strong magnetic or static fields.
- Do not allow water or any other liquid to touch the laptop. If any water or other liquid splashes onto the laptop, close it immediately and unplug the power adapter. Do not use the laptop until it is completely dry.
- Do not attempt to modify or disassemble the laptop yourself.
- Regularly backup data stored in the laptop to avoid the risk of accidental data loss.
- Do not clean the laptop with any chemical detergents or other liquids to avoid causing damage.
- Replacing the laptop battery with the incorrect type may result in an explosion. Ensure to only use the original batteries. If further assistance is needed, contact **help.Kogan.com**.

## CLEANING & CARE

Ensure the laptop is switched off before cleaning.

Wipe the laptop surface with a dry, soft cloth or paper towel.

# COMPONENTS



Laptop

Power adapter

User guide

# OVERVIEW

## Front view



No.	Name	Description
1	<b>Camera</b>	Used for photos, recording video, and video calls.
2	<b>Display</b>	HD LCD panel
3	<b>Microphones</b>	Built-in twin microphones can be used to record audio and interact in video calls.
4	<b>Indicator lights</b>	These respective indicators will illuminate when power, caps lock, or the digital key lock is used.
5	<b>Power button</b>	Used to control the power status of the laptop.
6	<b>Keyboard</b>	QWERTY keyboard with Windows key and function options (for example, press Fn + F5 to mute audio playback).
7	<b>Trackpad</b>	Used as a mouse for on-screen navigation and gestures.
8	<b>Left/right trackpad buttons</b>	Used as the left and right-click buttons of a traditional mouse.

## Left view




## Right view



No.	Name	Description
9	<b>Charging indicator</b>	Illuminates red when the laptop is being charged.
10	<b>Charging port</b>	Plug the power adapter into the charging port to charge the laptop.
11	<b>USB 3.0 port</b>	Input for flash drives, additional keyboard/mouse, and other compatible devices supporting USB 3.0 or older.
12	<b>Mini HDMI port</b>	Suitable for connecting a TV or external monitor using a mini HDMI cable (not supplied).
13	<b>microSD card slot</b>	microSD card reader suitable for transferring files.
14	<b>USB 2.0 port</b>	<ul style="list-style-type: none"><li>Input for flash drives, additional keyboard/mouse, and other compatible devices.</li><li>This port does not support devices using USB 3.0 or newer.</li></ul>
15	<b>3.5mm audio port</b>	Suitable for connecting audio devices (for example, headphones, external speakers, amplifiers) using an AUX cable (not supplied).

## Bottom view

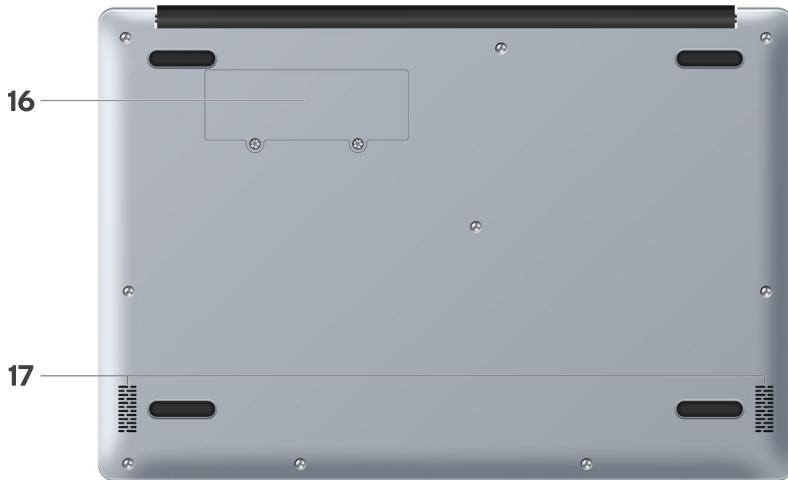

No.	Name	Description
16	<b>SSD expansion slot</b>	Expansion slot for internal storage. This laptop fits an M.2 2280 SSD and is not compatible with other sizes.
17	<b>Speakers</b>	Two built-in speakers allowing for stereo audio output.

# GETTING STARTED

Plug one end of the power adapter into the charging port then plug the other end into a power outlet. Switch the power on at the outlet.

The charging indicator should illuminate red.

## Note:


Ensure to charge the laptop for at least 3 hours prior to turning it on for the first time.

Press the power button to turn on the laptop. When the laptop is turned on for the first time, you may be asked to set up Windows 11. Follow the on-screen prompts to complete the setup.

# USING WINDOWS 11

## Desktop

Once setup has finished, the laptop will boot onto the desktop. There may be icons on the desktop. These act as shortcuts to access applications. They can be accessed by double-clicking on the shortcut.

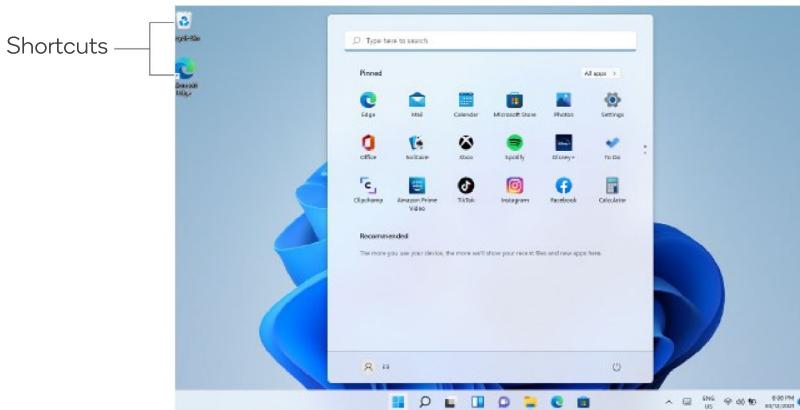

## Note:


You may need to log into your Microsoft account for programs to run with full compatibility.

## Start menu

Click on the Windows icon at the bottom of the screen to bring up the start menu.

Apps already installed on the computer can be accessed via the start menu. Recently used apps will be listed under the 'Recent' heading in the start menu for easy access.


More apps can be installed via the Microsoft Store.

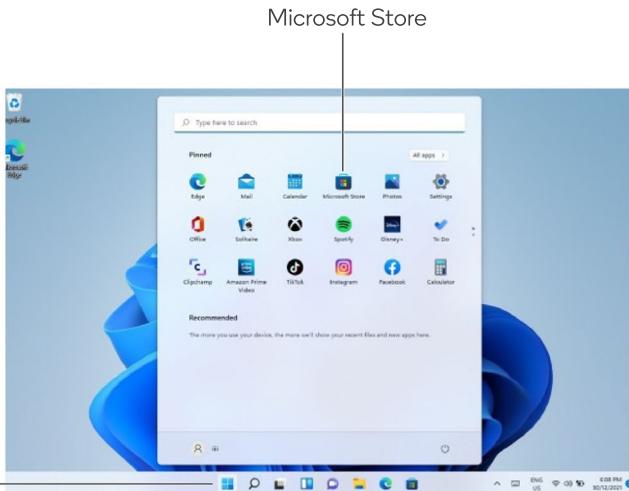

Windows icon



## Notification menu

The notification menu is accessible by clicking on the time/date in the lower-right corner of the screen. It will show notifications such as updates, emails received, calendar reminders, and allows for quick access to settings (for example, Wi-Fi, Bluetooth, brightness).

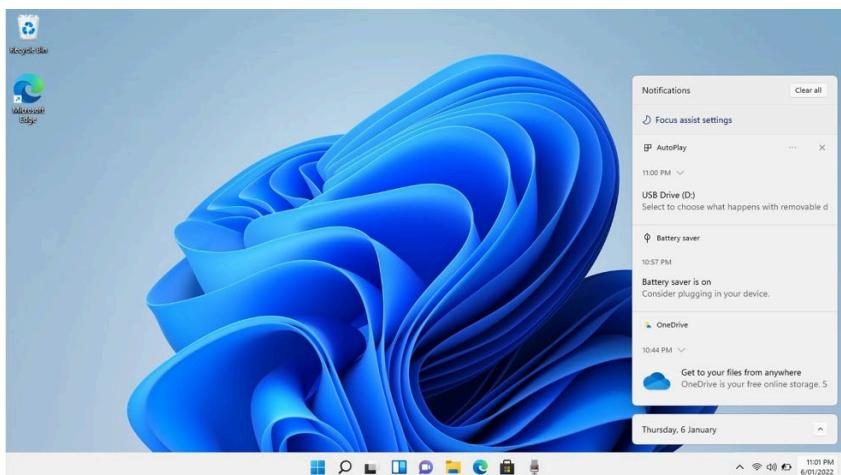


## Multitasking

Drag one window to the left or right side of the screen and let go when you can see an overlay of the window around half of the screen. You can then select another open window to fill the free space on the other half of the screen.

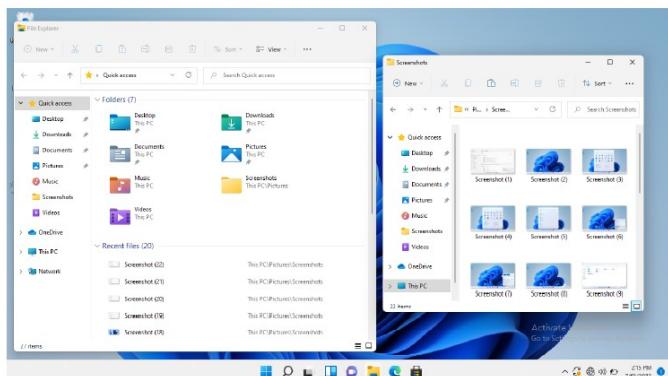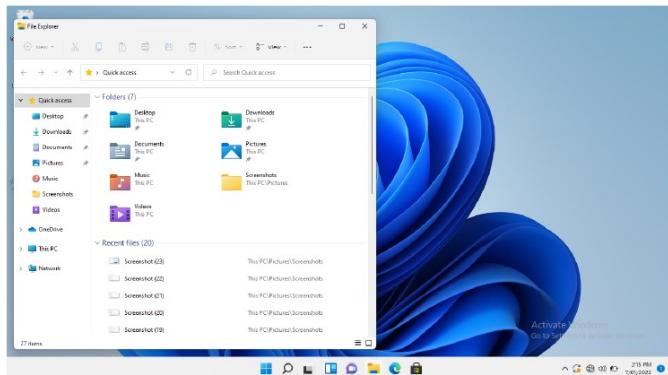

## Sleep, restart and shut down

Click on the Windows icon on the bottom of the screen, then click on the power icon. Click on 'Sleep', 'Restart' or 'Shut Down' to perform the appropriate action.

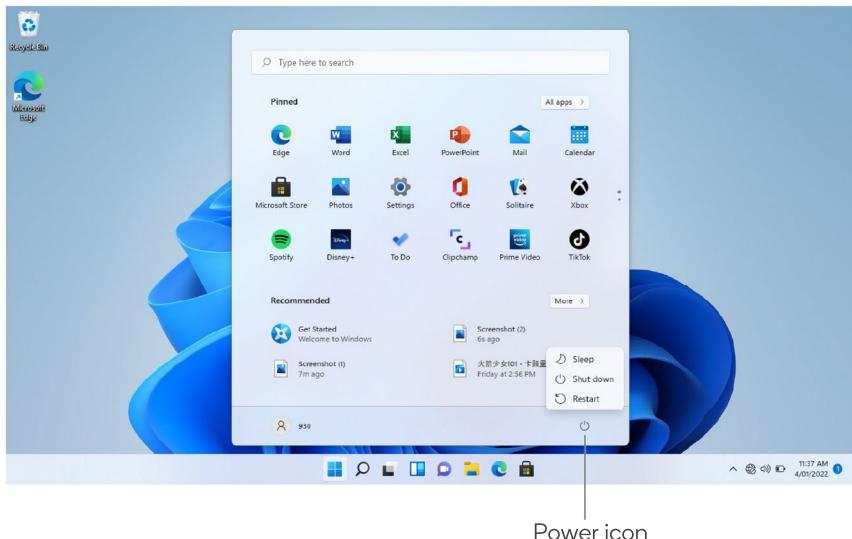

To wake up the laptop from sleep, press the power button. If the laptop is unresponsive, press and hold down the power button to shut down the laptop. Press the power button again to turn the laptop back on.

# INSTALLING AN SSD


This laptop fits an M.2 2280 SSD (22mm x 80mm) and is not compatible with other sizes.

Ensure the laptop is turned off before installing an external SSD (not supplied).

1. Flip the laptop over and remove the two screws holding the SSD (M.2 2280) cover in place. Remove the cover.
2. Place your SSD with the contacts facing on the right. This is where the contacts of the laptop are located. Slide the SSD to the right to install.
3. Use the existing threading to screw the SSD into place. Once secured, place the cover back into position and resecure the screws removed from step 1.

## Notes:

- Your SSD may be inserted with either side facing up, however, only one orientation will function correctly with the laptop. If you are unable to detect your SSD with one orientation, try to change the orientation of the SSD to show the other side.
- Be careful not to damage the contacts.
- Images are used for reference only.

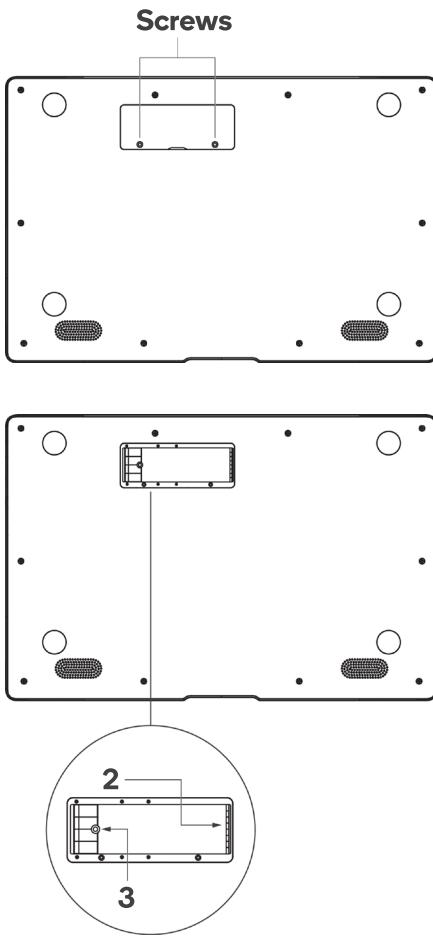

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.