

# **Victoria's Secret Vibrator**



## **User Manual**


If the product does not work, charging cable is missing .bluetooth connection is not available. please feel free to contact us.

Email: [AfterSaleus2@outlook.com](mailto:AfterSaleus2@outlook.com)

We will reply within 24 hours

# Product Parameters

Product Name	Victoria's Secret Vibrator
Product Material	Silicone + ABS
Product Specification	L3.46*W1.65*H1.46in
Weight	1.61oz
Battery Type	Lithium Battery
Charge Mode	USB Rechargeable
Charging Time	2H
Using Time	1H

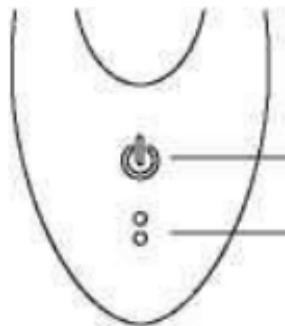

## Button Instruction

Long press to turn ON/OFF  
Click again to switch vibrating modes

USB magnetic charging

# How To Use

1. Long press to turn on Victoria's Secret Vibrator, click to switch vibrations and sucking patterns.

2. Remote control switch vibrations and sucking patterns.

/ —X— Click switch sucking modes

**I \* —Turn ON/OFF**

I I \*\* I -j- Click switch vibration modes

3. APP control switch vibrations and sucking patterns, download and install APP.

## ► iOS System

2.1. Search for "LoveSpouse" in the App Store, download and install.

2.2. Scan the QR code with your mobile phone and follow the instructions to download and install "LoveSpouse" APP.

## ► Android System

2.3. Search for "LoveSpouse" in the Google Play, download and install.

2.4. Scan the QR code with your mobile phone and follow the instructions to download and install "LoveSpouse" APP.



# Device Connection and Control


1. Make sure bluetooch is turned on.

2. Open the "LoveSpouse" APP

3. There are "Visitors login" and "New User two modes login in. If you want to experience more operation modes, select "New user, follow the instructions complete the registration.

► Visitors login

1. Click "Visitors login", click "+", select Jump egg & Wear.

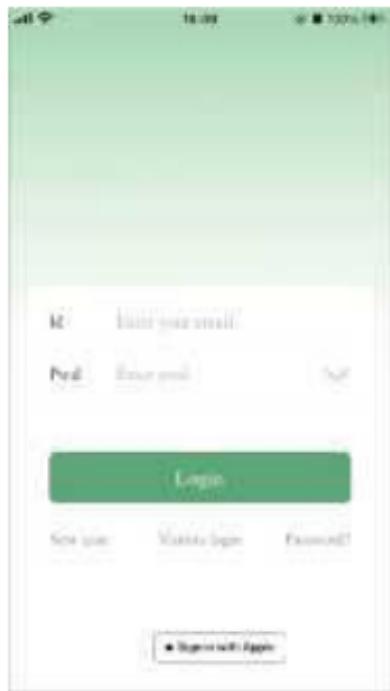

## 2. Connection Egg/Rod/Cup

2.1. Classic mode: Click any icon switch vibrations and sucking patterns.

2.2. Solitary mode:

- Vibration control 1: Click any icon switch sucking patterns.
- Vibration control 2: Click any icon switch vibrations patterns.



W z®榮

Mode4 Mode5 Mode6

( \$ \$ )去多



### ► New user

1. Click "+", the device

binding scan box will appear. 2. Scan the device identification code on the product packaging box or manual.

3. Long press the device icon to delete the device and modify the device name.

4. After the device is deleted, if you want to restore it, you need to scan the device binding code again.



Device identification code



## 5. Connection and Control

### ► Solitary mode:

Click any icon on the APP, and the device will start the corresponding vibration frequency.

### ► Music mode:

Click the music mode or slide the operation interface of the APP to enter the music mode (Note: the sound of the mobile



phone playing music cannot be too low).

## ► **Delimit mode:**

Click on the swipe mode or slide the operation interface of the APP to enter the swipe mode. Tap "+" swipe your finger on the phone screen, and the device will vibrate with the change of the swipe. You can keep the vibration mode for next use.

## ► **Interactive mode:**

- Click the interactive mode.
- Slide the operation interface of the APP.
- Click the interactive button on the APP home page to enter the interactive mode.



# Interactive Mode Usage

Add friends: Click the friend button on the interactive interface.

Step 1: Add friends by gender and age, you can also search by ID number, nickname, mobile phone number, and email.

Step 2: After the search results are displayed, you click the add button on the right, and the system will send the



Friend search



611909931


request information to your friend.

The result of the search

Add buddy

Step 3: Your friend click agree,add friends to each other successfully.


Step 4: Click the icon of the friend you want to interact with, and click OK. If the other party accepts your invitation, the interactive connection is successful (Note: If the other party is not connected to the toy, your interactive interface has no control buttons at this time. The toy must be connected to the other party to have

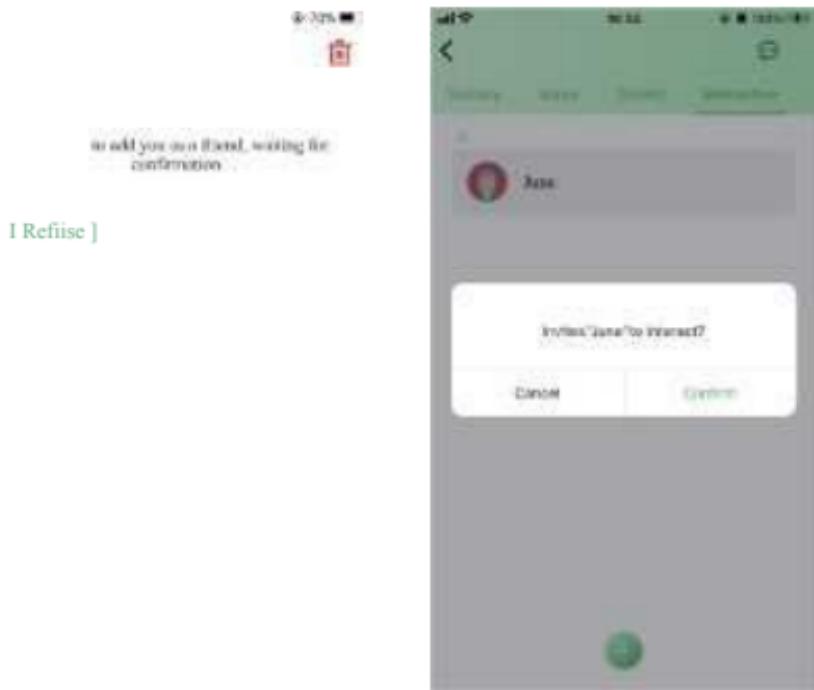

control buttons on your interactive interface).

Step 5: After the interactive connection is successful, the

video is not turned on by default. You must first invite the other party's video, and the other party agrees to turn on the video function before opening both parties' videos (Note: When interacting, the control button is to control the other party's device, not your own device).

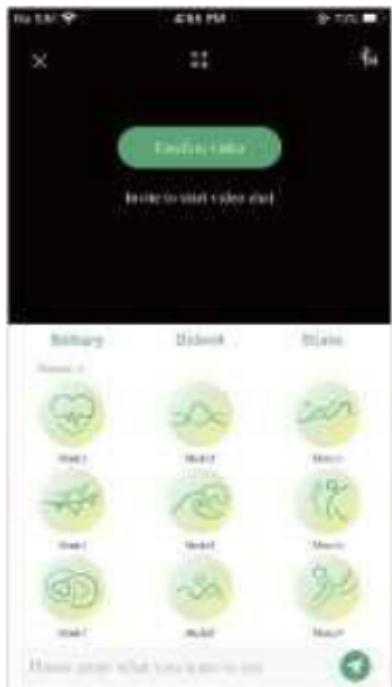

## Notes

1. Please read the manual carefully before use.

2. Please make sure it is fully charged before use. Please don't use quick charging head and don't use the product while charging.
3. Keep it clean and don't block the air hole.
4. When using the product, please keep the phone and product within 1M to prevent signal loss.
5. After use, please dry in the air and keep it in a safe place.

## **Satisfactory Warranty**

1. If you are satisfied with our product, please share with other buyers.
2. There are any issues, please feel free to contact us via [Aftersaleus2@outlook.com](mailto:Aftersaleus2@outlook.com)

## FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.