 



## Battery Installation:

# GASBOAT

Remote control toy

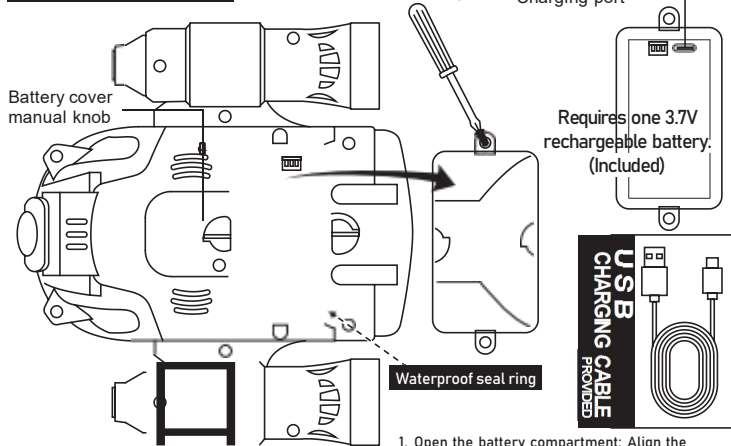

 1. Open the battery compartment: Align the screwdriver with the small contact point on the battery cover and gently press down while dragging the battery cover to open.
2. Insert one 3.7V rechargeable battery into the toy battery compartment with correct polarity.
3. Insert 2 x 1.5V "AA" batteries into the battery compartment of the remote controller with correct polarity.
4. Close the battery compartment: Tighten the screw by turning clockwise with a Phillips screwdriver.

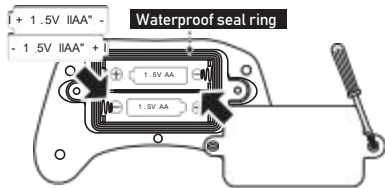

## caution:

This product is a children's toy that will swim in the water through the 2.4GHz wireless remote control. This product has the function of automatic pairing. After successful pairing, it can only be controlled one-to-one.

While pairing, Put the toys and remote controller as close as possible.

The toy has the function of sensing water. The motor will stop running once it is taken out of the water.

The toy possesses the waterproof function.

The remote controller possesses the waterproof function.

Distance of remote control: 30-40 meters in unobstructed environment.

Operate only in calm clear water, Pools and shallow areas are recommended. After each use, Wipe with a towel and allow to dry completely.

Do not operate near concrete walls which may disturb transmission. Your designed for operation in fresh water, Do not submerge the water for a long time.

Maximum 10 players at a time.

Do not press the gasboat into the water for a long time.

Please install the gasboat battery according to the correct direction.

## WARNING:

Never allow young children to play in or around water without adult supervision.

The toy can only be used in water after it is installed in accordance with the instructions.

## operate:



Forward



Backward



Swim to the right



Swim to the left



 
Swim left and back



Swim right and back

## How To Play:

- Put the toy into the water, the gasboat headlight flashes, then turn on the remote control, the remote control indicator keeps on and the gasboat headlight stops flashing, then pairing is completed. (Note: If the red light of the front indicator keeps flashing, it means that pairing is failed; pick up the toy from the water, turn off the remote control, operate again according to the above method until successful pairing).
- Left key of the remote control: Automatically demonstrates the swimming process of the toy
- Right key of the remote control: Start/stop jetting water of the gasboat (water jetting duration is 20 seconds)

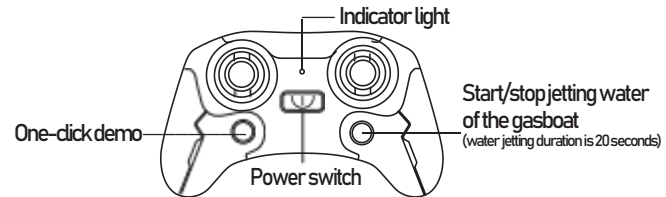

## Battery Notice:

1. The remote control requires two 1.5V AA non-rechargeable batteries (not provided);
2. The toy body requires one set of 3.7V rechargeable batteries (provided);
3. Do not charge the non-rechargeable batteries;
4. Do not mix new and old or different types of batteries;
5. Please note the polarity when installing or replacing the battery;
6. Please timely take out the battery with low power;
7. Do not short circuit the power supply terminal;
8. Take out and install the rechargeable battery: Loosen the main battery compartment screws with screwdriver, open the battery cover, connect and pull out the battery connector socket in the correct direction, then close the battery cover, tighten the screws of the battery cover with screwdriver. The toy can only be used in water after it is installed in accordance with the instructions;
9. This rechargeable battery is non-replaceable, and the rechargeable battery can only be charged under the supervision of adult;
10. Connect the supplied USB charger to the power supply with output voltage of 5.0V 2A; (such as: USB mobile phone charger, computer USB interface) to charge the battery;
11. During charging, the USB charger will be slightly warm, which is normal;
12. The product can only be charged with the recommended USB charger, and the USB charger is not a toy;
13. Regularly check whether the wire, plug, casing and other parts of the USB charger and the recommended charger are damaged. If there's any damage, stop using it before it is repaired;
14. Disconnect the USB charger before cleaning the toy;
15. Please do not disassemble or throw the bad batteries and battery pack into fire or water to avoid accident;
16. The toy must not be used by children under age 3.
17. Please keep your hands dry when charging, and keep the battery slot dry after taking out the battery.

 
 


## 电池安装:

# GASBOAT

Remote control toy

充电口

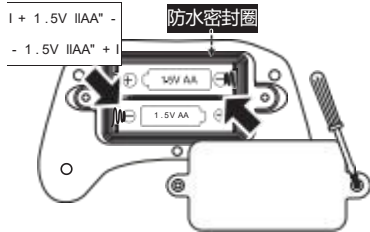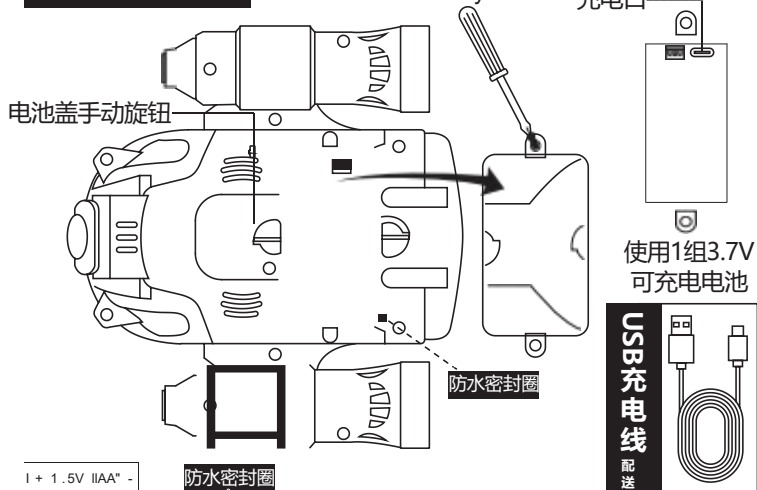

1. 打开电池仓盖子: 用十字螺丝刀 (配送) 逆时针旋转松开螺丝。
2. 将1颗3.7V可充电电池按照正确的极性装入玩具的电池仓中。
3. 将2节1.5V“AA”非充电电池按照正确的极性装入遥控器的电池盒中。
4. 关闭电池仓盖子: 用十字螺丝刀顺时针旋转拧紧螺丝。

## 玩法说明:

- 将玩具放入水中, 汽艇前灯闪烁, 然后开启遥控器, 遥控器灯常亮且汽艇前灯停止闪烁, 即可完成对频。(注意: 若前灯红灯一直闪烁, 表示对频不成功; 重新将玩具从水面拿起来, 遥控器关闭, 重新按上面的方法操作, 等待对频成功)。
- 遥控器左边按键: 自动演示玩具游动过程
- 遥控器右边按键: 开启/停止汽艇喷水(喷水时间20秒)

**操作:** 速度是可以控制的-使用微妙的动作或全速来实现真实的动作!



向前进



向前右转



向后左转



自动演示



向后退



向前左转



向后右转



开启/停止汽艇喷水  
(喷水时间20秒)

## 警告:

该产品是儿童玩具, 可通过2.4GHz无线遥控在水中游动。本产品具有配对功能, 配对成功后只能一对一控制。配对时, 将玩具与遥控器尽可能地靠近。玩具主体具有防水功能, 遥控器具有防水功能。遥控距离: 在畅通的环境中30至40米。玩具主体仅可置于平静、清澈的水中进行玩耍, 建议使用浅水池。每次使用后, 请用毛巾擦拭并使其完全干燥。

请勿在混凝墙附近操作, 否则可能会干扰信号传输。您的遥控玩具专为在淡水中使用而设计, 不要长时间浸泡在水中。最多可同时容纳10位玩家。请勿将汽艇长时间按压进水里。请按正确的方向安装汽艇电池

## 警告:

- 本产品必须在成人直接监护下使用。
- 本产品内含有小零件请勿吞食以免发生窒息危险, 不适合三岁以下儿童使用。
- 切勿让孩子单独在水里或者池塘旁边玩耍。
- 玩具只有按照说明书的要求完全安装好才能在水中使用。

## 电池注意事项:

1. 遥控器使用2节1.5VAA非充电电池;
2. 玩具主体使用1组3.7V充电电池;
3. 非充电电池不可充电;
4. 充电电池只能在成人监护下充电, 充电电池充电前应先从玩具中取出, 勿让小孩自行充电;
5. 不可混用新旧或不同类型的电池;
6. 安装或更换电池请注意极性;
7. 用尽的电池应从玩具中取出。若长期不使用, 请将玩具中的电池取出;
8. 电源端不能短路;
9. 取出和放入电池: 请按照使用说明放入和取出电池, 玩具只有按照说明的要求完全安装好才能在水中使用;
10. 使用配送的USB充电头连接到输出电压为5.0V 2A的电源上; (如: USB手机充电器、电脑USB接口上) 进行充电;
11. 玩具不能连接到多于推荐数量的电源上;
12. 在充电过程中, USB充电头会出现微温, 属正常现象;
13. 产品只能使用配送的USB充电头及推荐的电源进行充电, USB充电头及推荐的电源不是玩具;
14. 必须定期检查USB充电头及推荐使用的充电器的电线、插头、外壳和其它部件是否损坏, 如发现损坏应停止使用, 直至修复完好;
15. 清洁玩具前应停止与USB充电头断开连接;
16. 请不要将坏电池、电池组分解或扔到火中、水里, 以免发生意外;
17. 充电器的额定输入电压必须与当地的家用电压相符;
18. 玩具不得供3岁以下的儿童使用。
19. 充电时请保持手部干燥, 取出电池后保持电池槽干燥。



mm

## **Warning**

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## **FCC Statement**

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

## **FCC Radiation Exposure Statement:**

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in the portable exposure condition without restriction.