

## MOSASAURUS

The largest apex predator in the Mesozoic oceans

### 2.4GHz Remote Control

#### Battery Installation:

**Pump Hole**

**Water sensor switch**  
The bottom of the touches the water surface. Toy the blue sensor light on the top lights up. The remote control is turned on. And the red light goes out to complete the pairing.

Open the waterproof layer cover. Combine the power cord of the with the battery cable. And then close the waterproof layer cover. Tighten the three screws.

**Requires one 3.7V 500mAh rechargeable battery.(Included)**

**ON / OFF**

**Remote controller requires 2 x 1.5V alkaline "AAA" batteries. (Not included)**

1. Open the battery compartment: Align the screwdriver with the small contact point on the battery cover and gently press down while dragging the battery cover to open.
2. Insert one 3.7V 500mAh rechg rechargeable battery into the toy battery compartment with correct polarity.
3. Insert 2 x 1.5V "AAA" batteries into the battery compartment of the remote controller with correct polarity.
4. Close the battery compartment: Tighten the screw by turning clockwise with a philips screwdriver.

#### How To Play:

- Put the toy in water and the blue light on the top will light up. Then turn on the remote control. And the red light of the remote control will go out to complete the linking between. (Note: if the red light of the remote control keeps flashing. The linking with is unsuccessful. Pick up toy from the water again. Turn off the remote control. And re-operate according to the above method. And wait for the successful linking.)
- On the left button of the remote control is the automatic demonstration of swimming process.
- On the right button of the remote control is the water spray. (Press once the water spray. Press again to turn off the water spray.)

#### Operate:

The speed of the can be controlled-use subtle movements of full speed to achieve real actions.

Forward

Swim to the right

Swim left and back

One-click demo

Water spray

Backward

Swim to the left

Swim right and back

#### Caution:

- This product is a children's toy that will swim in the water through the 2.4GHz wireless remote control.
- This product has the function of automatic pairing. After successful pairing, it can only be controlled one-to-one.
- While pairing, Put the toys and remote controller as close as possible.
- The toy has the function of sensing water. The motor will stop running once is taken out of the water.
- The toy possesses the waterproof function.
- The remote controller does not possess the waterproof function.
- Distance of remote control: 30-40meters in unobstructed environment
- Operate only in calm clear water. Pools and shallow are recommended
- After each use, Wipe with a towel and allow to dry completely.
- Do not operate near concrete walls which may disturb transmission.
- Your designed for operation in fresh water. Do not submerge the water for a long time.
- Maximum 10 players at a time.

#### Battery Notice:

- The remote control requires two 1.5V AAA non-rechargeable batteries (not provided).
- The toy body requires one set of 3.7V 500mAh rechargeable batteries (provided).
- Do not charge the non-rechargeable batteries.
- Do not mix new and old or different types of batteries;
- Please note the polarity when installing or replacing the battery.
- Please timely take out the battery with low power.
- Do not short circuit the power supply terminal.
- Take out and install the rechargeable battery: Loosen the main battery compartment screws with screwdriver, open the battery cover, connect and pull out the battery connector socket in the correct direction, then close the battery cover, tighten the screws of the battery cover with screwdriver. The toy can only be used in water after it is installed in accordance with the instructions.
- This rechargeable battery is non-replaceable, and the rechargeable battery can only be charged under the supervision of adult.
- Connect the supplied USB charger to the power supply with output voltage of 5.0V 500mAh; (such as: USB mobile phone charger, computer USB interface) to charge the battery.
- During charging, the USB charger will be slightly warm, which is normal.
- The product can only be charged with the recommended USB charger, and the USB charger is not a toy.
- Regularly check whether the wire, plug, casing and other parts of the USB charger and the recommended charger are damaged. If there's any damage, stop using it before it is repaired.
- Disconnect the USB charger before cleaning the toy.
- Please do not disassemble or throw the bad batteries and battery pack into fire or water to avoid accident.
- The toy must not be used by children under age 3.

## 2.4GHz 遥控 沧龙

中生代海洋中顶级的掠食者

#### 电池安装:

**泵孔**

**水感应开关**  
底部接触到水面,顶部的感应灯亮起,遥控器开启,灯灭即可完成配对。

打开防水层盖子,把电源线与电池线连接,再盖上防水层盖子,拧紧三颗螺丝。

**开/关**

**遥控器需要2节1.5V "AAA" 非充电电池 (不配送)**

**USB 充电接头 配送**

**使用1组3.7V 500mAh 可充电电池 (配送)**

- 1.打开电池仓盖子:用十字螺丝刀(配送)逆时针旋转松开螺丝。
- 2.将1颗3.7V 500mAh可充电电池按照正确的极性装入玩具的电池仓中。
- 3.将2节1.5V "AAA"非充电电池按照正确的极性装入遥控器的电池仓中。
- 4.关闭电池仓盖子:用十字螺丝刀顺时针旋转拧紧螺丝。

#### 玩法说明:

- 将玩具放入水中,顶部灯亮起,然后开启遥控器,遥控器灯熄灭,即可完成配对。(注意:若遥控器灯一直闪烁,表示配对不成功;重新将玩具从水面拿起来,遥控器关闭,重新按上面的方法操作,等待配对成功。)
- 遥控器左边按键是自动演示玩具游动过程。
- 遥控器右边按键是喷水功能(按一下开启喷水,再按一下即可关闭喷水)。

#### 操作:

速度是可以控制的-使用微妙的动作或全速来实现真实的动作!

向前进

向前右转

向后左转

一键演示

喷水

向后退

向前左转

向后右转

#### 警告:

- 该产品是儿童玩具,可通过2.4GHz无线遥控在水中游动。
- 本产品具有配对功能,配对成功后只能一对一控制。
- 配对时,将玩具与遥控器尽可能地靠近。
- 玩具主体具有感应水的功能,将玩具从水中取出后电机将停止运作。
- 玩具主体具有防水功能。
- 遥控器不具备防水功能。
- 遥控距离:在通畅的环境中30至40米。
- 玩具主体仅可置于平静、清澈的水中进行玩耍,建议使用浅水池。
- 每次使用后,请用毛巾擦拭并使其完全干燥。
- 请勿在眼睛附近操作,否则可能会干扰信号传输。
- 您的遥控器专为在淡水中使用而设计,不要长时间浸泡在水中。
- 最多可同时容纳10位玩家。

#### 电池注意事项:

- 遥控器使用2节1.5V AAA非充电电池(不配送);
- 产品只能使用配送的USB充电头及推荐的电源进行充电,USB充电头及推荐的电源不是玩具;
- 非充电电池不可充电;
- 充电电池只能在成人监护下充电,充电电池充电前应从玩具中取出;
- 不可混用新旧或不同类型的电池;
- 安装或更换电池时注意极性;
- 请及时取出电量低的电池;
- 电源端不能短路;
- 取出和放入电池:请按照使用说明放入和取出电池,玩具只有按照说明的要求完全安装好才能在水中使用;
- 使用配送的USB充电头连接到输出电压为5.0V 500mAh的电源上;(如:USB手机充电器、电脑USB接口上)进行充电;
- 在充电过程中,USB充电头会出现微温,属正常现象;
- 必须定期检查USB充电头及推荐的电源的电源线、插头、外壳和其它部件是否损坏,如发现损坏应停止使用,直至修复完好;
- 清洁玩具前应使用USB充电头断开连接;
- 请不要将电池、电池组分解或扔到火中、水里,以免发生意外;
- 玩具不得供3岁以下的儿童使用。

## **FCC Statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.