 


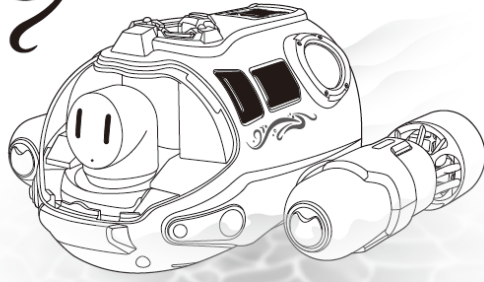


SPRAY GASBOAT

2.4GHz Remote Control




PLAY ON THE WATER

 WARNING:
Never allow young children to play in or around water without adult supervision.

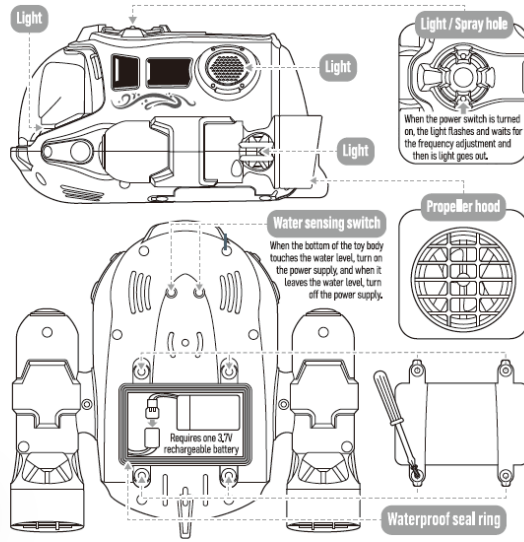


The Toy Body Battery Installation:

 1. Open the battery compartment. Align the screwdriver with the small contact point on the battery cover and gently press down while dragging the battery cover to open.
2. Insert one 3.7V rechargeable battery into the toy battery compartment with correct polarity.
3. Close the battery compartment. Tighten the screw by turning clockwise with a philips screwdriver.



USB Charging

 The light is constantly on while the battery is charging, and when the light goes out, the charging is completed.

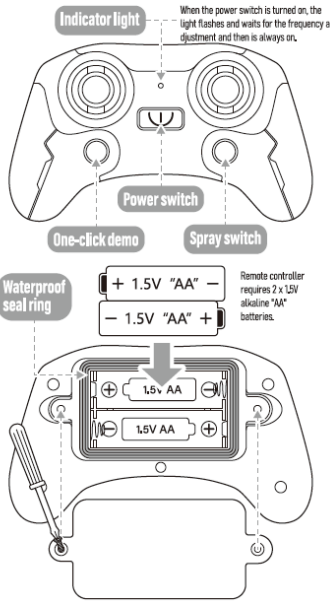

When the power switch is turned on, the light flashes and waits for the frequency adjustment and then is always on.

Remote controller requires 2 x 1.5V alkaline "AA" batteries.

Remote Control Battery Installation:

1. Open the battery compartment. Align the screwdriver with the small contact point on the battery cover and gently press down while dragging the battery cover to open.
2. Insert 2 x 1.5V "AA" batteries into the battery compartment of the remote controller with correct polarity.
3. Close the battery compartment. Tighten the screw by turning clockwise with a philips screwdriver.

Operate:



Forward



Backward



Swim to the right



Swim to the left



Swim left and back



Swim right and back

How To Play:

- Put the toy in water and the light on the top will flashing. Then turn on the remote control. And the light of the remote control will light up to complete the linking between. (Note: if the red light of the remote control keeps flashing. The linking will be unsuccessful. Pick up toy from the water again. Turn off the remote control. And re-operate according to the above method. And wait for the successful linking.)
- On the left button of the remote control is the automatic demonstration of swimming process.
- On the right button of the remote control is the spray. (Press once the spray. Press again to turn off the spray)

Caution:

- This product is a children's toy that will swim in the water through the 2.4GHz wireless remote control.
- This product has the function of automatic pairing. After successful pairing, it can only be controlled one-to-one.
- While pairing, Put the toys and remote controller as close as possible.
- The toy has the function of sensing water. The motor will stop running once is taken out of the water.
- The toy possesses the waterproof function.
- The remote controller possesses the waterproof function.
- Remote control distance: About 30 meters in an unimpeded environment.
- Operate only in calm clear water. Pools and shallow are recommended.
- After each use, Wipe with a towel and allow to dry completely.
- Do not operate near concrete walls which may disturb transmission.
- Your designed for operation in fresh water. Do not submerge the water for a long time.
- Maximum 10 players at a time.

WARNING:

- This product must be used under the supervision of adult.
- This product contains small parts and is not suitable for children under 3 years old to avoid swallowing them and causing asphyxia.
- Never let children play alone in the water or near a pond.
- The toy can only be used in water after it is fully installed according to the User's Manual.

This packing contains important information, please keep it properly.

Battery Notice:

1. The remote control requires two 1.5V AA non-rechargeable batteries (not provided).
2. The toy body requires one set of 3.7V rechargeable batteries (provided).
3. Do not charge the non-rechargeable batteries;
4. Do not mix new and old or different types of batteries;
5. Please note the polarity when installing or replacing the battery;
6. The exhausted batteries should be removed from the toy. If the toy is not used for a long time, please take the batteries out of the toy;
7. Do not short circuit the power supply terminal;
8. Take out and install the rechargeable battery. Loosen the main battery compartment screws with screwdriver, open the battery cover, connect and pull out the battery connector socket in the correct direction, then close the battery cover, tighten the screws of the battery cover with screwdriver. The toy can only be used in water after it is installed in accordance with the instructions;
9. This rechargeable battery is non-replaceable, and the rechargeable battery can only be charged under the supervision of adult;
10. Connect the supplied USB charger to the power supply with output voltage of 5.0V 2A; (such as: USB mobile phone charger, computer USB interface) to charge the battery;
11. During charging, the USB charger will be slightly warm, which is normal;
12. The product can only be charged with the recommended USB charger, and the USB charger is not a toy;
13. Regularly check whether the wire, plug, casing and other parts of the USB charger and the recommended charger are damaged. If there's any damage, stop using it before it is repaired;
14. Disconnect the USB charger before cleaning the toy;
15. Please do not disassemble or throw the bad batteries and battery pack into fire or water to avoid accident;
16. The toy must not be used by children under age 3.



FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.