

Model:RR113-3BT

P/N: RR113-523

Note:Entering programming mode erases all remotes that were programmed. You must reprogram all remotes you want to work once you have entered the programming mode.

You must perform each of the first twelve steps within 5 seconds of each other to enter programming mode. Programming each remote (step 13) must be done within 10 seconds.

1. Make sure the doors are unlocked.
2. Turn the ignition to the ON position (II)
3. Press the LOCK or UNLOCK button on the remote.
4. Turn the ignition to the ACCESSORY (I) or LOCK (O)
5. Turn the ignition to ON (II).
6. Press the LOCK or UNLOCK button on same remote.
7. Turn the ignition to ACCESSORY (I) or LOCK (O).
8. Turn the ignition to ON (II).
9. Press the LOCK or UNLOCK button on the same remote.
10. Turn the ignition to ACCESSORY (I) or LOCK (O).

11. Turn the ignition to ON (II).
12. Press the LOCK or UNLOCK button on the same remote. Make sure the door locks cycle to indicate that the system has entered programming mode.
13. Press the LOCK button on each remote that you want programmed. Make sure the doors locks cycle each time to indicate that remote has been accepted. The system will accept up to three remotes.
14. Turn the ignition to LOCK (O) to exit the programming remote.
15. Test remotes.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.