

Model:RR129-4BT

P/N: RR129-751

Step by Step How to Programming Instructions:

Use these instructions if your Rogue has remote head key. These instructions will only program the remote portion of your key. You will have to have a Locksmith cut and program the key portion of your key.

1. Close and lock all doors with the driver' s side power lock/unlock switch.
2. Insert key into ignition and remove it from the ignition key cylinder at least six times within 10 seconds. Your Hazard Lamps will flash if you have performed this step successfully. NOTE: Withdraw key completely from ignition cylinder each time. If this procedure is performed too fast, system will not enter programming mode.
3. Insert key into the ignition cylinder and turn to the ACC position.
4. Within 5 seconds, push ANY button on the remote transmitter. Your Hazard Lamps should flash. NOTE: Do not press the button more than one time in the above step. If the button is pressed more than one time, the programming procedure will not be successful.

5. If there are any remaining transmitters (including the old ones), unlock then lock all doors using the driver' s side power lock/unlock switch and within 5 seconds, push ANY button on the next remote. Your Hazard Lamps should flash. Repeat this step for each transmitter (including any existing transmitters).
6. Turn the key to the OFF position then remove keys from the ignition. Unlock the doors using the driver's side power unlock/lock switch and open the drivers side door.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.