

2.4G+Bluetooth

Two zone dual-mode keyboard



Windows



Mac OS



Androld

MODEL: K835

For better usage experience of the product,please read this manual before using it.

Product features:

- 1.Support switching back and forth across devices
2. mode switching; the mainstream equipment of the general market
3. Bluetooth 5.0 is better compatible with new and old devices
4. Connect version 5.0 to hibernate and wake up faster
5. With high frequency equipment switching, the keyboard works smoothly

Connection Description:

Note: FN key is the second key in the bottom left corner of the keyboard

1. Turn the power switch to ON to turn on the keyboard
2. 4G mode: (system default)
Take out the USB receiver and plug it into the computer
- Bluetooth mode:
Press and hold FN, then press 1, and then press and hold for 3 seconds,
the blue light flashes, and Bluetooth device 1 enters the searched state
on the device side—open the system settings—turn on Bluetooth→search and add

Multi device connection:

1. Fn +1 is connected to Bluetooth device 1
2. FN+2 is connected to Bluetooth device 2
3. FN+3 is connected to Bluetooth device 3
4. FN+4 is connected to USB, 2.4G wireless reception
5. FN+1.2.3.4 combined single press can switch the paired device
6. FN+1.2.3, long press the flash light for 3 seconds to start the state of being searched
(connect the new device)


Connection supplement:

1. The initial connection keyboard needs to switch the device to the corresponding system
2. If the system is not switched, the function key may not work normally!
3. The use distance of keyboard is 5-10m, and the distance is related to different equipment and environmental factors

FN combination function key:


Multimedia buttons				Connect switch	
FN+F1	According to the desktop	FN+F7	In a song	FN+Q	android
FN+F2	Display background operation	FN+F8	The next song	FN+W	Window
FN+F3	Load screen	FN+F9	Play/Pause	FN+E	Apple IOS
FN+F4	search	FN+F10	mute		
FN+F5	The calculator	FN+F11	Reduce the volume		
FN+F6	Lock screen	FN+F12	Increase the volume		
FN+ "ESC"	Switch the keyboard	FN+ "P"	Kao full screen		

FN+ arrow on page, next page, "HOME" key and "END" key and other functions

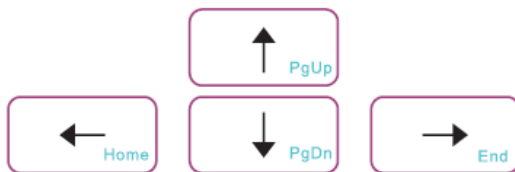

Troubleshooting:

1. When the keyboard can't be searched , try Bluetooth on the switchdevice to search again
2. When the keyboard is turned on and there is no indicator light, try tocharge the keyboard
- 3.After connecting other devices, you need to delete the old records beforeconnecting back to the original devices
- 4.When the pairing fails, the failed pairing record needs to be deleted andthe second pairing is performed



Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.