



Bluetooth Speaker



Model NO.: ASIMOM Rhyme I
User Manual

Welcome

Thank you for purchasing ASIMOM Rhyme I Bluetooth speaker. We advise you to read the instruction thoroughly and keep it for future reference.


Package Contents

ASIMOM Rhyme I X1
USB charge cable X1
User manual X1

Product Specifications

Model name: ASIMOM Rhyme I
Input: DC 5V 1A
Battery: Li-ion 3.7V, 2200mAh
Signal to noise ratio: ≥70db
Unit dimension: 100 X 100 X 108MM
Net weight: 340 g
Charge time: 4 hours
Play time: up to 15 hours(play at 50% of the volume)
Warranty: 18-month limited

Product Overview

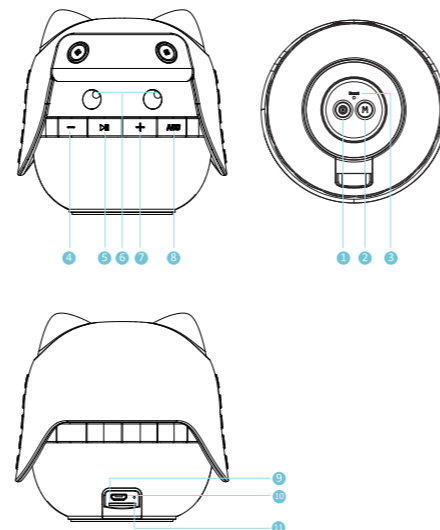


Buttons and Controls

NO.	Buttons	You want to	How to
1	ⓘ	Turn on / off	Press and Hold
2	M	Switch mode	Press
3	Reset	Reset the speaker	Use a needle to poke
4	-	Decrease volume	Press
5	⏮	Go to previous track	Press and Hold
6	⏸	Play / Pause	Press
7	⏭	Disconnect the Bluetooth device	Press and Hold
8	🔊	Please refer to the following part of "indicator"	
9	+	Increase volume	Press
10	➡	Skip to next track	Press and Hold
11	ADD	Enter into TWS mode	Press and Hold
12	SD Card Slot	Play music via Micro SD card	Insert a Micro SD card
13	🔌	Charge the speaker	Plug power in to charge
14	🔴🟢	Please refer to the following part of "indicator"	

LED Indicators

Indicator view	Indicator state	System state
🟡	Flashing blue rapidly	Waiting for Bluetooth connection
	Flashing blue intermittently	Bluetooth connection status
	Flashing blue and green alternately and rapidly	Waiting for stereo pairing
🟢	Solid green	Playing music via a Micro SD card
	Solid red	Charging
🟢	Solid green	Fully charged

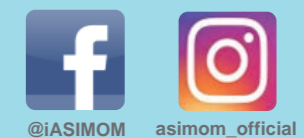

asimom
Asimom Technology Co.,Ltd.
E-mail address : support_us@iasimom.com
Website : www.iasimom.com
Follow us on Facebook:
https://www.facebook.com/Asimom/
Made in China

How to Use Your ASIMOM Rhyme I

Charge the speaker

The ASIMOM Rhyme I comes with full charge, but you'd better recharge it before the first use in case of low battery.

Turn on the speaker

There comes an electronic prompt tone when you turn on the speaker.

Connect your Bluetooth-enabled device

Enable the Bluetooth feature on your smart device. Search and select "ASIMOM Rhyme I" on the Bluetooth list. Once connected, you can see the connection status on your device.

Have Problems of Connecting?

1. Make sure that your Bluetooth device is within 10 meters of the speaker.
2. Press and hold ⓘ to disconnect the previous Bluetooth device.
3. Clear your Bluetooth pair list on your Bluetooth device and try the pair steps again.
4. If you still have problems, please contact ASIMOM customer service: support_us@iasimom.com for help.

Play Music with a Micro SD Card

Card capacity : It should be 32G or below. If your Micro SD card is larger than 32G, please format it to FAT32 or FAT.

Support files : MP3, WAV

Play in order : Music plays in the download / copy order.

Set Up True Wireless Stereo Pairing

Steps:

1. Turn on the two ASIMOM Rhyme I Bluetooth speakers.
2. Choose one speaker as the main speaker. Press and hold the "ADD" button for 3 seconds. You can see the LED indicator of the main speaker flash blue and green alternately and rapidly.
3. Make sure the second speaker is not connecting with any Bluetooth device. Then the second speaker will automatically pair with the main speaker.
4. When the two speakers succeed stereo pairing, you will hear the electronic prompt tone. The LED indicator of the main speaker is blue breath light, and the secondary speaker is a solid blue light.
5. If one or both speakers are turned off without disconnection from TWS mode, the speaker will automatically pair when turned back on.
6. To disconnect the pairing, please press the 'Add' button of the main speaker for 3 seconds. The pairing will be automatically disconnected.

Notice:

1. The secondary speaker would reconnect with the last device if they used to be connected. Press and hold ⓘ of the second speaker to disconnect from the device. Then the second speaker starts to automatically pair function.
2. TWS mode cannot be activated through micro SD card mode.

Trouble Shooting

Problems	Solutions
No power	Battery may be in protection mode or drained. Plug power in and charge the speaker.
Low battery prompt tone	Please recharge the speaker.
Battery can not charge	<ul style="list-style-type: none"> • Check if the USB cable can be used to charge other devices. • Check whether the speaker can be charged by other good quality charging cables. • Be sure to use the original charging cable or a high-quality charging cable.
Speaker cannot pair with the Bluetooth device	<ul style="list-style-type: none"> • Turn off the Bluetooth feature and turn on again from your Bluetooth device. Remove the speaker from the device's Bluetooth list and connect it again. • Press and hold ⓘ of the speaker to cancel its Bluetooth memory. • Check if the speaker can connect different Bluetooth devices.
No sound	<ul style="list-style-type: none"> • Please select "ASIMOM Rhyme I" as the default playback device. • Increase the volume on your speaker, and your Bluetooth device. • Make sure the sound prompts are on. • Play different music source. • Try to pair another Bluetooth device. • If two devices are connected, pause your other device.

Two Rhyme I speakers cannot get stereo pair

- Make sure two speakers are turned on, and both are not in Micro SD card mode.
- Press and hold ⓘ to disconnect both speakers from Bluetooth devices.
- Try pairing steps as manually again.

Poor sound quality /buzzing sound

- Try to play different music source.
- Check the device's audio settings.
- Charge the speaker until it is fully charged.
- Increase the volume.
- Try to pair another Bluetooth device.

Laptop prompts to install driver

This driver is not for "ASIMOM Rhyme I" but for your laptop Bluetooth function, please contact customer service of the laptop or Windows for help.

Cannot turn off the speaker

Use a needle to poke the " Reset" in the reset port.

Auto power off

Contact ASIMOM customer service at support_us@iasimom.com to disable auto power off by firmware upgrade.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warnings

- Do NOT drop, hit or shake the device.
- Do NOT place heavy objects on the top of the device.
- Do NOT store the device in a place with dust or high humidity.
- Do NOT disassemble, repair or modify the device by yourself.
- Do NOT use when it is near microwave ovens or wireless LAN products.
- Do NOT use the cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the device to excessive heat or direct sunlight for long periods of time.
- Use the supplied charge cable or a cable from qualified manufacturers to charge the device.