



**Color Changing Light-Up
Ice Bucket
Wireless Speaker**
IBS-2/1281



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
& RETAIN FOR FUTURE USE**

Getting Started

Remove the speaker from the box. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

Color Changing Light-Up Ice Bucket Wireless Speaker
USB charging cable
Instruction manual


Features

1. Color Changing Ice Bucket with Bluetooth Speaker
2. Multi-colored lights
3. Built-in Bluetooth Speaker
4. Connect and stream wireless music
5. Built-in rechargeable battery
6. USB recharge cable include

IMPORTANT SAFETY INFORMATION

1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to the power supply.
3. Do not use if unit has been dropped or damaged in any way.
4. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
5. Place unit on sound, even surface, free of vibrations and away from sources of heat.
6. Do not put objects into openings.
7. Keep free of dust, lint, hair etc.
8. Do not use this unit for anything other than its intended use.
9. Keep this product out of reach of children.
10. This product is not a toy.
11. Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of Parts:

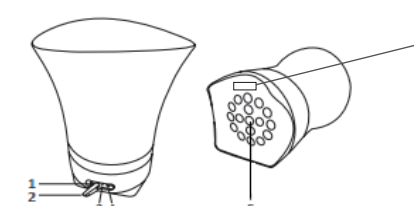

S.No.	Description.
1	Power / Led Light / Play / Pause button
2	Rubber Cover
3	LED indicator
4	Charging Port
5	Speaker
6	Rating Label

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before its first use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED glows indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes 3-5 hours to fully charge the battery.

Turn On/Off the Speaker

Press and hold the Power button for 2 seconds to turn on the speaker with color changing LED lights, you would hear an indication tone (and Blue LED indicator will blink). Your speaker is now ON and is entering "pairing" mode.

Press and hold the Power button for 2 seconds to turn off the speaker.

Turn the speaker to Bluetooth pairing mode -

1. Press and hold the Power button for 2 seconds to turn on the speaker with color changing LED lights, you would hear an indication tone (and Blue LED indicator will blink).
2. Your speaker is now ON and is entering "pairing" mode.
(Note: Speaker automatically pairs with the previously paired devices)

Pairing your device with Bluetooth Speaker –

Your **Bluetooth Speaker** can wirelessly stream audio from any Bluetooth enabled device within the distance of 26-33 Feet. Simply follow the below steps.

1. Press and hold the Power button for 2 seconds to turn on the speaker with color changing LED lights, you would hear an indication tone (and Blue LED indicator will blink).
2. Your speaker is now ON and is entering "pairing" mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is "SL ICE BUCKET", pair it with this device.
6. If required, enter the password '0000' to confirm to finalize pairing.
7. Once paired successfully, you would hear another indication tone (and Blue LED indicator will stay on).
8. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through bluetooth speaker.

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the Play / Pause button to pause the music
Play	Pause	Short press the Play / Pause button to resume the music

Color changing LED lights (LEDs are not replaceable)

1. Turn on the speaker.
2. Short press the LED Light button twice to different light modes. The light modes include: Dynamic LED Light with playing music -> Fast color changing -> Slow color changing -> Blue -> Red -> Green -> Purple -> Cyan -> Yellow -> White -> off.

Tips!! When the unit is not in use, turn OFF the device to save the battery power.

Specification

Bluetooth version : 5.0
Speaker : 5 Watts
Unit Size : 9.72"Lx9.13"Wx11.50"H
Unit Weight : ~27 oz
Play time : 4 hours
Charge Voltage : DCSV (USB)1A 5W
Fully charging time : 3-5 hours
Bluetooth Range : 26-33 Feet
Built-in Rechargeable Battery : 3.7V / 1500mAh
(Note: Battery life & charging time may vary, based on usage & types of devices used.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.

- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. The device must not be co-located or operating in conjunction with any other antenna or transmitter.

"FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons."

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

CAUTION: Risk of explosion if the battery is replaced by an incorrect type; Replacement of a battery with an incorrect type that can defeat a safeguard; Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

⎓ The symbol indicates DC voltage.

WARNING: To avoid risk of fire, please just connect the product to a power supply of which output complies with less than 15W.