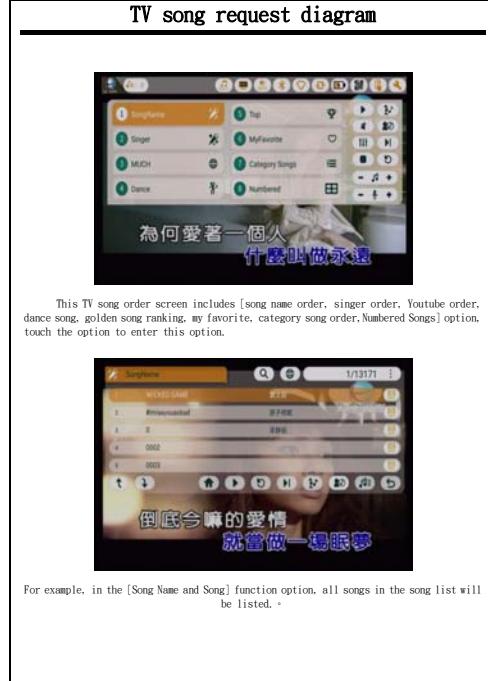


Operation guide



This TV song order screen includes [song name order, singer order, Youtube order, dance song, golden song ranking, my favorite, category song order, Numbered Songs] option, touch the option to enter this option.

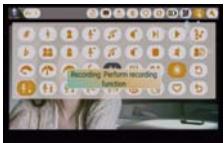


For example, in the [Song Name and Song] function option, all songs in the song list will be listed. *

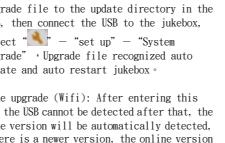
Instructions for use before operation	
1. Instructions for use before operation	
1-1 Product function introduction	3. heat source: Whether this product is in working condition or not, it should be placed in a well-ventilated place, and please keep away from other heating equipment or environments, such as heaters, electric heating equipment, gas stoves, etc., to avoid this product from not working properly, thus causing this product to be unrecoverable of destruction.
4. Moisture and dampness: Whether this product is in working condition or not, please keep the environment dry and avoid using this product in an excessively humid environment, such as a wet basement, beside a swimming pool, etc.	5. Intrusion of foreign objects: Users can remove the screws at the bottom of the machine to add new hard disks or dispose of old hard disks; other parts have no manually added or changed items for users to disassemble; so do not disassemble the casing of this product at will to avoid foreign objects intrusion, damage to product protection services and electric shock hazards.
6. Load-bearing overload: Do not place other heavy objects on this product or subject this product to heavy blows and squeezing, so as to avoid this product not working properly.	7. Lightning strike prevention: If you do not use this product for a long time, or if the weather is expected to change, there will be a risk of lightning strikes. It is recommended to remove the plug of this product, so as to prevent this product from being damaged by lightning strikes.
8. Maintenance: If the product does not work properly, do not disassemble the casing to try to repair it. Please contact the local dealer's repair station and send it for repair and maintenance through normal pipelines.	9. Maintenance: If the product does not work properly, do not disassemble the casing to try to repair it. Please contact the local dealer's repair station and send it for repair and maintenance through normal pipelines.
10. Application: It is not only a multimedia player but also a family entertainment center, which is a revolutionary breakthrough in singing Android dual-system intelligent integrated entertainment diversification.	11. Note: The equipment should be connected to the mains outlet socket with protective earth connection and the power plug and appliance coupler should be used as disconnecting device, and the disconnecting device should be easy to operate.
1-2 Factory configuration	
1. 1 host 2. 1 power adapter 3. 1 AC power cord 4. 2 wireless microphones 5. 1 simple manual 6. 1 guarantee card	
1-3 Safety Notice	
1. Read the instruction manual carefully: Please read this instruction manual carefully before use, and use the product in accordance with its operation method. 2. Power supply: Please use the power supply of the specifications stated in this operation guide to avoid irreversible damage to the product: Too many electrical devices are used in one row, which can easily overload the power supply and cause a fire. If you are not sure about the specifications of the power supply, please consult the power company or local distributors of this product.	

Microphone EQ, sound effects	
	1. There are [preset, traditional, rock, jazz, classical, custom] sound effects in the sound quality adjustment, which is convenient for customers to choose directly. 2. [Custom] Sound effect function: Customers can adjust their own music sound effects to sing.
	1. There are [Elementary, Amateur, Superstar, Broadcast, Custom] settings in the MIC setting, which is convenient for customers to choose directly. 2. There are a total of 5 adjustment function Bars, namely [bass, mid-bass, mid-tone, mid-treble, treble], which are selected by customers. Use a microphone suitable for your singing, and adjust different low, medium and high pitches to sound.

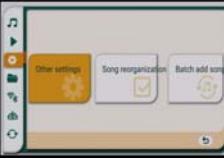
1-4. Front and rear panel configuration instructions:	2. Illustration of rear panel configuration:
1. Front panel configuration illustration diagram:	
1. Speaker: The sound output position. 2. Remote control reception: Receive remote control signals. 3. Power switch: ON [press to turn on for 1 second], OFF [press to turn off for 2 seconds]. 4. 10.1-inch touch screen: LCD screen and touch panel.	
2. Illustration of rear panel configuration:	
1. MIC jack: Wired microphone insertion hole. 2. AIN: External sound input hole. 3. Audio OUT: R (right channel), L (left channel) signal output. 4. HDMI: transmits digital video signals. 5. USB: Supports pen drive devices. 6. LAN: wired network interface. 7. SD: Micro SD card slot. 8. FAN: Internal hot air extraction. 9. Charge: Charging status indicator, charging (red), charging completed (green). 10. DC+12V: DC power input (+12V/4A). 11. HDD: Place a 2.5" USB3.0 hard drive. 12. BATTERY: Place the lithium battery.	
2 Song order description	
2-1 How to order songs	2-2 Song search instructions
Click to order the songs on demand by song title, singer, YouTube, dance song, golden song ranking, favorite, category song and number order.	Song name and song: You can order songs from the song name, and play songs on demand.
top left You can view the currently on-demand songs in the list, and perform operations such as "priority" and "deletion".	Singer On-demand: You can search for the singer's on-demand song from the Singer on demand.
Youtube song request: Enter the singer or song name, you can order the song on YouTube from it.	Dance music: Divided into "Rumba, Cha Cha, Prussia, Tango", etc., enter the options to play songs on demand.
Dance music: Divided into "Rumba, Cha Cha, Prussia, Tango", etc., enter the options to play songs on demand.	Golden Song Ranking: 200 songs that have been on-demand.
Favorites: For example [Note 1] After adding a song to my favorites, enter my favorites, and then enter my favorite code to play the favorite songs.	Favorites: Tap and hold the song for 2 seconds, click on the priority to insert the song.
Sorting songs on demand: Divided into "recorded songs, selected songs, popular duet", etc., enter the options to order songs.	Insertion: Tap and hold the song for 2 seconds, click on the priority to insert the song.
Song on demand: Enter the song number to order the song.	Add the song to the public broadcast: tap and hold the song for 2 seconds, click the first public broadcast to add the song to the public broadcast.
Favorites: Tap and hold the song for 2 seconds, tap Favorites, and then enter the code of my favorites to add the song to my favorites. [Note 1]	Favorites: Tap and hold the song for 2 seconds, tap Favorites, and then enter the code of my favorites to add the song to my favorites. [Note 1]
3 Android	
3-1 Android	4-1 USB add song
Android: Click on the top right Then click "Android" to use the APP.	USB Add Songs: Store songs or video files in the USB, insert the USB into the USB socket on the back panel of the jukebox, and then click on the upper right then click on the USB icon, and click the down arrow icon, and then click the circle icon at the bottom left, you can add the song to the hard disk, and you can enter the number in the song number, ready to play.
Not only a multimedia player, but also a family entertainment center, the intelligent integration of Android dual systems.	Supported formats: mkv, mpg, dat, vob, wmv, avi.

4-2 Recording
Users can transfer the songs they want to store to USB through the USB drive by recording, which is convenient for future enjoyment.
1. To play a song, click "Record" then click "Record" to record.
2. click "Record" then click the first option on the left, then click the folder icon on the left, then click "recording", and then click the fifth icon below, you can transfer the recording file to USB, and you can also listen to it, etc.
 

4-3 Collect
You can use this feature to collect your favorite songs for later on-demand playback.
Operation: Click the song title for 2 seconds in the song title, singer and other playlists, then click Favorites, and then enter the code of my favorites (e.g.: 001) to save to my favorites.
View: Click "My Favorites" to enter the My Favorite Code (e.g.: 001) to enter the My Favorites list for on-demand or delete or add to the public broadcast.
 

5 System Upgrade
System upgrade, fix bugs in the previous version, increase system stability, experience the latest functions, etc.
Operation: Click the song title for 2 seconds in the song title, singer and other playlists, then click Favorites, and then enter the code of my favorites (e.g.: 001) to save to my favorites.
View: Click "My Favorites" to enter the My Favorite Code (e.g.: 001) to enter the My Favorites list for on-demand or delete or add to the public broadcast.
 

5-1 System Upgrade
System upgrade, fix bugs in the previous version, increase system stability, experience the latest functions, etc.

5-2 system setting


Sound settings

1. Local upgrade (USB flash drive): Copy the upgrade file to the update directory on the USB, then connect the USB to the jukebox, select "—" — "set up" — "System Upgrade" · Upgrade file recognized auto update and auto restart jukebox ·

Microphone settings:
Auto pick-up: After this setting is enabled, when using the microphone to sing.

The original voice will be automatically muted
Volume Control: Microphone volume control switch

Anti-wheezing switch: when it is turned on, it can suppress Xiao' cry and protect the horn

Mic total volume: adjust the total microphone volume

Wireless, wired microphone volume: adjust the microphone volume

Wireless microphone CHA, CHB: frequency band pairing

Other settings:

1. Dual-screen display settings selection
2. HDMI sound output ON/OFF selection
3. Delete song function, save HDD space
4. The original film director is preset to the right channel
5. Device Inquiry:
Model, software version, total number of songs, machine number, PIC version
6. System version ... etc. Audio IN:

- a. Volume adjustment of external sounds
- b. Microphone volume adjustment
7. Reset Android APP: Reset the APP inside Android
8. Display mode: This is for professional setting, general consumption cannot use Song Library Reorganization: Organize HDD song database

Add songs in batches: for placing the original movie songs in the USB and adding songs in batches ·

Folder options:
Public broadcast: You can sort the public broadcast order and delete the public broadcast.

Recording: You can add, delete, and transfer the recording file to USB.

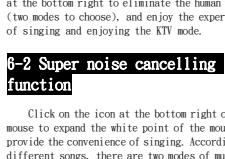
【network settings】:

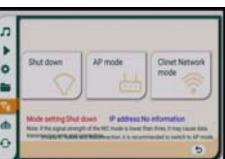
1. The AP mode is: the mobile phone or tablet is directly connected to the built-in wireless network card.
2. The network card mode is: the built-in wireless network card is set to connect to the same wireless base station signal as the mobile phone or tablet.

【Bluetooth settings】:

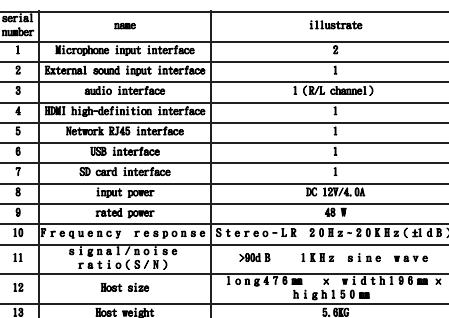
1. Off: Turn off the Bluetooth mode.
2. Sending mode: It can be paired with a Bluetooth device (such as a Bluetooth speaker, Bluetooth headset), and the device can play the current sound of the jukebox
3. Receive mode: It can be paired with a mobile phone and tablet, and the sound can be played from the jukebox.

System Restore Options:
"Sound settings, other settings, network and bluetooth settings can be set" to restore the initial value.

6 Youtube and super noise cancelling
6-1 Youtube Function
Open the corresponding Youtube in Android, select the song to play, then click the mouse in the lower right corner to expand, click the icon at the bottom right to eliminate the human voice (two modes to choose), and enjoy the experience of singing and enjoying the KTV mode.
 
6-2 Super noise cancelling function

7 network illustrate
This My Show T multimedia player has a built-in WiFi network card and wired LAN interface. Users can connect to the available WiFi or wired LAN interface to connect to the Internet through the built-in WiFi network card.
7-1 How to connect to WiFi

Click the WiFi icon of the interface tool, and the WiFi list will pop up to search for surrounding signals. Select the WiFi name you are currently using — enter the WiFi password -- the connection is successful.
7-2 Connect to wired network
Connect the network cable connected to the Internet to the LAN interface of the jukebox and start the jukebox to take effect.

8 Mobile phone song instructions
8-1 Router and multimedia player connection
There are two ways to connect the router and the multimedia player: wired connection and wireless connection.
A. Wired network connection settings The connection method of the multimedia player and the router: a standard network cable is required, and the LAN port of the multimedia player is connected to the LAN port of the router. Any port on the router LAN can be used.
B. Wireless network connection settings Click the WiFi icon to pop up the WiFi list to search for surrounding signals, select the WiFi name of the wireless router you are currently using, and enter the WiFi password to connect successfully.
C. Web (web page) song request Connection method by scanning the QR code: Make sure that the mobile phone/tablet and the multimedia player are connected to the Internet normally, open the mobile phone Web (web page) to order songs and scan the QR code function, scan the QR code in the QR code icon displayed in the upper right corner of the jukebox. Connect to realize the song ordering function.

9 wireless microphone
Instructions:
1. Power on: Press the function key for 1 second (press down in the middle), and the display window lights up to power on.
2. Power off: Press the function key for 1 second (press down in the middle), the display window will turn off and the power will be turned off.
3. Volume adjustment (music): the function key increases the volume up and down the volume decreases. (Host music volume adjustment)
4. Volume adjustment (microphone): the function key increases the volume to the right and decreases the volume to the left. (Host microphone volume adjustment)
5. Microphone mode adjustment: Short press the function key (middle) to switch the mode. (This function is valid only when the host side setting is enabled)
Switching order: Beginner professional superstar broadcast custom Elementary (cycle).
6. Power adjustment: Short press the HI / LO button (inside the battery tube) to switch the transmit power.
7. Channel setting: long press the HI / LO button (inside the battery tube) ≥ 3 seconds, the display window will flash, that is to enter the channel setting mode.


Specifications		
serial number		
1	Microphone input interface	2
2	External sound input interface	1
3	audio interface	1 (R/L channel)
4	HDMI high-definition interface	1
5	Network RJ45 interface	1
6	USB interface	1
7	SD card interface	1
8	input power	DC 12V/4.0A
9	rated power	48 W
10	Frequency response	Stereo-LR 20Hz-20KHz (±0dB)
11	signal/noise ratio (S/N)	>80dB 1KHz sine wave
12	Host size	long476mm x width196mm x high150mm
13	Host weight	5.0KG

Easy Troubleshooting		
When a failure occurs, please check the corresponding inspection items and adjustment methods in order to find and solve the problem. If the fault cannot be eliminated after inspection, please ask the dealer's maintenance personnel to deal with it.		
fault phenomenon		
Inspection method		
Adjustment method		
No power after plugging in	◆ Whether the power plug is connected well ◆ Whether the socket has no power ◆ Check whether other electrical appliances work on the plug again	◆ Insert the power plug firmly into the socket ◆ Check the port and connect it correctly
No sound output	◆ Audio cable connection is correct	◆ Check the port and connect it correctly
Irregular sound or poor contact	◆ Whether the HDMI cable is deformed or damaged	◆ Pull out the HDMI cable and connect it again ◆ Replace the HDMI cable
no picture	◆ Whether the plug is in the HDMI input signal port	◆ Press whether the signal source on the TV is HDMI ◆ Check the power supply connected to the TV

Warranty Regulations
Thank you very much for using the My Show T jukebox series. In order to protect your legitimate rights, please read the product instruction manual and this warranty policy carefully before use:
1. When you choose this product, please fill in the warranty card in detail, and send the "User Receipt" to our company, we will log your information into the database, and you will get the following warranty services and our other tracking service.
2. My Show T multimedia player series products provide one-year warranty and after-sales quality assurance service for replacement of defective products within three months.
3. If the product has performance failure, please go to the after-sales service station designated by our company for after-sales processing. If there is no designated after-sales service station, the local dealer is responsible for the warranty service. When submitting for inspection, the sales certificate and the warranty card must be issued at the same time, otherwise, it will be handled as follows.
4. In one of the following cases, it is not within the scope of free warranty, and can be repaired according to customer needs, but the cost of maintenance materials shall be charged:
a. beyond the free warranty period
b. Without "Product Maintenance Card" and valid certificate
c. The content on the "Product Maintenance Card" does not match the actual product identification or is altered
d. Damage caused by not using, maintaining and maintaining in accordance with the requirements of the product instruction manual (especially not to fall and other man-made damage)
e. Dismantling without authorization at the customer service center and (especially appointed) repair station designated by the company, and repairing and causing damage
f. Damage caused by force majeure factors such as lightning, earthquake, fire, flood, etc.
g. The panel is scratched and the appearance is dirty is not covered by the warranty.
5. Product electromagnetic compatibility type label: Excessive use of the LCD screen may damage your eyesight

Solemnly declare**Federal Communications Commission (FCC) Statement**

1. Users please purchase hard disks and obtain songs through legal channels. Also responsible for its content.

2. This machine contains the function of adding songs, users can copy the songs to the hard disk of the machine by themselves after obtaining the songs through legal channels.

3. The company reserves the right to modify the products described in this manual without prior notice. Necessary changes are made at any time for printing errors and program changes and added to the new version of the manual.

4. The company reserves the right to upgrade the software, the final function is subject to the actual situation of the multimedia player, and the company has the final interpretation right.

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1) this device may not cause harmful interference, and
2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.