

# tyler™

CD-6300



Portable CD/BT/FM/USB-MP3 Boombox

**USB-MP3**  
DIGITAL  
PLAYBACK

 **Bluetooth**



The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

**CAUTION**

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user - serviceable parts inside. Referservicing to qualified service personnel.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

**WARNING:**  
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.

THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO COMPLETELY DISCONNECT THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS MUST BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE BOTTOM OF THE UNIT.



**CAUTION**  
DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!

**CAUTION:** GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".

**NOTE:** CAUTION SYMBOLS ARE PRINTED ON BOTTOM OF UNIT.  
PLEASE REFER TO INSTRUCTION MANUAL.

**CAUTION:** INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

**VORSICHT:** UNSICHTBARE LASERSTRAHLUNG TRITT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSEINRICHTUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN!

**VARNING:** OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAD. STRÅLEN ÄR FARLIG.

**ADVARSEL:** USYNLIG LASERSTRÅLING VED ÅBNING. NÄR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION, UNDGÅ UDSÆTTELSE FOR STRÅLING.

 
**ATTENZIONE:** RADIOS LASER INVISIBILE. NON GUARDARE DIRETTAMENTE NELLA SORGENTE DEL LASER.

**ACHTUNG:** LASERLINSE NICHT BERÜHREN UNSICHTBARER LASERSTRAHL.

**AVISO:** A LENTE NUNCA DEVE SER TOCADA.



CLASS 1 LASER PRODUCT  
KLASSE 1 LASER PRODUKT  
CLASS 1 LASER PRODUCT  
CLASS 1 LASER PRODUCT  
CLASS 1 LASER PRODUCT  
CLASS 1 LASER PRODUCT

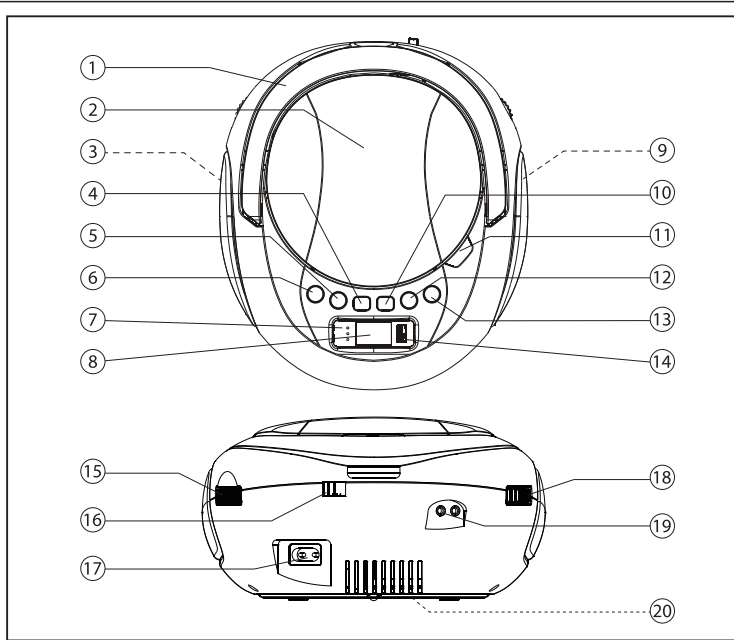

### LOCATION OF CONTROLS

 
 
- |                                 |  |
|---------------------------------|--|
| 1. HANDLE                       | 12. ⏪ PREV / REVIEW KEY                          |
| 2. CD-DOOR                      | 13. ⏩ NEXT / CUE KEY                             |
| 3. SPEAKER (LEFT)               | 14. USB SOCKET                                   |
| 4. [STOP] STOP + BT/USB KEY     | 15. RADIO TUNING KNOB                            |
| 5. [PROG] PROG KEY              | 16. FUNCTION SWITCH<br>(OFF/ CD/AUX/ BT/USB/ FM) |
| 6. [REPEAT] REPEAT KEY          | 17. AC SOCKET                                    |
| 7. POWER LED LIGHT              | 18. VOLUME CONTROL KNOB                          |
| 8. LCD DISPLAY                  | 19. AUX IN JACK & HEADPHONES JACK                |
| 9. SPEAKER (RIGHT)              | 20. BATTERY COMPARTMENT                          |
| 10. [PLAY/PAUSE] PLAY/PAUSE KEY |  |
| 11. CD-DOOR OPENING RECESS      |  |

### POWER SUPPLY

#### BATTERY OPERATION

- OPEN THE BATTERY DOOR AND INSERT 6 PCS "C-CELL" (UM-2/LR14 TYPE) BATTERIES. PLEASE OBSERVE CORRECT BATTERY POLARITIES OR THE SET WILL NOT WORK.
- IMPORTANT: WHEN THE SET IS ONLY USED WITH "AC", OR IS NOT USED FOR 4 WEEKS OR MORE, PLEASE REMOVE THE BATTERIES, TO AVOID DAMAGE TO THE SET FROM LEAKAGE OF BATTERIES.

#### BOTTOM VIEW

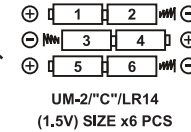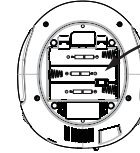

#### AC OPERATION (BUILT-IN AC TRANSFORMER)

- MAKE SURE THE VOLTAGE SETTING OF THE PRODUCT MATCHES YOUR LOCAL HOUSEHOLD VOLTAGE.
- INSERT THE CONNECTOR OF THE AC-CORD INTO THE AC SOCKET AT THE REAR OF THE PRODUCT.
- INSERT THE PLUG OF THE AC-CORD INTO A WALL OUTLET WITH AC-POWER.

#### IMPORTANT!

PLEASE MAKE SURE TO SET THE FUNCTION SWITCH TO "OFF" POSITION WHEN UNIT IS NOT IN USE TO CONSERVE POWER.









#### OPERATION OF RADIO

- SET THE FUNCTION SWITCH TO THE "FM" POSITION
- ROTATE TUNING KNOB TO TUNE-IN THE DESIRED FM STATION.
- ADJUST THE PHYSICAL POSITION AND ORIENTATION OF THE PRODUCT TO OBTAIN THE BEST RECEPTION.
- ADJUST THE VOLUME KNOB TO THE DESIRED LEVEL.
- TO TURN OFF THE RADIO, SLIDE THE FUNCTION SWITCH TO "OFF".







#### INSERTION & REMOVAL OF DISCS

- WHEN OPENING THE CD-DOOR, ALWAYS ENSURE THE DISC IS NOT IN MOTION (NOT SPINNING). ALWAYS PRESS "STOP" KEY TO STOP THE DISC SPINNING FIRST.
- PLACE A CD DISC INTO THE COMPARTMENT WITH THE LABEL-SIDE (PRINTED SIDE) FACING UPWARDS. PRESS DOWN IN THE CENTER PART OF DISC UNTIL THE IT "LOCKS" ONTO THE CENTER SPINDLE.
- GENTLY LOWER THE CD-DOOR DOWNWARDS UNTIL IT IS COMPLETELY SHUT.
- THE CD IS NOW READY TO BE PLAYED.
- TO REMOVE A DISC, LIFT THE CD DOOR UPWARDS AND REMOVE THE DISC BY PLACING ONE FINGER AT THE MIDDLE OF CD (AT CENTER SPINDLE) & THE OTHER FINGER AT THE EDGE OF THE DISC AND THEN GENTLY PULLING UPWARDS.
- IMPORTANT : ALWAYS HOLD A CD BY ITS EDGES. AVOID GETTING ANY FINGER PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC. IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.

### **CD PLAYER OPERATION**

- INSERT A CD DISC AS DESCRIBED.
- SLIDE THE FUNCTION SWITCH TO "CD/AUX", THE DISPLAY SHOWS "CD".
- THE CD WILL SPIN MOMENTARILY AND THEN THE DISPLAY WILL SHOW THE TOTAL NUMBER OF TRACKS (SONGS) ON THE DISC.
- PRESS THE  KEY TO START PLAYBACK.
- AT ANYTIME DURING PLAYBACK, PRESS THE  KEY TO PAUSE OPERATION OF THE UNIT. PRESS THE  KEY TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE  KEY TO STOP PLAYBACK. THIS WILL RESET THE CD-PLAYER TO THE FIRST TRACK.
- AT ANYTIME DURING PLAYBACK, "PRESS AND RELEASE" THE  OR  KEYS TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK, AS DESIRED.
- AT ANYTIME DURING PLAYBACK, "PRESS AND HOLD" THE  OR  KEYS TO FAST-REVERSE (REVIEW) OR FAST-FORWARD (CUE) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.

### **USB MP3 PLAYBACK**

- INSERT A USB PENDRIVE (FLASH MEMORY) INTO THE USB SOCKET.
- SLIDE THE FUNCTION SWITCH TO "BT/USB".
- PRESS THE  KEY FOR 3 SECONDS THEN RELEASE, THE DISPLAY SHOWS "USB" MOMENTARILY AND THEN SHOWS THE TOTAL NUMBER OF TRACKS ON THE USB DRIVE.
- PRESS THE  KEY TO START PLAYING. THE DISPLAY WILL INDICATE THE CURRENT TRACK NUMBER. IF THE MP3 SONGS ARE STORED IN SEVERAL "FOLDERS" ON THE USB DRIVE, THE DISPLAY WILL ALTERNATELY SHOW WHICH FOLDER THE CURRENT SONG IS SAVED IN (INDICATED BY "F" FOLLOWED BY THE FOLDER NUMBER eg. F01).
- AT ANY TIME DURING PLAYBACK, PRESS AND RELEASE  OR  TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK.
- "PRESS AND HOLD" THE  OR  KEYS TO FAST-REVERSE (REVIEW) OR FAST-FORWARD (CUE) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.

### **BLUETOOTH MODE**

- SLIDE THE MODE SWITCH TO THE BT/USB POSITION.
- THE DISPLAY WILL SHOW "bt"
- TURN ON THE BLUETOOTH FUNCTION ON YOUR MOBILE DEVICE, SEARCH AND SELECT "TYLER TAU107"
- WHEN THE MOBILE PHONE IS PAIRED TO THE BOOMBOX, THERE WILL BE AN AUDIO NOTIFICATION TO CONFIRM THE DEVICES ARE CONNECTED.
- ONCE PAIRED, THESE 2 DEVICES WILL AUTOMATICALLY RE-CONNECT IN FUTURE
- WHEN YOU TURN OFF THE BLUETOOTH FUNCTION ON YOUR DEVICE, OR SWITCH THE BOOMBOX TO A DIFFERENT SOURCE (eg. CD or USB) THERE WILL BE AN AUDIO NOTIFICATION TO CONFIRM THE DEVICES ARE DISCONNECTED.


### **IMPORTANT - MP3 FILE NAME FORMAT**

PLEASE TAKE CARE TO USE ONLY REGULAR ENGLISH ALPHABETS (A TO Z) & NUMERALS (0 TO 9) IN THE FILE NAMES OF MP3 SONGS. CHARACTERS SUCH AS " \_ " (UNDERSCORE) & " " (SPACE) MAY RESULT IN THE FILES BEING UNREADABLE OR INCONSISTENTLY UNRECOGNIZABLE BY THE PLAYER.

### **NOTE:**

THIS PRODUCT IS FULLY COMPATIBLE WITH USB 1.1 & 2.0 STANDARDS. HOWEVER, A SMALL PERCENTAGE OF USB FLASH DRIVES MIGHT NOT BE READABLE, DUE TO SOME USB-DRIVES BEING NON-COMPLIANT WITH THE FULL (OFFICIAL) USB 1.1 / 2.0 STANDARDS.

### **REMOVAL OF USB DRIVES**

NEVER REMOVE (OR UNPLUG) USB-DRIVES FROM THE SET DURING PLAYBACK OF MP3 SONGS FROM THESE MEDIA. ALWAYS PRESS  (STOP) FIRST BEFORE REMOVING OR UNPLUGGING USB MEMORY, TO PREVENT DAMAGE TO YOUR SONG FILES OR MEMORY DEVICES.

### **IMPORTANT**

Please do NOT use a USB Extension Cable to connect your USB FLASH DRIVE to the USB PORT of this unit.

Such cables can pick up interference which can corrupt the data flow, preventing normal operation and usage of the USB port.

Always connect your USB Flash Drive DIRECTLY to the USB PORT without any USB extension cables.

### REPEAT PLAYBACK FUNCTION















AT ANYTIME DURING PLAYBACK, PRESS THE "REPEAT" KEY  AS FOLLOWS:

PRESS ONCE: TO REPEAT THE CURRENT TRACK ONLY  
DISPLAY SHOWS A FLASHING "REPEAT" SYMBOL: 

PRESS TWICE: TO REPEAT ALL TRACKS  
DISPLAY SHOWS A SOLID "REPEAT" SYMBOL: 

PRESS THREE TIMES: : TO CANCEL THE REPEAT FUNCTION

 
### PROGRAMMING THE CD-PLAYER

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UPTO 20 TRACKS AS DESIRED.
- ALWAYS PRESS THE STOP  KEY BEFORE STARTING THE PROGRAMMING.
- PRESS  THE KEY, THE DISPLAY WILL SHOW A  SYMBOL (FLASH) AND THE DISPLAY WILL SHOW " P01 ", TO INDICATE THAT THE SET IS NOW IN "PROGRAMMING MODE", AT MEMORY POSITION NO. 1.
- PRESS THE  OR  KEY TO SELECT THE TRACK (SONG) NUMBER YOU WISH TO BE STORED IN THE FIRST MEMORY (PROGRAM) POSITION, AND PRESS THE PROGRAM KEY TO CONFIRM YOUR SELECTION.
- WHEN YOU PRESS  KEY THE DISPLAY WILL ADVANCE TO THE NEXT MEMORY POSITION NUMBER (EG. " P02 " FOR 2ND POSITION).
- REPEAT THE PREVIOUS 2 STEPS, EACH TIME SELECTING ANY SONG NUMBER OF YOUR CHOICE TO BE STORED IN THE SUCCESSIVE MEMORY (PROGRAM) POSITIONS.
- AFTER EACH SONG (TRACK) NUMBER, REMEMBER TO PRESS THE PROGRAM KEY .
- AFTER A MAXIMUM OF SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED ABOVE, PRESS THE PROGRAM KEY. 
- PRESSING  WILL NOW PLAY BACK THE "SAVED SEQUENCE" IN THE PROGRAM MEMORY.
- ALSO, THE  SYMBOL WILL REMAIN "ON" TO INDICATE THAT YOU HAVE SAVED A PROGRAM-MEMORY (SEQUENCE).
- PRESSING  OR  KEY WILL MOVE TO THE NEXT OR PREVIOUS SONG IN THE SAVED SEQUENCE.
- TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS "STOP"  TWICE (  SYMBOL WILL DISAPPEAR) , OR SWITCH "OFF" THE SET.

### USING THE AUDIO LINE IN CONNECTION (AUX-INPUT)

- YOU CAN CONNECT THE AUDIO OUTPUT OF AN EXTERNAL DEVICE SUCH AS A MOBILE PHONE TO THIS UNIT, TO LISTEN TO THE SOUND OF THAT DEVICE THROUGH THE AMPLIFIER AND SPEAKERS OF THIS BOOMBOX.
- TO CONNECT AN EXTERNAL AUDIO DEVICE , PLEASE USE A STANDARD STEREO CABLE (NOT INCLUDED) WITH 3.5MM PLUGS TO CONNECT THE "HEADPHONE-OUT OR AUDIO LINE-OUT" OF THE EXTERNAL DEVICE TO THE AUX-INPUT SOCKET OF THIS UNIT.
- SLIDE THE FUNCTION SWITCH TO "CD/AUX";
- SWITCH ON THE EXTERNAL DEVICE, START MUSIC PLAYBACK AND ADJUST VOLUME CONTROL OF THE EXTERNAL DEVICE AND THE BOOMBOX TO THE DESIRED LEVEL.
- REMEMBER TO SWITCH OFF THE POWER OF THE BOOMBOX WHEN YOU ARE FINISHED USING THE EXTERNAL DEVICE.

### SPECIFICATIONS

POWER SUPPLY :	AC 110V~ 60Hz
	DC 9V  (6 x C-CELL/ UM-2/ LR14 SIZE) (BATTERIES NOT INCLUDED)
POWER CONSUMPTION :	15W
FM FREQUENCY :	FM 87.5 - 108 MHz

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.