



DYNASONIC®

Model 025



USER MANUAL

DESCRIPTION OF BUTTONS:

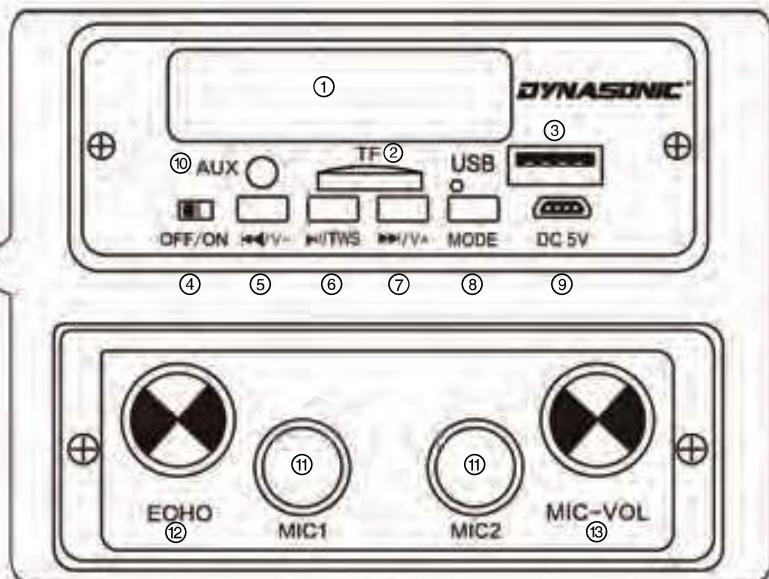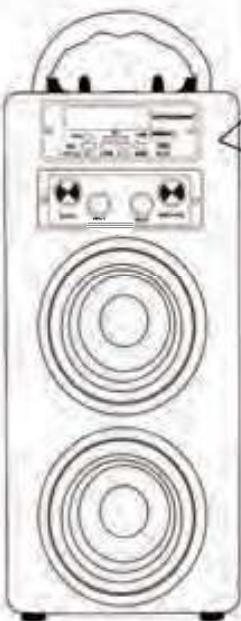

1. LCD screen
2. Slot for TF card
3. USB slot
4. Power ON/OFF switch
5. Rewind/down volume
6. Play/Pause & Search FM stations & TWS fuction Switch
7. Forward/increase volume
8. Press the key to switch between the modes and Press the key for 3 senconds to turn ON or OFF the LED light
9. Load and Current input
10. AUX input
11. Ø6.35 mm microphone input
12. Microphone echo adjustement
13. Microphone volume adjustement

DESCRIPTION OF BUTTONS:

On / OFF: Switching the loudspeaker on and off.

MODE: Button to switch between the different modes.

PLAY / PAUSE: Press once to start or pause the reproduction.

REWIND / V-: Previous song, decrease the volume

FORWARD / V+: Next song and increase the volume

MODES:

You can navigate between the different modes pressing the Mode button.

FM RADIO: To tune the stations, you only have to press the PLAY button and wait for it to save all the stations available on the memory. These can be passed with the FORWARD & REWIND buttons.

AUX IN: Playback through the ports of available input, these are the USB input, the slot for TF card and Jack cable entry.

If you insert a pendrive in the USB port, the playback will start alone.

BLUETOOTH: Play music from your device, Linking the "Dynasonic-025" speaker from your device while this mode is active.

KARAOKE: In any of the ways mentioned before you can include your voice just by plugging the microphone to any of the two microphones inputs and sing on the playback.

TWS FUNCTION (playing 2 speakers together)

- 1. Turn on two devices of the same model and set both to Bluetooth mode. The distance between the two devices should be less than 50cm**
- 2. Press and hold the "TWS" button of either device for 3 seconds and then you will hear a beep, the devices are connected together.**
- 3. Turn on Bluetooth on your device and connect to "Dynasonic-025". Next time, the two speakers will automatically connect to each other.**
- 4. Disconnect TWS. Press and hold the "TWS" button for 3 seconds. When you hear a beep, the devices are disconnected.**

BASIC SPECIFICATIONS:

- Rechargeable 3.7 battery.
- FR: 150-18000Hz.
- SNR > 85dB.
- Voltage DC 5V.
- Output power: 10W (5W+5W).
- RMS 4 ohms.
- 2400 mAh battery capacity.

REMOTE CONTROL KEY FUNCTIONS

1) Power: Press to switch the speaker On/Off

2) Mode: Press for function or mode selection – Radio - SD Card – USB stick -

Audio input - Bluetooth

3)  Mute key: Press to temporarily cut off or mute the sound

4)  Play/Pause the music, or press to automatically search for and store FM Radio stations

5)  Go to the previous file, or previous FM radio station

6)  Go to the next file, or the next FM radio station

7) EQ : Press this to choose from 7 different sound effects
This works for Bluetooth and USB/TF card modes only


8) VOL - : Press to decrease the Volume level

9) VOL + : Press to increase the Volume level

10) RPT : Press for Repeat or Loop playing of song tracks

11) LED: To turn the LED light on or off

12) Number Keys: Press these for Song File selection

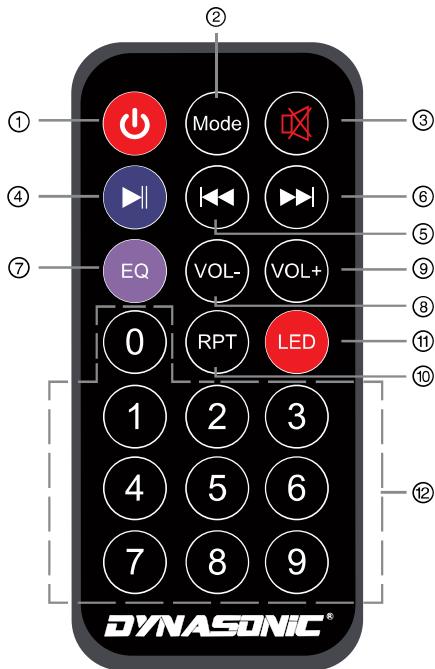


FREQUENT QUESTIONS:

-The speaker has an empty slot in the back

Does that mean it does not have a battery?

No, that slot is to add an extra battery that can extend its duration. The speaker works from the base with a built-in internal battery in its interior. But if you want to increase the playback duration & autonomy of your device you can add a lithium polymer battery BL-5C*.

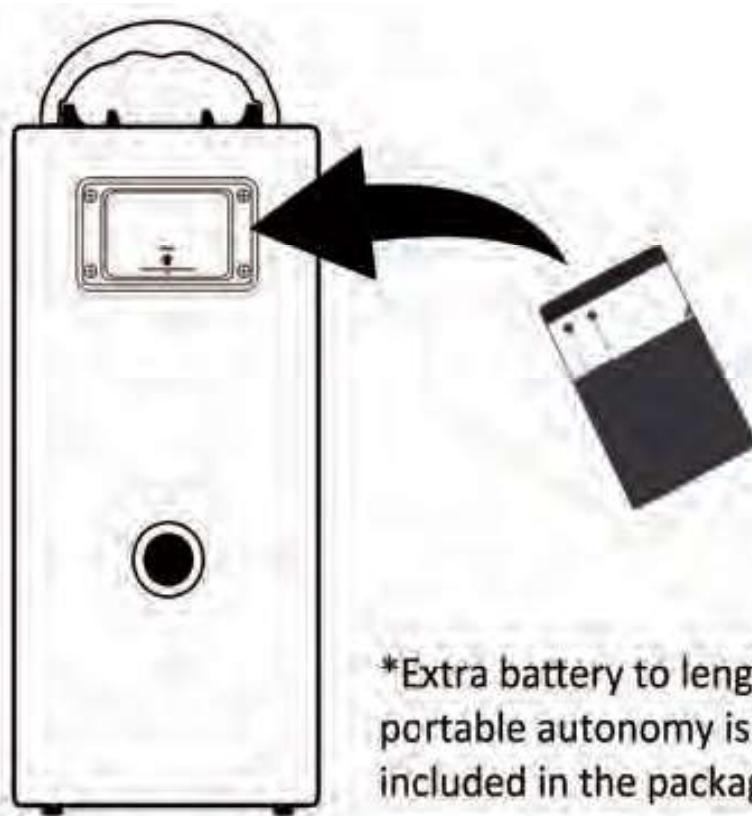

***Extra battery to lengthen portable autonomy is not included in the package.**

FREQUENT QUESTIONS:

-What is the main USB playback format?

The speaker reproduces fundamentally MP3, some file formats can give error.


-How do you charge? Can I turn it on while it is connected to the electrical network?

The speaker can be charged with any usb cable and 5V adapter.

Just plug the cable into an adapter or USB port to charge.

During the charge of the speaker a light will turn off when it be charged. It can be kept switched ON while it is charging. The approximate charge time is in 8 hours.

***Adapter not included**

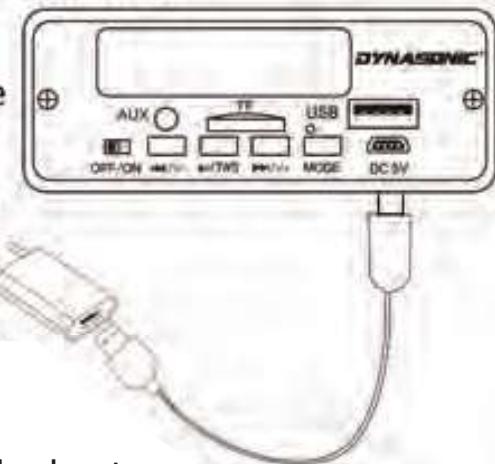

-What does the box include?

Speaker, charging cable, control, manual and microphone.

For any other question or query:

Info@Dynasonic.es

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DYNASONiC[®]

025

Web: www.dynasonic.es
Facebook: [@dynasonic.es](https://www.facebook.com/dynasonic.es)
E-mail: Info@Dynasonic.es