




TOWER FAN

OWNER'S MANUAL

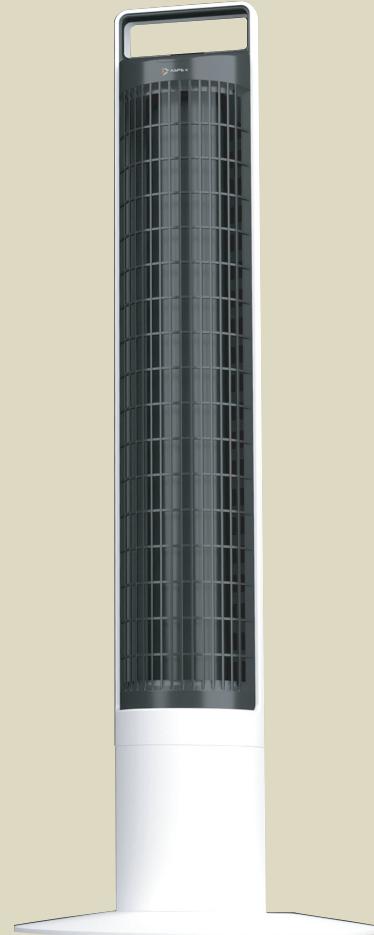



⚠️ WARNING

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these instructions before using this Fan

When using electrical appliances, these instructions and warnings should always be followed to reduce the risk of fire, electrical shock and injury to persons:

- The fan should not be left unattended when plugged into a power supply. The fan must be unplugged before maintenance or when not in use.
- DO NOT leave children unsupervised near the fan to ensure that they do not play with the appliance.
- DO NOT use of attachments not recommended by the manufacturer which may result in fire, electric shock or injury to people.
- DO NOT operate any appliances with a damaged cord or plug to prevent any malfunctions or damage to the fan.
- DO NOT pull or clamp the power cord while moving the fan. Keep the cord away from sharp edges. Do not place the cord near any heated surfaces or areas.
- DO NOT unplug by pulling on the cord. Remove the plug directly.
- Consult a qualified electrician when there is a loose fit between the AC outlet and plug. It may cause overheating of the plug.



⚠️ WARNING

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these instructions before using this Fan

When using electrical appliances, these instructions and warnings should always be followed to reduce the risk of fire, electrical shock and injury to persons:

- DO NOT use wet hands to grasp or hold the plug.
- DO NOT put any objects into the openings of the fan. Do not use the Tower fan if any of the opening is blocked. Reduce any dust, lint, hair and other substances as much as possible.
- Keep your hair, fingers and any part of your body away from openings and moving parts.
- When storing the power cord, gently hold the plug and avoid the plug from swinging when winding it up.
- DO NOT use the product under high heat and open flames.
- If the power cord is damaged, it must be replaced by the manufacturer or after-sales service department.
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities.

⚠️ WARNING

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these instructions before using this Fan

When using electrical appliances, these instructions and warnings should always be followed to reduce the risk of fire, electrical shock and injury to persons:

- Children should be supervised to ensure that they do not play with the appliance.
- Chemical Burn Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- This appliance is intended to be used in household and similar applications such as:
 1. Staff kitchen areas in shops, offices and other working environments;
 2. Farm houses;
 3. By clients in hotels, motels and other residential type environments;
 4. Bed and breakfast type environments.



⚠️ WARNING

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these instructions before using this Fan

When using electrical appliances, these instructions and warnings should always be followed to reduce the risk of fire, electrical shock and injury to persons:

- Keep batteries out of reach of children.
- This product contains a lithium battery in the remote. Due to their small size, lithium batteries can be swallowed by children. Ingesting of these types batteries has been known to cause death.
- Make sure the battery compartment on the remote is securely fastened and closed.
If the battery compartment does not close securely, do not use the product and remove the batteries.
Keep the batteries away from children.
- Dispose any used button cell batteries in a safe manner. Do not leave any used button cell batteries where a child could reach them as they can still be dangerous.

⚠️ WARNING

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these instructions before using this Fan

When using electrical appliances, these instructions and warnings should always be followed to reduce the risk of fire, electrical shock and injury to persons:

- The fan has a safety trigger located near the top of the tower motor. DO NOT press down on this trigger while the fan is plugged in to a power outlet. Doing so will cause the fan motor to rotate which may cause damage or injury.

