




Table of Content

Parts Includes	1
Product Assembly	2
Remote Control Operation	7
Remote Control Battery Replacement	9
Fuse Replacement	10
Cleaning	11
Storage	12
Troubleshooting	13
FCC Statement	15
Warranty	16

Parts Includes

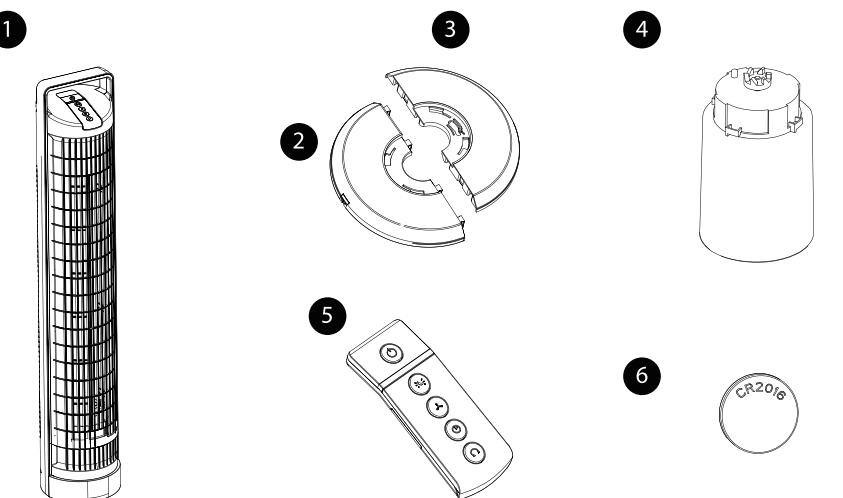

ITEM	PARTS
1	Fan Body
2	Base Back
3	Base Front
4	Tower Motor
5	Remote Control
6	Button Cell Battery (located in the remote control)




Product Assembly


STEP 1:

The base of the tower fan must be in place to use the fan. The base is comprised of two parts. Attach the base together by aligning the open slots from the Base Front to the pegs from the Base Back. Once it is aligned, push down the Base Front onto the Base Back until the clips lock into place.

Base Front

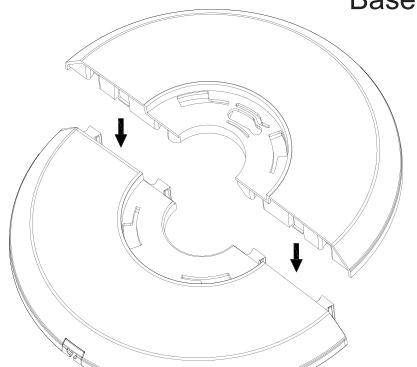

Base Back


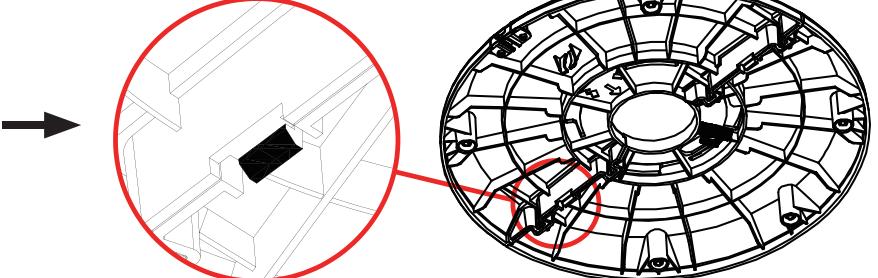


Bottom View

Product Assembly

STEP 2:

Place the Tower Motor onto the base with the cord going through the hole first and aligning the peg with the peg slot. Twist the tower motor clockwise until the peg locks into place.

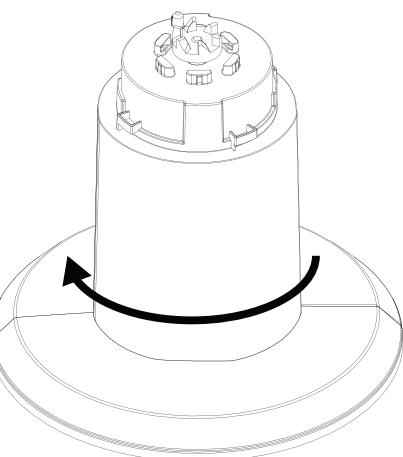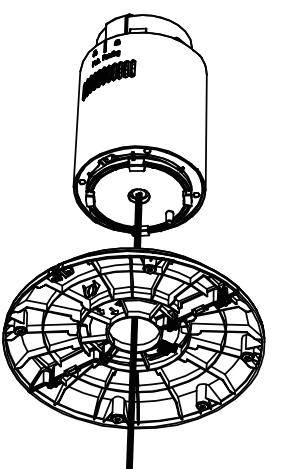




Product Assembly

STEP 3:

Check the bottom of the base and make sure the peg is secured in the hole on the clip.

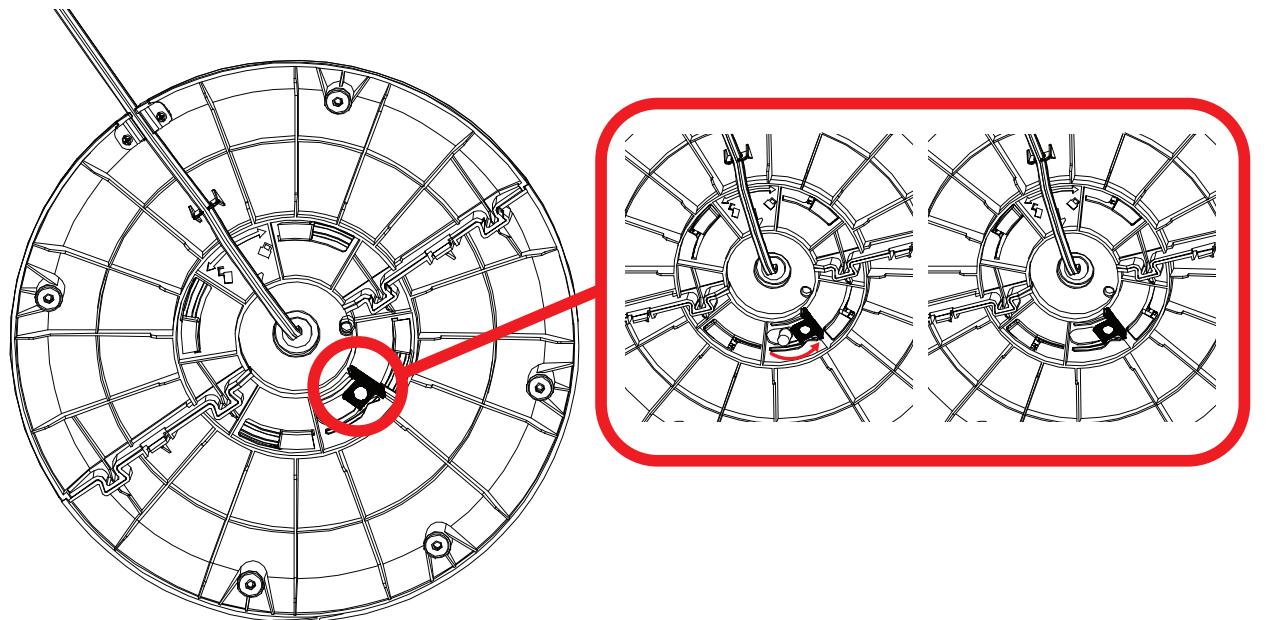


4

Product Assembly

STEP 4:

Take the fan body and place the tower onto the motor. On the back of the fan body, use the line and align it on top of the lock image on the tower motor. Once it is lined up and the fan body slips down into place, use the handle on the top of the fan body and turn it clockwise until it locks.

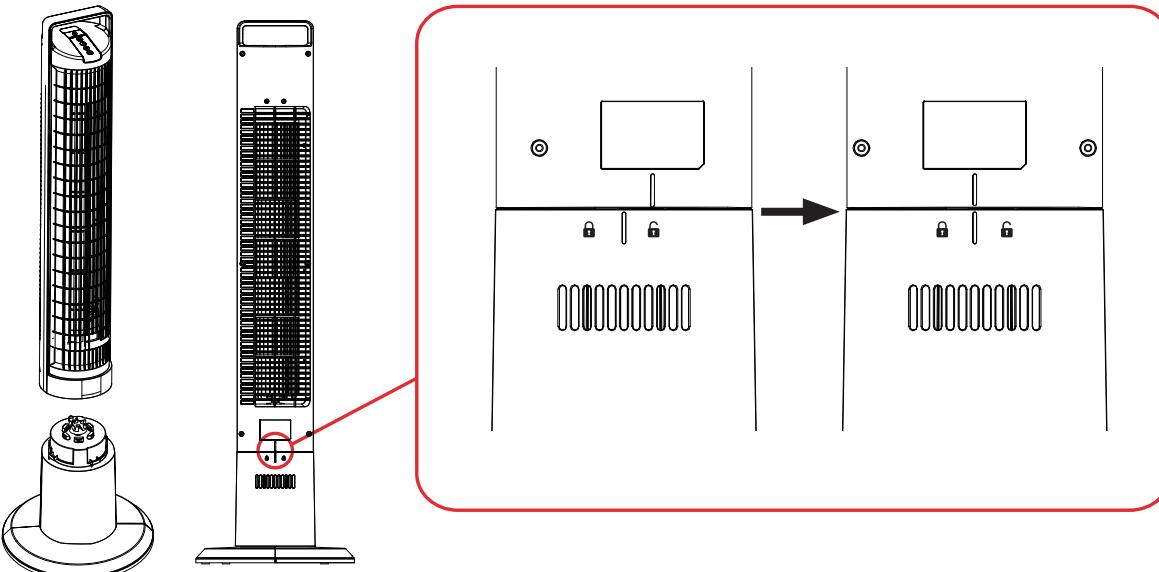


5



Product Assembly

STEP 5:


Plug in the power plug into an outlet. Take out the remote and remove the plastic tab. Your fan is now ready to use.

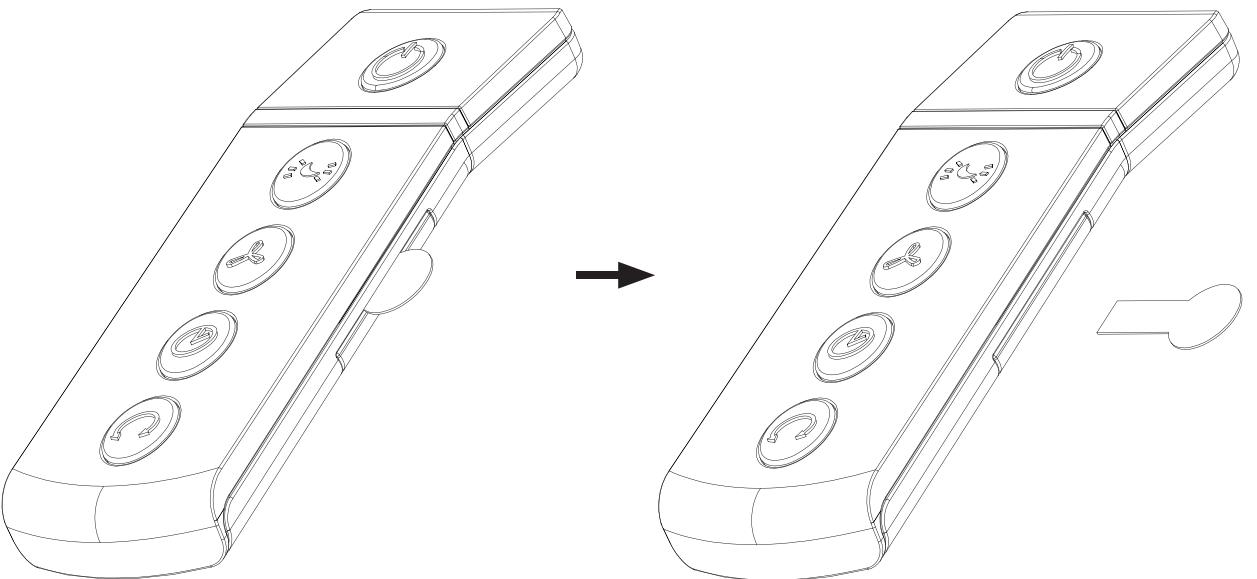

Remote Control Operation

Power

On/Off

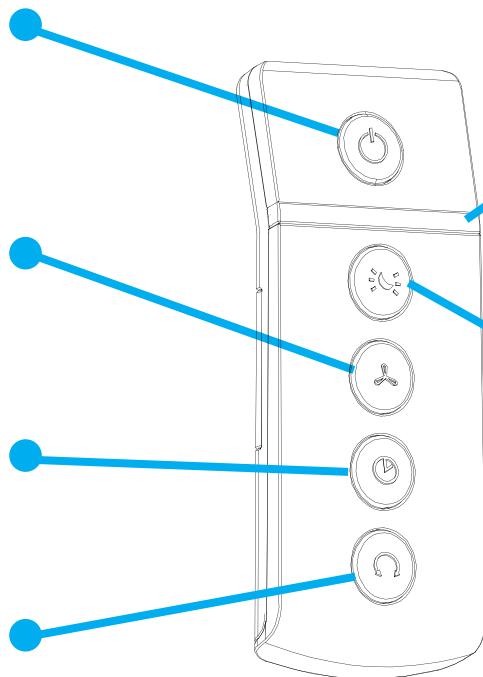

Fan Speed


Low, Med, High

Timer Indicator Light

1 bar = 1 hour
2 bars = 2 hours
3 bars = 4 hours
4 bars = 8 hours

Timer

1 Hour, 2 Hours,
4 Hours, 8 Hours

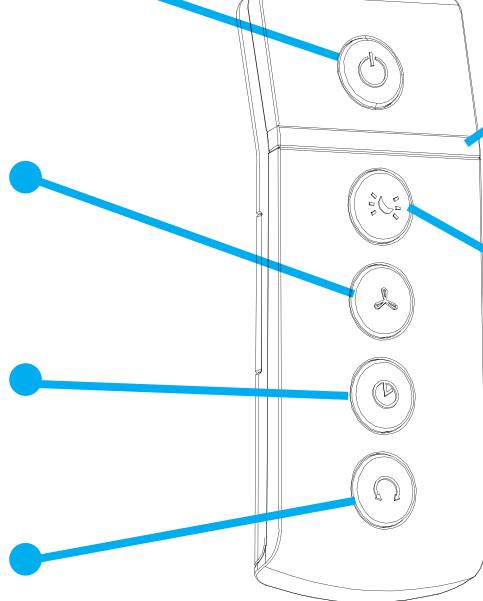

Oscillation

On/Off

Night Light

Colors: White, Blue, Yellow

Note: If a timer is not set after turning on the fan, the fan will turn off after 12 hours for safety and to prevent overheating of the fan.



Remote Control Operation


Your remote should already be pre-paired with the tower fan. If you received a new or replacement remote, you may follow the pairing and unpairing instructions below.

Pairing the Remote

While the fan is plugged in, on the remote press the “Power” and “Oscillation” button at the same time for 3 seconds until you hear a beep from the fan. The pairing process is complete.


Unpairing the Remote

While the fan is plugged in, on the remote press the “Fan Speed” and “Oscillation” button at the same time for 3 seconds until you hear a beep from the fan. The Unpairing process is complete.

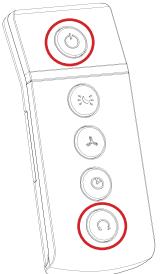

Pairing the Remote

Press and hold 3 seconds

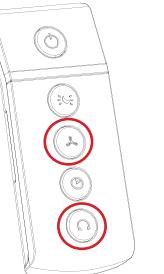

Unpairing the Remote

Press and hold 3 seconds

Remote Control Battery Replacement

For first time operation, please remove the clear plastic tab on the remote control.

To replace the battery

- Pull and slide out the tab on the right side of the remote to remove the battery compartment.
- Replace the battery with a CR2016 Lithium Battery 3V (replacement battery not included).
- Slide the tab back into position until it locks back into the remote.
- The batteries shall be disposed of properly, including keeping them away from children.
- Even used batteries may cause injury.

DO NOT DISPOSE BATTERY IN FIRES.

THIS MAY CAUSE THE BATTERY TO EXPLODE OR LEAK.

