

---

The logo consists of the text "F31" in a bold, black, sans-serif font, centered within a light blue square.

***Android 12 is the Operating System for your Smartphone F31.***

---

## INTRODUCTION

Thanks for choosing **F31** , **Double SIM Android, 4G smart phone based on 1.3GHz Quad Core Processor**. This smartphone is running on **Android 12 OS**. If you'd like your phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions that matter.

## **1.1**     **Safety Precautions**



Please read through the following briefings carefully and act in accordance with these rules, so as to prevent causing any danger or violating any law.

### **SAR Value**

- **W/kg@1g(Head)    W/kg@1g(Body)**
- Use cell phone when the signal strength is good. Keep your calls short or instead use headset or send a text message. This advice applies especially to children, adolescents and pregnant women.
- If you are using a Bluetooth headset device, please make sure it has a low power emitter.

### **ROHS Declaration**

*Declaration of Conformity with the requirements of the e-waste Management Rules, 2011 (adopted by Notification S.O. 1035 (E) of Ministry of Environment and Forests)*

- The Product is in conformity with the requirements of Rule 13 of the e-waste Rules. The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the e-waste Rules:
  - a. Lead (Pb) – not over 0.1% by weight;
  - b. Cadmium (Cd) – not over 0.01% by weight;
  - c. Mercury (Hg) – not over 0.1% by weight;
  - d. Hexavalent chromium (Cr6+) – not over 0.1% by weight;
  - e. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
  - f. Polybrominateddiphenyl ethers (PBDEs) – not over 0.1% by weight.

## **1.2**     **Using your phone safely**



### **On The Road**

Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.



### **Near Sensitive Electronics**

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

---

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.

Your phone may cause interference when used near TVs, radios or automated office equipment.



### **While Flying**

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.



### **In Hospital**

Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



### **At a Petrol Station**

Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.



### **Around Water**

Keep your phone away from water (or any other liquid). It's not a waterproof model.



### **Making Repairs**

Never take your phone apart. Please leave that to the professionals. Unauthorised repairs could break the terms of your warranty.



### **Broken Antenna**

Don't use your phone if the antenna is damaged, as it could cause injury.



### **Around Children**

Keep your mobile out of children's reach. It should never be used as a toy and it might not

---

be good for their health.



### **Original Accessories**

Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.



### **Near Explosives**

Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.



### **Emergency Calls**

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



### **Working Temperature**

The working temperature for the phone is between 0 Degree and 40 Degree Celcius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.



At very high volume, prolonged listening to a mobile phone can damage your hearing.

## 2.1 Your Phone



## 2.2 Description Icons

Keys	Functions
------	-----------

Hang up	<ul style="list-style-type: none"> <li>● Press this button to return home from any application or interface.</li> <li>● When the screen is off, short press it to turn on the screen, short press it to turn off the screen when on the homepage.</li> <li>● You can press it to reject the call or hang up during an incoming call or call.</li> <li>● Long press it to open the phone's menu, then you could choose to restart phone or turn off the phone.</li> </ul>
Menu	<ul style="list-style-type: none"> <li>● In some application interfaces, you can click on it to bring up the application menu.</li> <li>● In the application interface that supports the mouse, you can control whether to use the mouse function by long pressing it, provided that you have enabled the mouse function of the application in Settings-&gt;System-&gt;Mouse control.</li> <li>● In the third-party application interface, and the mouse mode is used, you can switch between the mouse mode or the wheel mode by pressing it.</li> </ul>

Back	<ul style="list-style-type: none"> <li>●Press it to return to the previous interface , or to close dialog box ,options,menu notification panel or the keypad.</li> </ul>
Dial	<ul style="list-style-type: none"> <li>●Press this button to calllog from any application or interface.</li> <li>●After entering the number on the dial pad, click on it to call this number.</li> </ul>
Up	<ul style="list-style-type: none"> <li>●When using mouse mode, you can move the mouse position by short-pressing it or long-pressing it.</li> <li>●When the mouse mode is turned off, you can move the cursor position by short-pressing it or long-pressing it.</li> </ul>
Down	<ul style="list-style-type: none"> <li>●When using mouse mode, you can move the mouse position by short-pressing it or long-pressing it.</li> <li>●When the mouse mode is turned off, you can move the cursor position by short-pressing it or long-pressing it.</li> <li>●When on the homepage, you can bring up the notification bar by long pressing it.</li> </ul>
Left	<ul style="list-style-type: none"> <li>●When using mouse mode, you can move the mouse position by short-pressing it or long-pressing it.</li> </ul>



	<ul style="list-style-type: none"> <li>●When the mouse mode is turned off, you can move the cursor position by short-pressing it or long-pressing it.</li> </ul>
Right	<ul style="list-style-type: none"> <li>●When using mouse mode, you can move the mouse position by short-pressing it or long-pressing it.</li> <li>●When the mouse mode is turned off, you can move the cursor position by short-pressing it or long-pressing it.</li> </ul>
OK	<ul style="list-style-type: none"> <li>●The cursor selects the menu or the mouse selects the menu, you can click ok to confirm. When the confirmation menu is not displayed, you can also click ok to confirm.</li> </ul>
Numeric keyboard (0~9, *, #)	<ul style="list-style-type: none"> <li>●You can enter characters through the numeric keyboard in the editing interface or the dial interface.</li> <li>●You can quickly enter the dial pad through the numeric keyboard on the homepage.</li> <li>●Some characters (for example: 0, *, #) have special usage in some scenes, please continue to check this description for detailed usage.</li> </ul>

Shortcut keys	<ul style="list-style-type: none"> <li>● <b>Calculator key</b> You can directly access the calculator through the calculator buttons</li> <li>● <b>Handfree key</b> Clicking the hands-free button during a call will initiate the call through the speaker</li> <li>● <b>Mute key</b> Clicking the mute button during a call will turn off the mic</li> </ul>
---------------	--

## 2.3 Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged full. It is easy to do & can be done in 3 simple steps below:

1. Connect the charger to your phone, and plug it into a socket.
2. The battery in the corner of the screen will display charging.
3. When fully charged, disconnect the charger from your mobile, and unplug.

## 2.4 Power ON/OFF

Long press the hang up key to power-ON/OFF the phone.

When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

- **Input SIM PIN:** If you've set a PIN for your SIM.

---

### **Note:**

*The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it.*

---

---

## 2.5 Enter Main Menu

After powering on and unlocking the screen, the main menu is displayed by default, and all your apps will be displayed here.

## 2.6 Enter Sub Menu

Once at the main menu, click the icon to select the submenu, press Back Key to return to the previous menu, and press the **Home Screen** to return to the home screen.

## 2.7 Use Notification Panel

As a new notification appears in the notification area, to return to the homepage, long press the down button to view the notifications. If you are using the mouse function, you can move the mouse to the top of the screen and click the status bar to view the notifications.

## 2.8 Adjust the volume

1. We can adjust the volume of each type through Settings -> Sound.
2. In the interface of playing video or playing music, we can use the long press "\*\*\*" key to decrease the media volume, and the long press "#" key to increase the media volume.
3. In the call interface, we can use the long press "\*\*\*" key to lower the call volume, and the long press "#" key to increase the call volume.

## 2.9 Screenshot

Sometimes, we may need to intercept some information on the screen. At this time, we can press the "\*\*\*" key and the "#" key at the same time to achieve.

## 2.10 Input

In the editing interface, you can enter characters by pressing the numeric keyboard.

1. Short press the # key, you can call the special character panel, and you can select special characters to input.
2. Long press # key, you can switch the input method language.

---

3. Long press the \* key ,you can switch the input mode, and switch among "123, abc, Abc, ABC, T12abc, T12Abc, T12ABC, Emoticons".

## **3.1      Main Menu & Its Functions**

Select to enter the main menu.

Allows you to view a list of features available in your phone.

### **1.Phone**

Allow you to make quick outgoing calls.

### **2.Call History**

View your call history

### **3.Contacts**

To see your list of Contacts.Access phonebook through this function.

### **4.Messaging**

Allow you to view messages sent & received as a thread.

### **5.Music**

View the list of songs available in your phone. Your music files are classified according to the following four categories: Artists, albums, songs and play lists. Touch one of these categories; you can view the list inside.

### **6.Browse**

Browse the internet.

### **7.Camera**

Allows you to click pictures& video anytime you want.Camera opens in capture mode. Frame your picture within the screen and hold the phone steady. Touch Camera button to capture.

Click the preview box to browse the picture, share (via a compatible application), edit a picture, or delete a picture

Number key 1: Switch between front and rear cameras

Number key 2: Switch flash light mode

Number key 3: Go to camera settings

### **8.Gallery**

---

Allows you to view photos & videos in folders.

## **9.Settings**

Modify settings under the following:

- Network & internet
- Connected devices
- Battery
- Sound
- Display
- Accessibility
- Security
- Location
- Safety & emergency
- System
- About phone

## **10.Clock**

After entering Clock, move right to set Alarm.

## **11.Calculator**

This function can turn your phone into calculator, it can do some simple calculations.

## **12.SIM Toolkit**

This service is provided by the operator. It provides many types of personalized message services.

## **13.Sound Recorder**

Allows you to record sounds.

## **14.FM Radio**

Can listen to various radio stations.

## **15.Calendar**

View the calendar.

---

## 16.File Manager

You can view your files.

## 3.2 Wi-Fi

F31 supports Wi-Fi which allows you to connect with a Wireless connection.This is useful for surfing internet on phone.

*Enter "Settings" interface & search WIRELESS & NETWORKS. Select the network you want to connect.*

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

### 4 **Taking Care of your Device**

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use indoor chargers.

---

Android is a trademark of Google LLC



---

#### FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Specific Absorption Rate (SAR) information

This device meets the government's requirements for FCC exposure limits set forth for an uncontrolled environment. This device was tested for typical bodyworn operations with the back of the Mobile phone kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 10 mm separation distance between the user's body and the back of the Mobile phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.