

REKDOM

WU550 LABEL PRINTER

USER'S MANUAL



Customer Support:

Email: info@rekdomprinter.com

Phone: 8402007908 (text)

Note: If you don't receive a reply within 24hours, check your spam mailbox.

Keep this user's manual in a safe place for future reference

CONTENT

Safety Precautions.....	1
Introduction.....	2
Chapter 1 Unpacking Your WU550 Wireless Label Printer.....	3
Chapter 2 Connect Power and Load Your Label	6
Chapter 3 Connect to WiFi.....	7
3.1 Method ONE: by using the WiFi password (security key)	7
3.2 Method TWO: by using the WPS button on the router	8
Chapter 4 Installing the Wireless Driver Software	9
4.1 Installing Wireless Driver Software on Windows	9
4.2 Installing Wireless Driver Software on Mac	11
4.3 Installing Wireless Driver Software on Linux	13
4.4 Download and run the "Elabel" App on Android, iPhone, iPad	13
Chapter 5 Set Up Your WU550 Wireless Label Printer.....	14
5.1 Set Up Size or Other Settings on Windows	14
5.2 Set Up Size or Other Settings on Mac.....	15
5.3 Set Up Size or Other Settings on Android, iPhone, iPad	16
Chapter 6 Troubleshooting.....	17
6.1 Having trouble connecting to WiFi	17
6.2 Having trouble installing and printing.....	18
Quick Tips.....	19
Print head/Sensor/Rubber Roller/Paper Guides Cleaning	20
Support&Warranty.....	21

Safety Precautions

Thank you for choosing Rekdom WU550 wireless label printer.

To prevent injuries or equipment damage, carefully read these instructions before using this printer.

1. Safety Warning



Warning: The print head generates heat. DO NOT touch the print head or its components while or after printing has finished.

2. Safety Instructions

- Use only Rekdom or recommended power sources.
- Do not touch the print head or its components while or after printing has finished.
- Do not attempt to disassemble, alter, or apply heat to the product.
- Avoid dropping or subjecting the product to severe impact.
- Do not handle the power cord/power adapter with wet hands.
- Do not let the product contact water or other liquids.
- Do not use or store the product in the following places: direct sunlight, high temperature, high humidity or dust, or strong vibrations.
- Keep out of reach of children.
- Keep the printer in a safe area to avoid tripping over the power cord.

Quick Install Guide

Introduction

REKDOM WU550 wireless label printer is a great choice to have at your office or home desk.

The printer allows you to conveniently connect to WiFi networks and a wireless printer is a much better choice than a hard-wired one because it allows you to place it in any convenient location. It is a wide-format label printer and prints labels up to 4" width including 4"x6"/4"x4"/4"x3"/4"x2"/4"x1"/3"x3"/3"x2"/3"x1"/2.25"x1.25"/2"x1" labels. It delivers 203dpi high resolution for commercial grade use and print speeds up to 150mm/s. It will save you money since it is equipped with advanced thermal technology: no ink or toner required. All you buy is the printer and labels.


REKDOM WU550 wireless label printer works like a regular printer, it will show "WU550 printer" in your computer after installing the wireless driver software. It prints anything you send to it. Just make sure your label page size matches your label paper size. The right equipment for businesses needing a handy, high quality print and economical label printer. Great choice for barcodes, labeling, mailing, filing, shipping and more.

Usage:

- 4x6" Shipping labels
- Amazon FNSKU labels
- Barcode labels
- Address labels/ Postage labels/ Transport labels
- Product labels/ Price labels/ Shelf labels
- Warehouse labels
- Home file labels
- Other multipurpose labels

Chapter 1: Unpacking Your WU550 Wireless Label Printer

1.1 Make sure you have all items listed below:

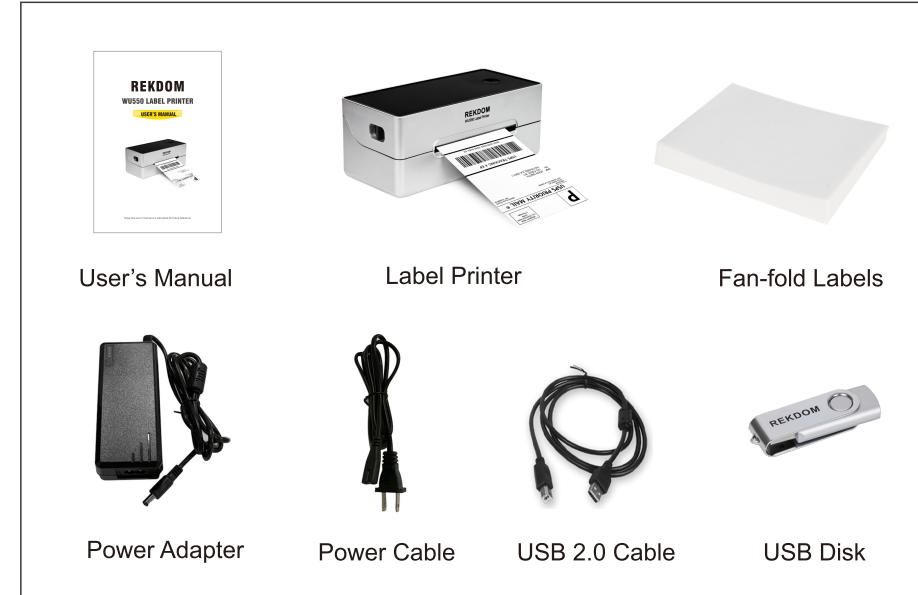

Notes: If any item is missing or damaged, contact customer support. Save the packing materials in case you need to return the printer, thank you.

1.2 Become familiar with WU550 wireless label printer:

Printer's Specification:


Model	WU550
Printing Method	Direct Thermal
Resolution	203dpi
Printing Speed	150mm/second (MAX)
Printing Color	Thermal Technology Printed in black and white
Supported Label Type	Direct Thermal Labels
Supported Label Width	3.8cm (1.5") – 10.4cm (4.1")
Supported Label Height	2.5cm (1") – 25cm (9.84")
Supported Systems	Wireless Printing from: Windows (XP and newer) Mac (10.9 and newer) Linux Android, iPhone, iPad (Connect with "Elabel" APP) USB Printing from: Windows (XP and newer) Mac (10.9 and newer) Linux
Connection	USB and Wi-Fi
Power Adapter	24V/2.5A
Weight	2.6 lbs
Size	220 mm x 105 mm x 92 mm

Printer's Major Components


□ Front View



□ Rear View

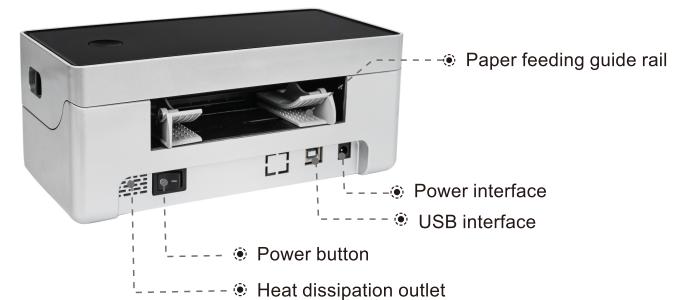

□ Inner View

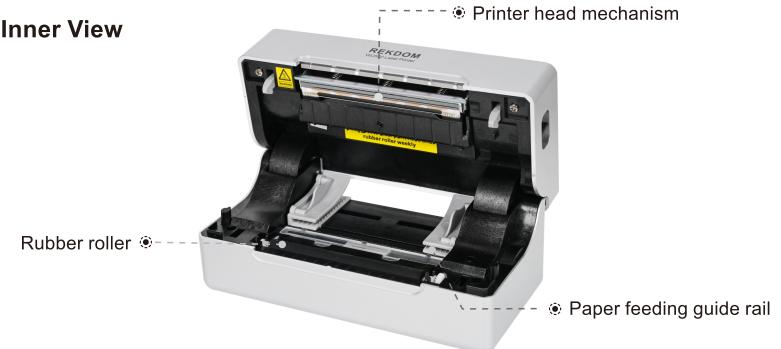

Chapter 2: Connect Power and Load Your Label



2.1 Ensure the printer is OFF.



2.2 Plug the power cord into the power adapter. Plug the power adapter into the power interface on the back of the printer. Plug the other end of the power cord into a power outlet.



2.3 Press release button on both sides to open the cover. Load your labels and ensure the paper guides are flush against the label with no gap. Close the cover and turn power ON (I=ON). The printer will detect the label automatically.

Note: Make sure the labels are properly loaded, with the printing side facing up (towards the ceiling).

Chapter 3: Connect to WiFi


Ensure the printer is ON before connecting to WiFi.

There are two methods to connect WU550 Printer to your WiFi network. We recommend customers use Method ONE to connect to WiFi.


3.1 Method ONE: by using the WiFi password (security key)

Step1: Press and hold the feeder button of the printer until you hear two beeps, then release the button; the button light will begin to flash. (Note: If the light doesn't flash, press the button again)

Step2: Go to your smartphone/tablet's Settings or on your laptop/desktop computer-> go to your Wi-Fi network list. Your device will automatically search the “**FSC-BW236-AP**” network, join the “**FSC-BW236-AP**” network and enter **12345678** as password. (Note: You can use any smart device to configure if it can be connected to WiFi network and has a browser.)

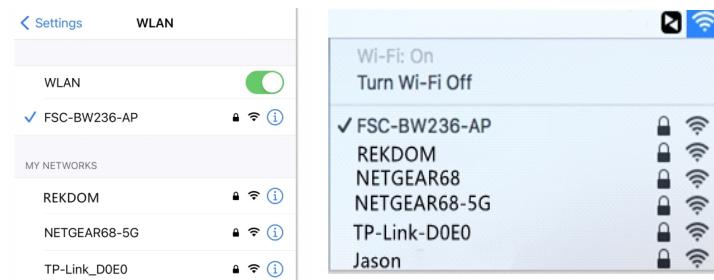

Step3: Open the web browser and type **192.168.1.1** into the web address field, fill in your network name (SSID) and password, then click “Submit”. Wait for the printer to complete the network configuration. If configuration is successful, it will print a [WiFi configure] label usually within 2 minutes.

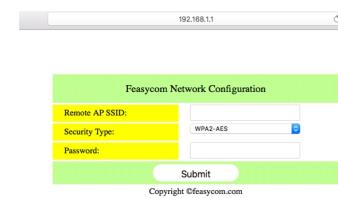

For any issues with configuration, refer to the Page 17 for quick troubleshooting.